HCD-SC5/SC6/SC8

SERVICE MANUAL

Ver 1.0 2003. 09

AEP Model
UK Model
E Model
HCD-SC5/SC6/SC8
Australian Model
HCD-SC6/SC8

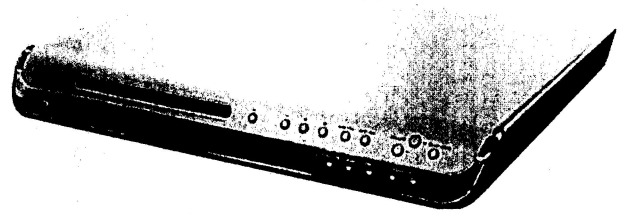

PHOTO: HCD-SC5

HCD-SC5/SC6/SC8 are the amplifier, DVD/ SACD and tuner section in DAV-SC5/SC6/SC8.

Model Name Using Similar Mechanism	NEW
Mechanism Type	CDM80-DVBU24
Optical Pick-up Name	TDP022W

SPECIFICATIONS

Amplifier section

Stereo mode: 90 W + 90 W (4 ohms at 1 kHz, THD 10 %) (HCD-SC5)
100 W + 100 W (4 ohms at 1 kHz, THD 10 %) (HCD-SC6/SC8)

Surround mode: Front: 90 W + 90 W (HCD-SC5)
100 W + 100 W (HCD-SC6/SC8)
Centre*: 90 W (HCD-SC5)
100 W (HCD-SC6/SC8)
Surround*: 90 W + 90W (4 ohms at 1 kHz, THD 10 %) (HCD-SC5)
100 W + 100 W (4 ohms at 1 kHz, THD 10 %) (HCD-SC6/SC8)
Subwoofer*: 100 W (4 ohms at 100 Hz, THD 10 %) (HCD-SC5/SC6)

* *Depending on the sound field settings and the source, there may be no sound output.*

Inputs: VIDEO 1/VIDEO 2/TV:
Sensitivity: 150 mV
Impedance: 50 kilohms (AEP, UK and Russian models)
VIDEO 1:
Sensitivity: 150 mV
Impedance: 50 kilohms
VIDEO 2:
Sensitivity: 300 mV
Impedance: 50 kilohms (Other models)

Outputs: VIDEO 1 (AUDIO OUT):
Voltage: 1 V
Impedance: 1 kilohm

Phones: Accepts low-and high-impedance headphones.

Super Audio CD/DVD system

Laser: Semiconductor laser (Super Audio CD/DVD: λ = 650 nm)
(CD: λ = 780 nm)
Emission duration: continuous

Signal format system: NTSC or NTSC/PAL

Frequency response (at 2 CH STEREO mode)
DVD (PCM): 2 Hz to 22 kHz (±1.0 dB)
CD: 2 Hz to 20 kHz (±1.0 dB)

Harmonic distortion: Less than 0.03 %

Tuner section

System: PLL quartz-locked digital synthesizer system

FM tuner section
Tuning range: 87.5 – 108.0 MHz (50 kHz step)
Aerial: FM wire aerial
Aerial terminals: 75 ohms, unbalanced
Intermediate frequency: 10.7 MHz

AM tuner section
Tuning range
AEP, UK, Russian, Australian, Singapore and Middle Eastern models: 531 – 1,602 kHz (with the interval set at 9 kHz)
Other models: 531 – 1,602 kHz (with the interval set at 9 kHz)
530 – 1,710 kHz (with the interval set at 10 kHz)
Aerial: AM loop aerial
Intermediate frequency: 450 kHz

Video section (VIDEO 1, 2, EURO AV) (AEP, UK and Russian models)

Inputs: Video: 1 Vp-p 75 ohms
Outputs: Video: 1 Vp-p 75 ohms

Video section (Other models)

Inputs Video: 1 Vp-p 75 ohms
Outputs Video: 1 Vp-p 75 ohms
S video:
Y: 1 Vp-p 75 ohms
C: 0.286 Vp-p 75 ohms
COMPONENT:
Y: 1 Vp-p 75 ohms
P_B/C_B, P_R/C_R: 0.7 Vp-p 75 ohms

General

Power requirements
European models: 230 V AC, 50/60 Hz
Australian and Asian models: 220 – 240 V AC, 50/60 Hz
Taiwan models: 120 V AC, 50/60 Hz
Other models: 110 – 120 V AC, 50/60 Hz
Dimensions (approx.): 380 × 60 × 337 mm (w/h/d) incl. projecting parts
Mass (approx.): 4.2 kg
Operating temperature: 5°C to 35°C (41°F to 95°F)
Operating humidity: 5 % to 90 %

Design and specification are subject to change without notice.

SACD/DVD RECEIVER

9-961-137-01
2003I1678-1
© 2003.09
Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation

SONY

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.



This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.
(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

LF : LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
  Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
  Soldering irons using a temperature regulator should be set to about 350°C.
  Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
  Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
  It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

TABLE OF CONTENTS

1. SERVICING NOTE 4

2. GENERAL 5

3. DISASSEMBLY 9
- 3-1. FRONT PANEL SECTION, SIDE PANEL (L/R) SECTION 10
- 3-2. DDCON BOARD, FL BOARD 11
- 3-3. PLAY BUTTON, SLOT DISC 11
- 3-4. POWER BOARD 12
- 3-5. I/O BOARD 12
- 3-6. SCART BOARD, DVD BOARD 13
- 3-7. AMP BOARD 13
- 3-8. CD MECHANISM DECK (CDM80-DVBU24) 14
- 3-9. CHASSIS (TOP) 14
- 3-10. LEVER (LOADING R/L) 15
- 3-11. DISC STOP LEVER, DISC SENSOR LEVER 16
- 3-12. DRIVER BOARD 16
- 3-13. RF BOARD 17
- 3-14. OPTICAL PICK-UP (TDP022W) 17
- 3-15. BASE UNIT 18
- 3-16. LEVER (BU LOCK) 18
- 3-17. CLOSE LEVER 19
- 3-18. DIR LEVER, GEAR (IDL-B) 19
- 3-19. GEAR (IDL-C) 20

4. TEST MODE 21

5. ELECTRICAL ADJUSTMENT 29

6. DIAGRAMS
- 6-1. CIRCUIT BOARDS LOCATION 30
- 6-2. BLOCK DIAGRAMS – RF/SERVO SECTION – 32
  – AUDIO (DSP) SECTION – 33
  – AUDIO OUT SECTION – 34
  – VIDEO SECTION – 35
  – POWER SUPPLY SECTION – 36
- 6-3. PRINTED WIRING BOARD – RF SECTION – 37
- 6-4. SCHEMATIC DIAGRAM – RF SECTION – 38
- 6-5. PRINTED WIRING BOARD – DRIVER SECTION – 39
- 6-6. SCHEMATIC DIAGRAM – DRIVER SECTION – 39
- 6-7. PRINTED WIRING BOARD – DVD SECTION (SIDE A) – 40
- 6-8. PRINTED WIRING BOARD – DVD SECTION (SIDE B) – 41
- 6-9. SCHEMATIC DIAGRAM – DVD SECTION (1/10) – 42
- 6-10. SCHEMATIC DIAGRAM – DVD SECTION (2/10) – 43
- 6-11. SCHEMATIC DIAGRAM – DVD SECTION (3/10) – 44
- 6-12. SCHEMATIC DIAGRAM – DVD SECTION (4/10) – 45
- 6-13. SCHEMATIC DIAGRAM – DVD SECTION (5/10) – 46
- 6-14. SCHEMATIC DIAGRAM – DVD SECTION (6/10) – 47
- 6-15. SCHEMATIC DIAGRAM – DVD SECTION (7/10) – 48
- 6-16. SCHEMATIC DIAGRAM – DVD SECTION (8/10) – 49
- 6-17. SCHEMATIC DIAGRAM – DVD SECTION (9/10) – 50
- 6-18. SCHEMATIC DIAGRAM – DVD SECTION (10/10) – 51
- 6-19. PRINTED WIRING BOARD – AMP SECTION (SIDE A) – 52
- 6-20. PRINTED WIRING BOARD – AMP SECTION (SIDE B) – 53
- 6-21. SCHEMATIC DIAGRAM – AMP SECTION (1/2) – 54
- 6-22. SCHEMATIC DIAGRAM – AMP SECTION (2/2) – 55
- 6-23. PRINTED WIRING BOARD – I/O SECTION – 56
- 6-24. SCHEMATIC DIAGRAM – I/O SECTION (1/2) – 57
- 6-25. SCHEMATIC DIAGRAM – I/O SECTION (2/2) – 58
- 6-26. PRINTED WIRING BOARD – FRONT PANEL SECTION – 59
- 6-27. SCHEMATIC DIAGRAM – FRONT PANEL SECTION – 60
- 6-28. PRINTED WIRING BOARD – POWER SECTION – 61
- 6-29. SCHEMATIC DIAGRAM – POWER SECTION – 62
- 6-30. IC BLOCK DIAGRAMS 65
- 6-31. IC PIN FUNCTION DESCRIPTION 73

7. EXPLODED VIEWS
- 7-1. CASE SECTION 94
- 7-2. FRONT PANEL SECTION 95
- 7-3. CHASSIS SECTION-1 96
- 7-4. CHASSIS SECTION-2 97
- 7-5. CHASSIS SECTION-3 98
- 7-6. MECHANISM DECK SECTION-1 (CDM80-DVBU24) 99
- 7-7. MECHANISM DECK SECTION-2 (CDM80-DVBU24) 100
- 7-8. MECHANISM DECK SECTION-3 (CDM80-DVBU24) 101
- 7-9. BASE UNIT SECTION 102

8. ELECTRICAL PARTS LIST 103

SECTION 1
SERVICING NOTE

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.
During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

MODEL IDENTIFICATION
— BACK PANEL —



Model	PARTS No.
SC5:AEP,UK/SC6:AEP,UK	4-248-563-0□
SC5:EA/SC6:EA	4-248-563-1□
SC5:SP,HK,KR,TW/SC6:SP,KR	4-248-563-2□
SC5:E32/SC6:AUS	4-248-563-3□
SC8:AEP,UK	4-248-563-5□
SC8:EA	4-248-563-6□
SC8:SP,HK,KR,TW	4-248-563-7□
SC8:E32,MX,AUS	4-248-563-8□
SC5:RU/SC6:RU	4-250-335-1□
SC8:RU	4-250-335-2□

- Abbreviation
  AUS : Australian model
  E32 : 110-240V AC area in E model
  EA : Saudi Arabia model
  HK : Hong Kong model
  KR : Korean model
  MX : Mexican model
  RU : Russian model
  SP : Singapore model
  TW : Taiwan model

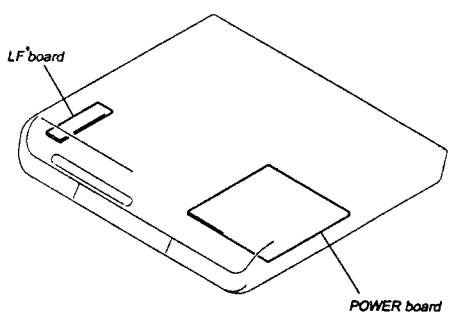

AEP and UK models of HCD-SC6 and HCD-SC8 should exchange for POWER SWITCHING (1-468-790-11).
These do not correspond with DIAGRAMS and ELECTRICAL PARTS LIST.

SECTION 2
GENERAL

This section is extracted from instruction manual.

Front Panel

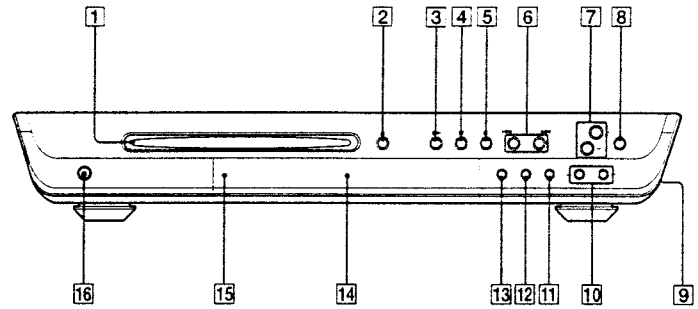

1 **Disc slot (22)**
2 **⏏ (eject) (22)**
3 **▷ (play) (22)**
4 **II (pause) (23)**
5 **■ (stop) (23)**
6 **I◀◀ /▶▶I, PREV/NEXT, PRESET –/+ (23, 25, 56, 57)**
7 **VOLUME +/– (22, 67)**
8 **BASS LEVEL (46)**
9 **PHONES (on the side of the system) jack (22)**
10 **SOUND FIELD –/+ (43, 44, 45)**
11 **DISPLAY (36, 39, 57)**
12 **BAND (56, 57)**
13 **FUNCTION (22, 55, 57)**
14 **Front panel display (77)**
15 **▪ (remote sensor) (11)**
16 **I/⏻ (power) switch/STANDBY indicator (22)**

Rear Panel
HCD-SC5/SC6 (AEP, UK and Russian models)

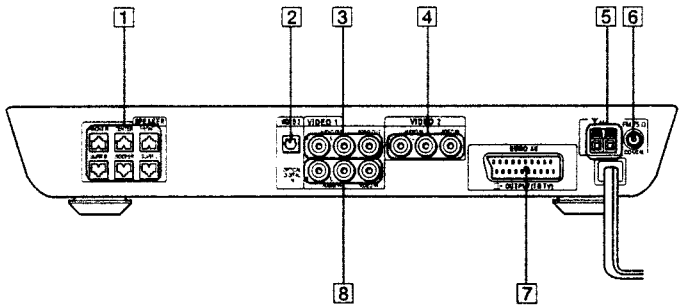

1 SPEAKER jacks (13)
2 VIDEO 2 OPTICAL DIGITAL IN jack (19)
3 VIDEO 1 ANALOG OUT jack (18)
4 VIDEO 2 ANALOG IN jack (18)
5 AM terminals (16)
6 FM 75 COAXIAL jack (16)
7 EURO AV OUTPUT (TO TV) jacks (18)
8 VIDEO 1 ANALOG IN jack (18)

Rear Panel
HCD-SC5/SC6 (Other models)

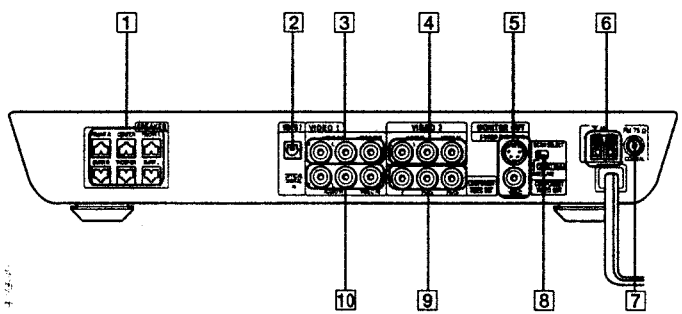

1 SPEAKER jacks (13)
2 VIDEO 2 OPTICAL DIGITAL IN jack (18)
3 VIDEO 1 ANALOG OUT jack (18)
4 VIDEO 2 ANALOG IN jack (18)
5 MONITOR OUT (VIDEO/S VIDEO) jacks (18)
6 AM terminals (16)
7 FM 75 COAXIAL jack (16)
8 SCAN SELECT switch (64)
9 COMPONENT VIDEO OUT jacks (18)
10 VIDEO 1 ANALOG IN jack (18)

Rear Panel
HCD-SC8 (AEP, UK and Russian models)

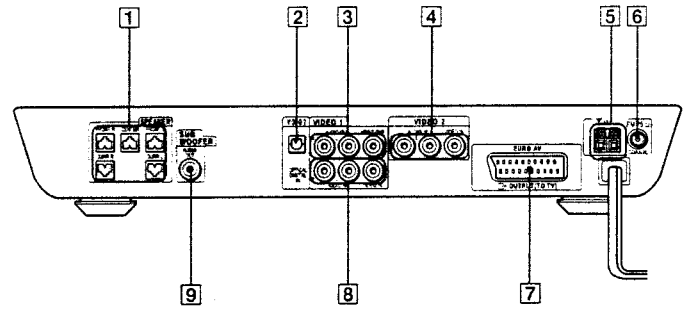

1 SPEAKER jacks (13)
2 VIDEO 2 OPTICAL DIGITAL IN jack (19)
3 VIDEO 1 ANALOG OUT jack (18)
4 VIDEO 2 ANALOG IN jack (18)
5 AM terminals (16)
6 FM 75 COAXIAL jack (16)
7 EURO AV OUTPUT (TO TV) jacks (18)
8 VIDEO 1 ANALOG IN jack (18)
9 SUB WOOFER AUDIO OUT jack (12)

Rear Panel
HCD-SC8 (Other models)

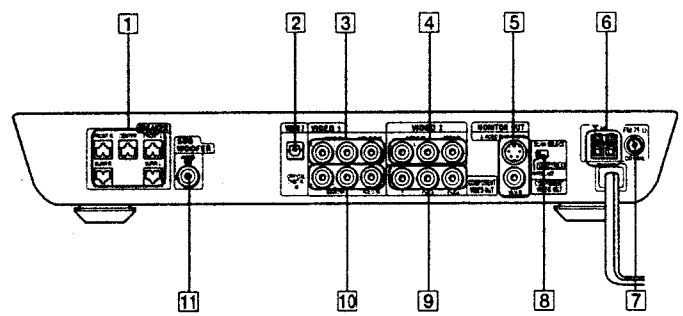

1 SPEAKER jacks (13)
2 VIDEO 2 OPTICAL DIGITAL IN jack (18)
3 VIDEO 1 ANALOG OUT jack (18)
4 VIDEO 2 ANALOG IN jack (18)
5 MONITOR OUT (VIDEO/S VIDEO) jacks (18)
6 AM terminals (16)
7 FM 75 COAXIAL jack (16)
8 SCAN SELECT switch (65)
9 COMPONENT VIDEO OUT jacks (18)
10 VIDEO 1 ANALOG IN jack (18)
11 SUB WOOFER AUDIO OUT jack (12)

Remote

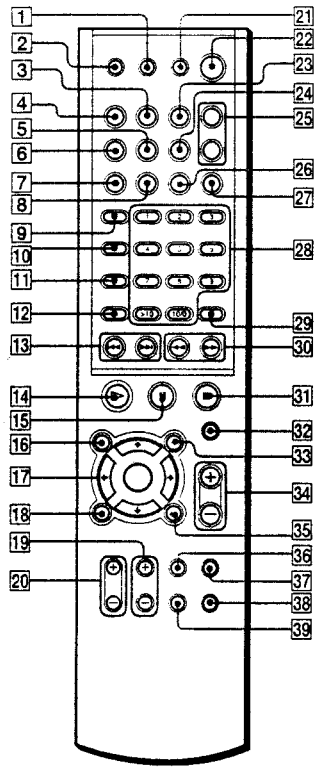

Note

This remote control glows in the dark. However, before glowing, the remote must be exposed to light for awhile.

1. **SLEEP (59)**
2. **⏏ (eject) (22, 23)**
3. **DISPLAY (36, 39, 57)**
4. **FUNCTION (22, 55, 57)**
5. **STEREO/MONO (57)**
6. **BAND (56, 57)**
7. **PLAY MODE (30, 31)**
8. **CLEAR (30, 31, 32, 34)**
9. **TV (54)**
10. **AUDIO (41)**
11. **ANGLE (47)**
12. **SUBTITLE (48)**
13. **⏮/⏭, PREV/NEXT, PRESET –/+ (23, 25, 56, 57)**
14. **▷ (play) (22, 25, 30, 31, 32)**
15. **II (pause) (23)**
16. **DVD TOP MENU/ALBUM– (24, 26, 28)**
17. **←/↑/↓/→/ENTER (24, 25, 26, 28, 29, 30, 32, 34, 41, 47, 48, 49, 51, 58, 60, 61)**
18. **DVD DISPLAY (26, 28, 32, 34, 39, 40, 41, 47, 48, 49)**
19. **TV CH +/– (54)**
20. **TV VOL +/– (54)**
21. **TV I/⏻ (on/standby) (54)**
22. **I/⏻ (standby) (22, 56)**
23. **REPEAT (30, 32)**
24. **NAME (58)**
25. **SOUND FIELD +/– (43, 44, 45)**
26. **MEMORY (56)**
27. **NIGHT MODE (46)**
28. **Number buttons (24, 25, 30, 34, 47, 49, 51, 54)**
29. **ENTER (56)**
30. **◀◀/▶▶/◁I/I▷ SLOW, TUNING –/+ (29, 33, 56)**
31. **■ (stop) (23, 24, 25, 49)**
32. **MUTING (23)**
33. **DVD MENU/ALBUM+ (24, 26, 28)**
34. **VOLUME +/– (57)**
35. **↩ RETURN (25, 26, 28, 30, 34, 49, 51, 61)**
36. **TV/VIDEO (54)**
37. **BASS LEVEL (46)**
38. **AMP MENU (60)**
39. **DVD SETUP (51, 61)**

SECTION 3
DISASSEMBLY

• The equipment can be removed using the following procedure.

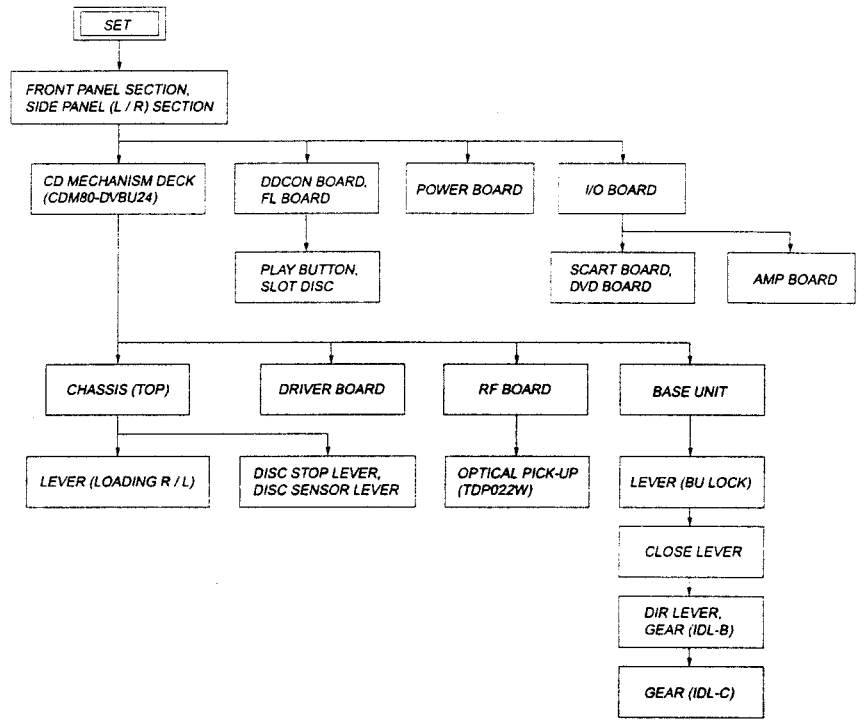

Note: Follow the disassembly procedure in the numerical order given.

3-1. FRONT PANEL SECTION, SIDE PANEL (L/R) SECTION

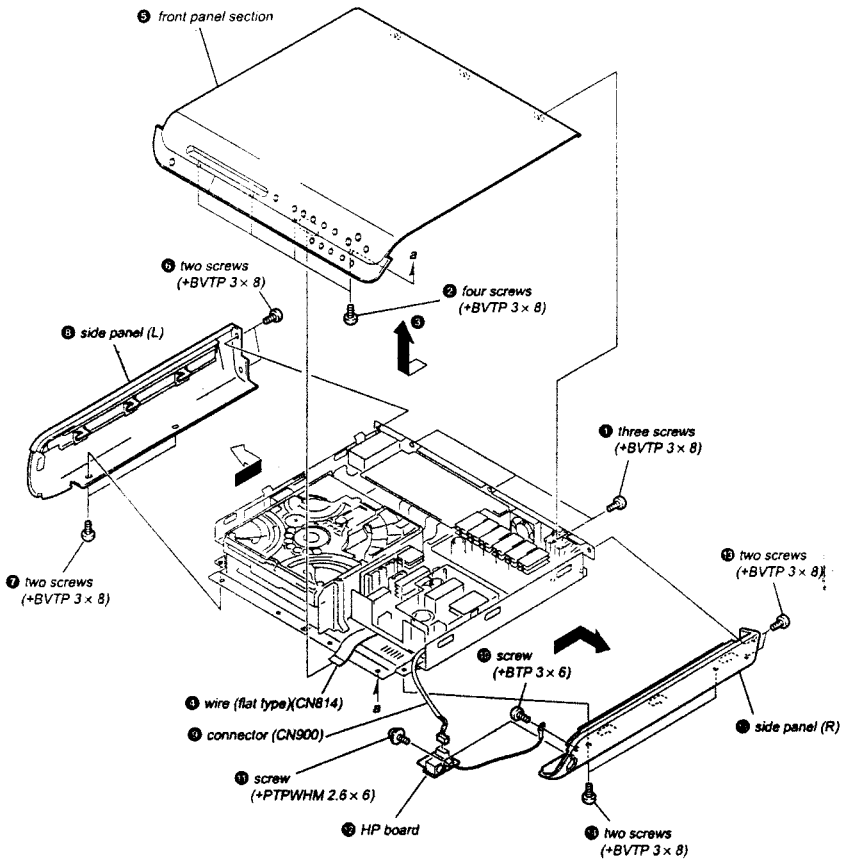
❺ front panel section
❻ two screws (+BVTP 3 × 8)
❷ four screws (+BVTP 3 × 8)
❽ side panel (L)
❶ three screws (+BVTP 3 × 8)
⓭ two screws (+BVTP 3 × 8)
❼ two screws (+BVTP 3 × 8)
❿ screw (+BTP 3 × 6)
❸ wire (flat type)(CN814)
❹ connector (CN900)
❾ side panel (R)
⓫ screw (+PTPWHM 2.6 × 6)
⓬ HP board
⓮ two screws (+BVTP 3 × 8)

3-2. DDCON BOARD, FL BOARD

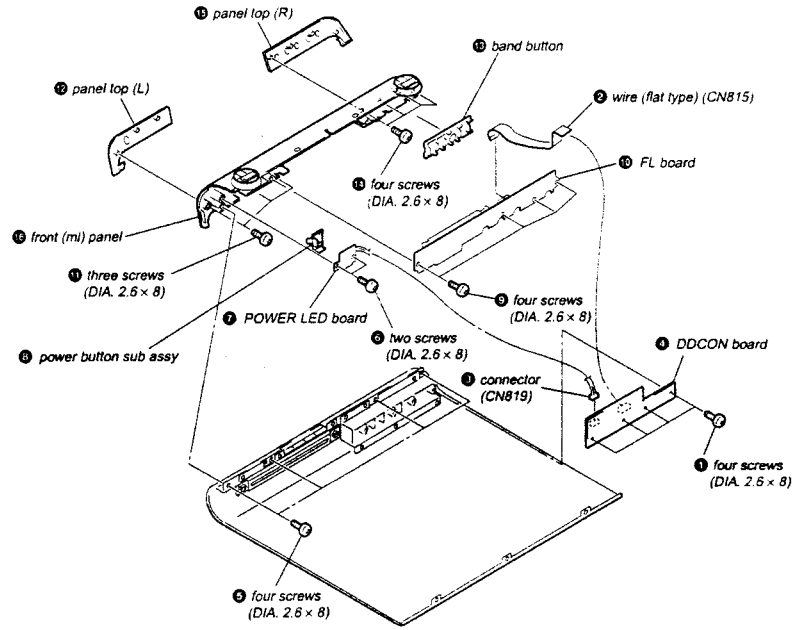
⓯ panel top (R)
⓰ band button
⓬ panel top (L)
❷ wire (flat type) (CN815)
⓲ four screws (DIA. 2.6 × 8)
❿ FL board
⓱ front (mi) panel
⓫ three screws (DIA. 2.6 × 8)
❾ four screws (DIA. 2.6 × 8)
❼ POWER LED board
❻ two screws (DIA. 2.6 × 8)
❽ power button sub assy
❹ DDCON board
❸ connector (CN819)
❶ four screws (DIA. 2.6 × 8)
❺ four screws (DIA. 2.6 × 8)

3-3. PLAY BUTTON, SLOT DISC

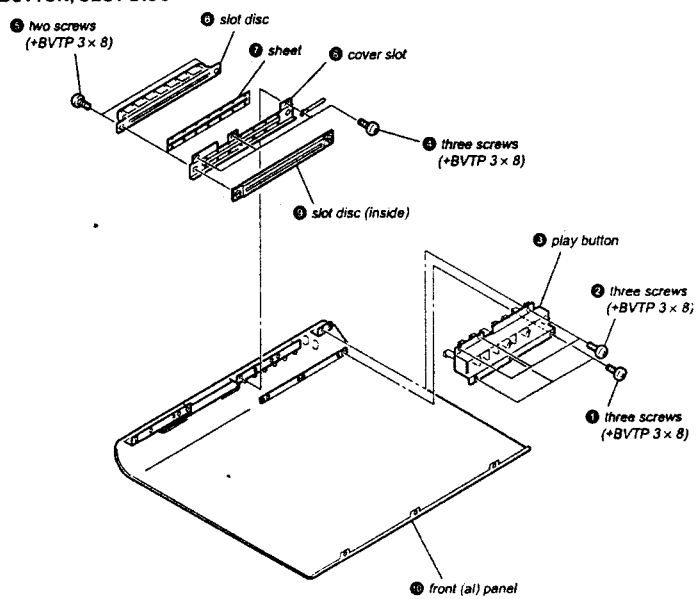
❺ two screws (+BVTP 3 × 8)
❻ slot disc
❼ sheet
❽ cover slot
❸ three screws (+BVTP 3 × 8)
❾ slot disc (inside)
❶ play button
❷ three screws (+BVTP 3 × 8)
❶ three screws (+BVTP 3 × 8)
❿ front (al) panel

3-4. POWER BOARD

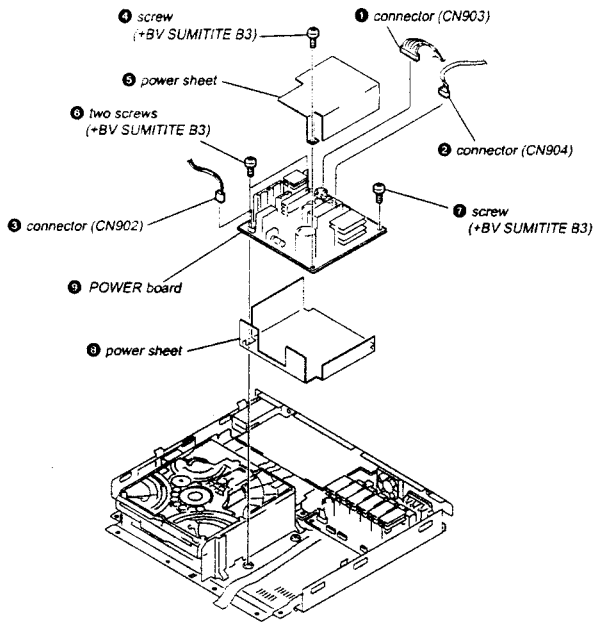

3-5. I/O BOARD

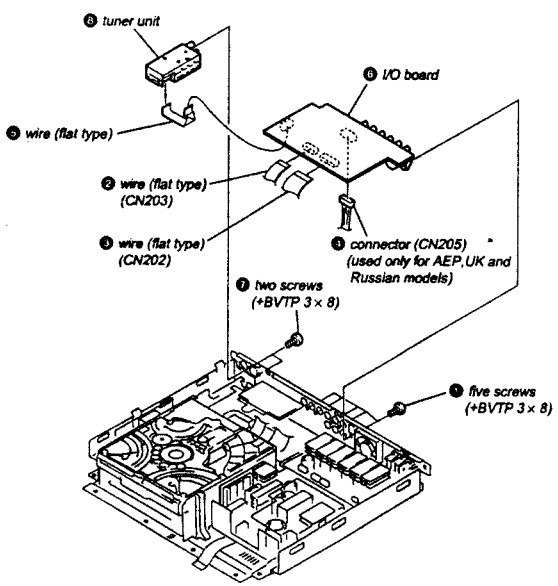
❽ tuner unit
❻ I/O board
❺ wire (flat type)
❷ wire (flat type) (CN203)
❸ wire (flat type) (CN202)
❹ connector (CN205) (used only for AEP,UK and Russian models)
❼ two screws (+BVTP 3 × 8)
❶ five screws (+BVTP 3 × 8)

3-6. SCART BOARD, DVD BOARD

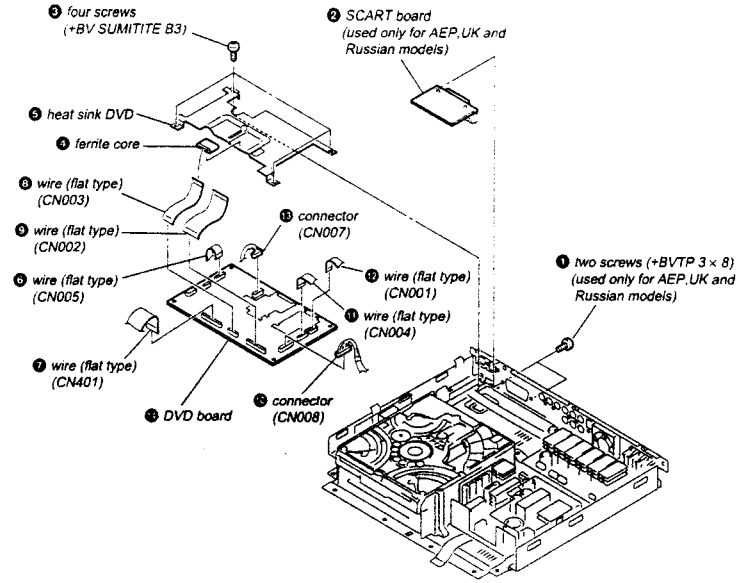
❸ four screws (+BV SUMITITE B3)
❷ SCART board (used only for AEP,UK and Russian models)
❺ heat sink DVD
❹ ferrite core
❽ wire (flat type) (CN003)
❾ wire (flat type) (CN002)
❻ wire (flat type) (CN005)
⓭ connector (CN007)
⓬ wire (flat type) (CN001)
⓫ wire (flat type) (CN004)
❼ wire (flat type) (CN401)
❿ DVD board
❿ connector (CN008)
❶ two screws (+BVTP 3 × 8) (used only for AEP,UK and Russian models)

3-7. AMP BOARD

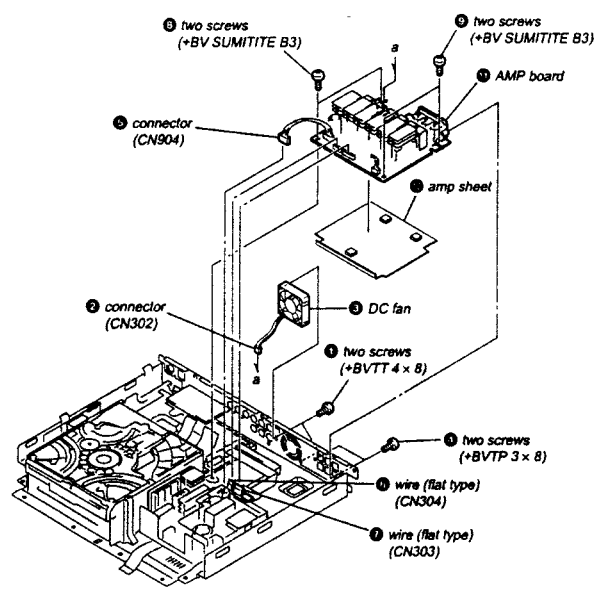
❽ two screws (+BV SUMITITE B3)
❾ two screws (+BV SUMITITE B3)
a
⓫ AMP board
❺ connector (CN904)
❿ amp sheet
❷ connector (CN302)
❸ DC fan
❶ two screws (+BVTT 4 × 8)
a
❶ two screws (+BVTP 3 × 8)
⓬ wire (flat type) (CN304)
❼ wire (flat type) (CN303)

3-8. CD MECHANISM DECK (CDM80-DVBU24)

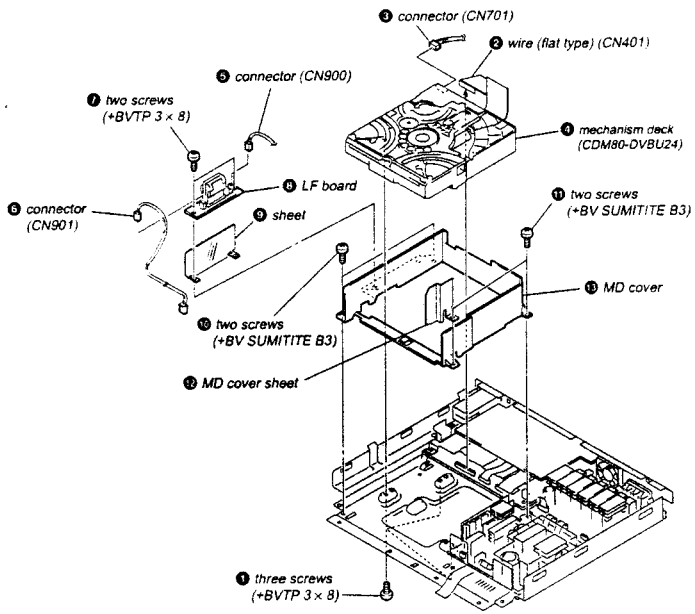
❸ connector (CN701)
❷ wire (flat type) (CN401)
❺ connector (CN900)
❼ two screws (+BVTP 3 × 8)
❹ mechanism deck (CDM80-DVBU24)
❽ LF board
❻ connector (CN901)
❾ sheet
⓫ two screws (+BV SUMITITE B3)
⓭ MD cover
⓬ two screws (+BV SUMITITE B3)
⓮ MD cover sheet
❶ three screws (+BVTP 3 × 8)

3-9. CHASSIS (TOP)

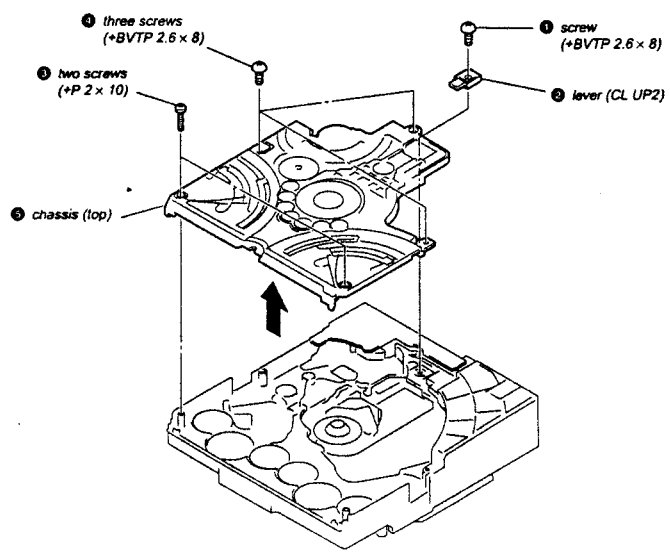

3-10. LEVER (LOADING R/L)

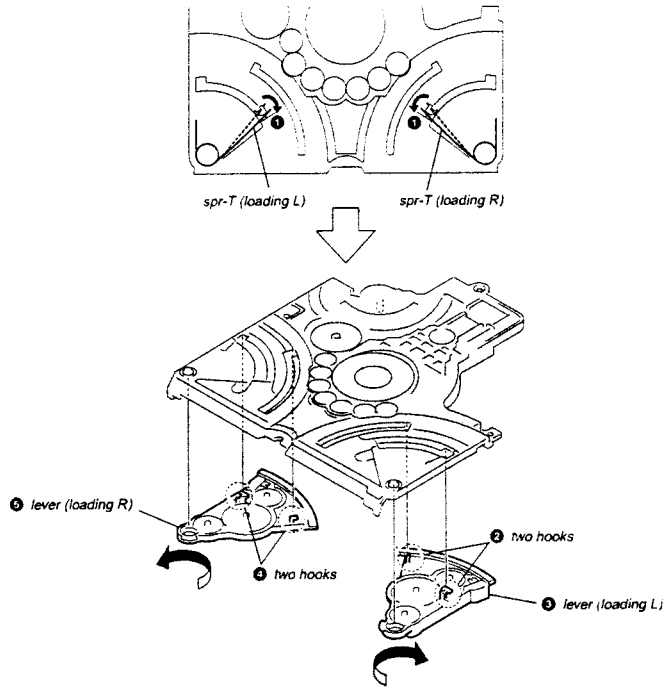

PRECAUTION DURING LEVER (LOADING R / L) INSTALLATION

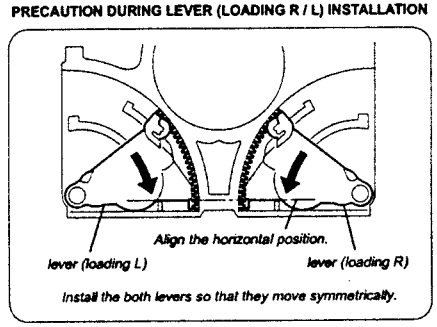

3-11. DISC STOP LEVER, DISC SENSOR LEVER

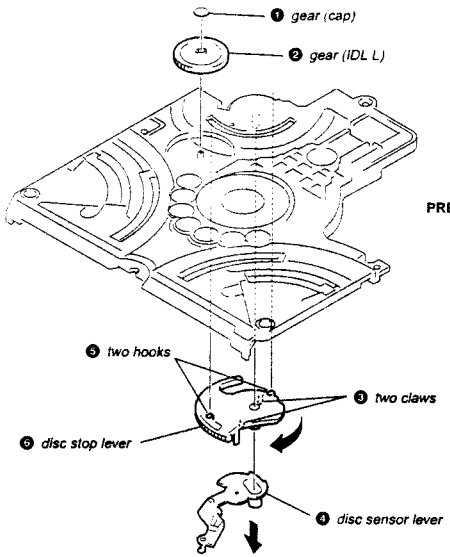

PRECAUTION DURING DISC STOP LEVER INSTALLATION

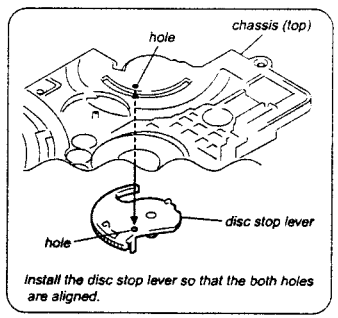

3-12. DRIVER BOARD

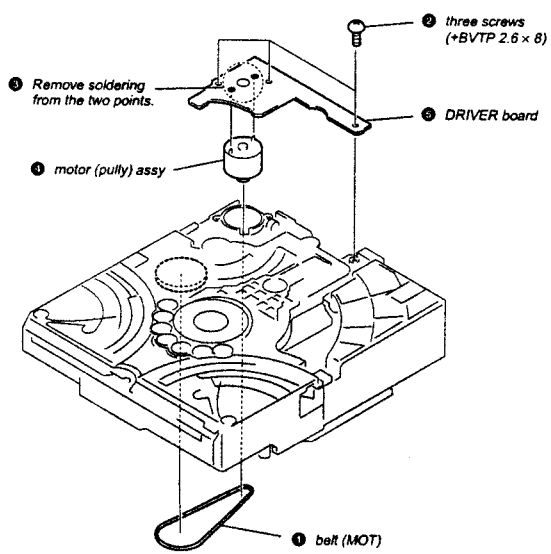

3-13. RF BOARD

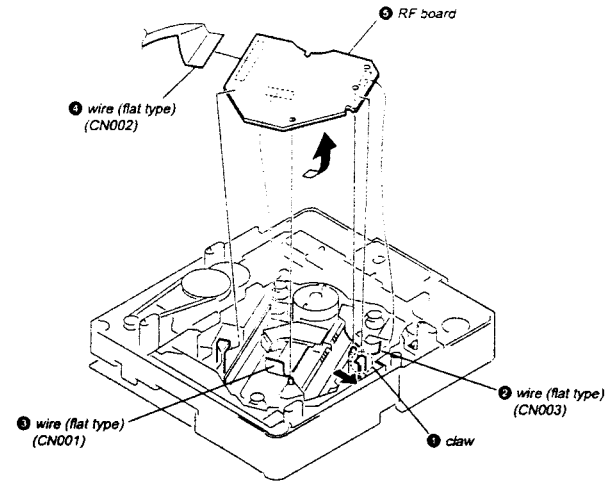

3-14. OPTICAL PICK-UP (TDP022W)

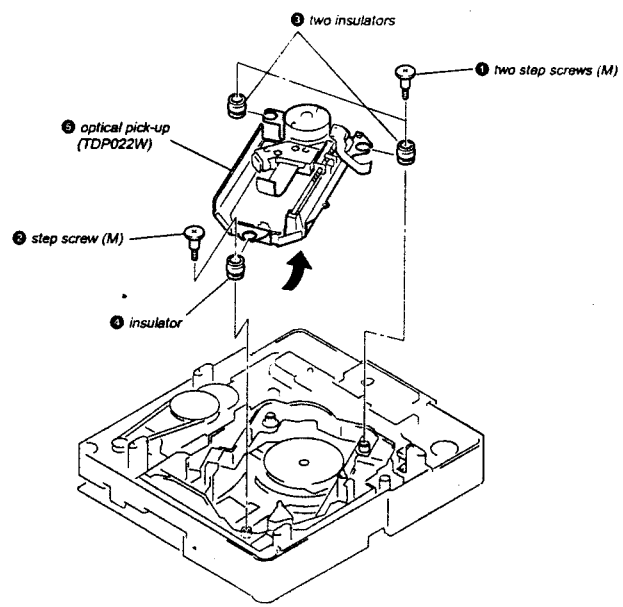

3-15. BASE UNIT

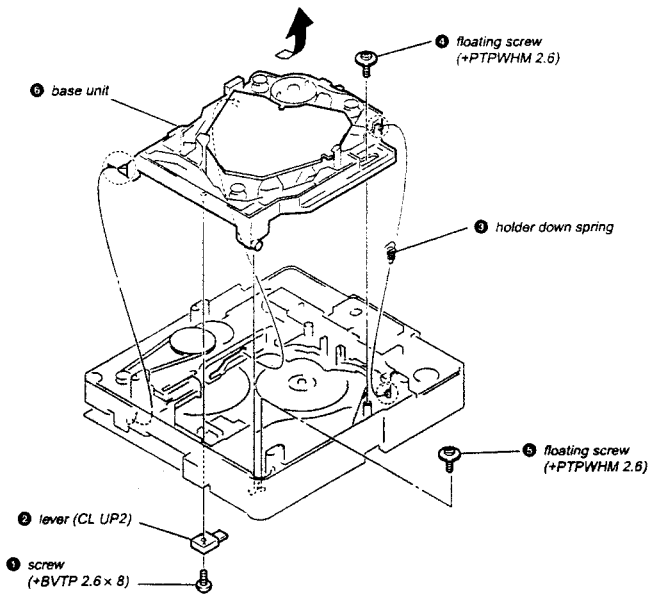

3-16. LEVER (BU LOCK)

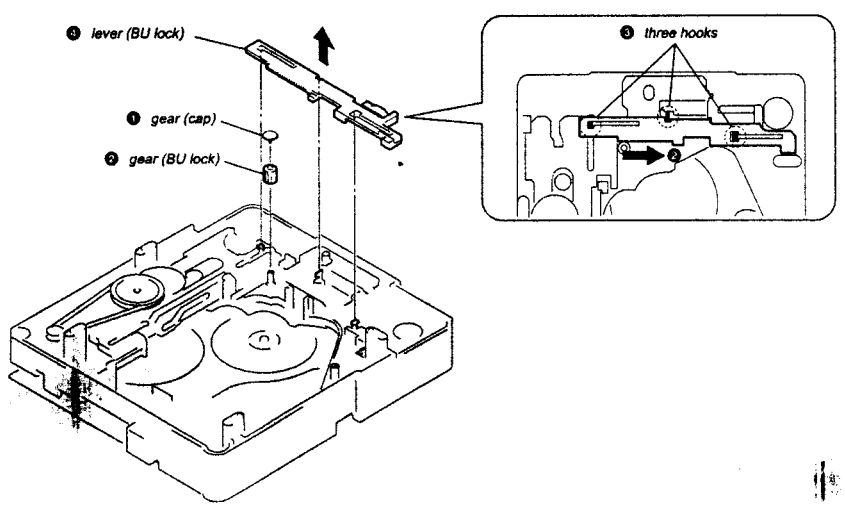

3-17. CLOSE LEVER

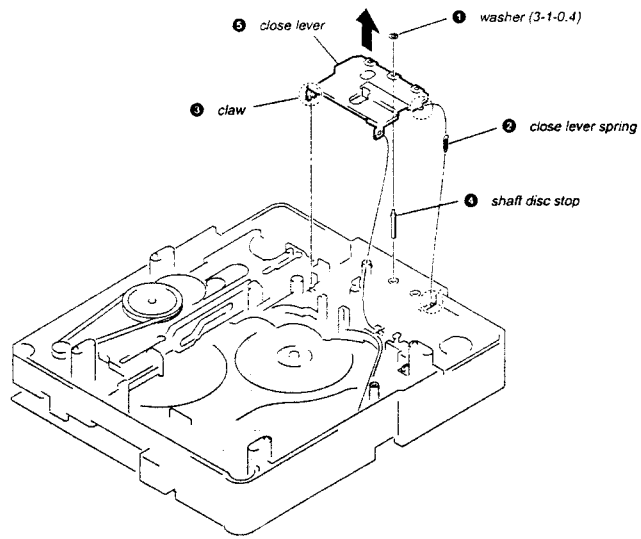

3-18. DIR LEVER, GEAR (IDL-B)

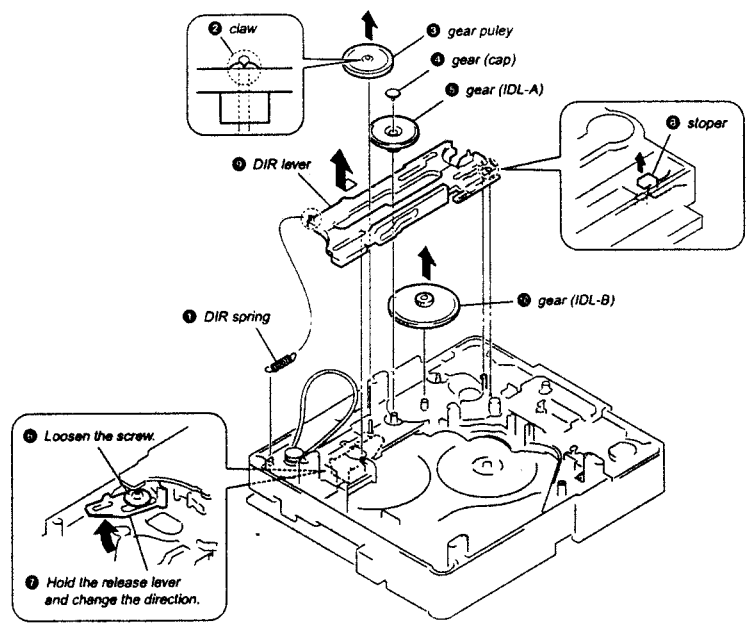

DAV-SC5/SC6/SC8

SERVICE MANUAL

Ver 1.0 2003.09

AEP Model
UK Model
E Model
DAV-SC5/SC6/SC8

Australian model
DAV-SC6/SC8

- DAV-SC5/SC6/SC8 are composed of following models. As service manuals are issued for each component model, please refer to them.

COMPONENT MODEL NAME

	DAV-SC5	DAV-SC6	DAV-SC8
SACD/DVD RECEIVER	HCD-SC5	HCD-SC6	HCD-SC8
PACKAGE SPEAKER	SS-WT5	SS-SC6	SA-SC8
FRONT SPEAKER	SS-TS5	SS-TS6 (EXCEPT AEP, UK) SS-TS8 (AEP, UK)	SS-TS8
SURROUND SPEAKER	SS-TS5	SS-TS7 (EXCEPT AEP, UK) SS-TS5 (AEP, UK)	SS-TS8
CENTER SPEAKER	SS-CT5	SS-CT6 (EXCEPT AEP, UK) SS-CT8 (AEP, UK)	SS-CT8
SUB WOOFER	SS-WS5	SS-WS6	SA-WS8

- Abbreviation
  AUS : Australian model.
  E32 : 110-240V AC area in E model.
  EA : Saudi Arabia model.
  MX : Mexican model.
  KR : Korea model.
  RU : Russian model.
  SP : Singapore model.
  TW : Taiwan model.

PARTS LIST

Part No.	Description	Remark
	ACCESSORIES **********	
1-477-370-13	COMMANDER, STANDARD (RM-SS880) (SC5:RU/SC8:MX)	
1-478-142-11	COMMANDER, STANDARD (RM-SP800) (SC5:EXCEPT RU/SC6/SC8:EXCEPT MX)	
⚠1-569-008-12	ADAPTOR, CONVERSION 2P (E32)	
1-754-059-12	ANTENNA, LOOP (AM)(AEP, UK)	
1-754-060-13	ANTENNA (FM)	
1-754-149-11	LOOP ANT (AM)(EXCEPT AEP, UK)	
1-765-388-13	CORD, CONNECTION (PIN-PIN)(SUB WOOFER CORD)(SC8)	
1-769-108-11	CORD, CONNECTION (VIDEO CORD)	
⚠1-770-783-21	CONNECTOR, CONVERSION (UK, RU)	
1-827-243-11	CORD (WITH CONNECTOR)(SC5/SC6)	
1-827-244-11	CORD (WITH CONNECTOR)(SC8)	
4-248-406-11	MANUAL, INSTRUCTION (ENGLISH)(SC5:AEP, UK)	
4-248-406-21	MANUAL, INSTRUCTION (FRENCH, GERMAN, SPANISH)(SC5:AEP)	
4-248-406-31	MANUAL, INSTRUCTION (DUTCH, SWEDISH, ITALIAN, POLISH)(SC5:AEP)	
4-248-406-41	MANUAL, INSTRUCTION (DANISH, FINNISH, PORTUGUESE)(SC5:AEP)	
4-248-406-51	MANUAL, INSTRUCTION (GREEK)(SC5:AEP)	
4-248-408-11	MANUAL, INSTRUCTION (ENGLISH)(SC5:E32, EA, HK, SP, TW, KR)	
4-248-408-21	MANUAL, INSTRUCTION (FRENCH)(SC5:E32, EA)	
4-248-408-31	MANUAL, INSTRUCTION (SPANISH)(SC5:E32)	
4-248-408-41	MANUAL, INSTRUCTION (ARABIC)(SC5:EA)	
4-248-408-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE)(SC5:E32, HK, SP, TW)	
4-248-413-11	MANUAL, INSTRUCTION (ENGLISH)(SC6:AUS, SP)	
4-248-413-21	MANUAL, INSTRUCTION (TRADITIONAL CHINESE)(SC6:SP)	
4-248-413-31	MANUAL, INSTRUCTION (KOREAN)(SC6:KR)	
4-248-413-41	MANUAL, INSTRUCTION (ENGLISH, RUSSIAN)(SC6:RU)	
4-248-415-11	MANUAL, INSTRUCTION (ENGLISH)(SC6:AEP, UK)	
4-248-415-21	MANUAL, INSTRUCTION (FRENCH, GERMAN, SPANISH)(SC6:AEP)	
4-248-415-31	MANUAL, INSTRUCTION (DUTCH, SWEDISH, ITALIAN, POLISH)(SC6:AEP)	
4-248-415-41	MANUAL, INSTRUCTION (DANISH, FINNISH, PORTUGUESE)(SC6:AEP)	
4-248-415-51	MANUAL, INSTRUCTION (GREEK)(SC6:AEP)	
4-248-417-11	MANUAL, INSTRUCTION (ENGLISH)(SC8:TW, AUS, E32, EA, SP)	
4-248-417-21	MANUAL, INSTRUCTION (FRENCH)(SC8:E32, EA)	
4-248-417-31	MANUAL, INSTRUCTION (SPANISH)(SC8:E32)	
4-248-417-41	MANUAL, INSTRUCTION (ARABIC)(SC8:EA)	
4-248-417-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE)(SC8:E32, SP, TW)	
4-248-417-61	MANUAL, INSTRUCTION (KOREAN)(SC8:KR)	
4-248-417-71	MANUAL, INSTRUCTION (ENGLISH, RUSSIAN)(SC8:RU)	
4-248-418-11	MANUAL, INSTRUCTION (ENGLISH)(SC8:AEP, UK)	
4-248-418-21	MANUAL, INSTRUCTION (FRENCH, GERMAN, SPANISH)(SC8:AEP)	
4-248-418-31	MANUAL, INSTRUCTION (DUTCH, ITALIAN, SWEDISH, POLISH)(SC8:AEP)	
4-248-418-41	MANUAL, INSTRUCTION (DANISH, FINNISH, PORTUGUESE)(SC8:AEP)	
4-248-418-51	MANUAL, INSTRUCTION (GREEK)(SC8:AEP)	
3-084-601-01	COVER,BATTERY (FOR RM-SP800/SS880)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

COMPACT AV SYSTEM

SONY

9-961-136-01 Sony Corporation
2003I16-1 Home Audio Company
© 2003.09 Published by Sony Engineering Corporation

SECTION 4
TEST MODE

[Version Display Mode]

- The software version is displayed.

Procedure:

1. Press three buttons of [FUNCTION], [■] and [⏏] simultaneously for two seconds.
2. The message "VERSION" is displayed. The version display mode is activated.
3. Press the [NEXT ▶▶|] button. "IF ***" is displayed.
4. Each time the [NEXT ▶▶|] button is pressed, the display changes in the order of DVD, AREA, VERSION and IF.
5. To exit from this mode, press the [I/⏻] button.

[Key Test Mode]

- Button check

Procedure:

1. Press three buttons of [DISPLAY], [FUNCTION] and [⏏] simultaneously.
2. The message "KEY NUM 0" is displayed and "0" blinks.
3. Each time a button is pressed, "KEY NUM 0" value increases. However, once a button is pressed, it is no longer taken into account.
4. When all buttons are pressed, "KEY NUM 15" appears and the number blinking is stopped.
5. To exit from this mode, disconnect the power cord.

[Display Test Mode]

Procedure:

1. Press three buttons of [BAND], [DISPLAY] and [⏏] simultaneously.
2. All segments are turned on.



3. When the [NEXT ▶▶|] button is pressed, the display will light up as follows.



4. Press the [NEXT ▶▶|] button and confirm the display.



5. Press the [NEXT ▶▶|] button, all segments are turned off.
6. Every pressing of the [NEXT ▶▶|] button turns on each segments in the same order.
7. To exit from this mode, press the [I/⏻] button.

[OSD Test Mode]

Procedure:

1. Press the [I/⏻] button on the main unit or the [I/⏻] button on the remote commander to turn the set on.
2. Set the FUNCTION to DVD.
3. Press three buttons of [⏏], [|◀◀ PREV] and [VOLUME+] simultaneously.
4. The message "SERVICE IN" is displayed on the display. The Test Mode Menu is displayed on the TV screen.
5. To execute each function, select the number on the remote commander.
6. See the following section for explanation in detail.
7. To exit from this mode, press the [I/⏻] button.

[Disc Slot Lock]

The disc slot lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure:

1. Turn the set on.
2. Press two buttons of [■] and [⏏] simultaneously for five seconds.
3. The message "LOCKED" is displayed and the slot is locked.

Releasing Procedure:

1. Press two buttons of [■] and [⏏] simultaneously for five seconds again.
2. The message "UNLOCKED" is displayed and the slot is unlocked.

Note : When "LOCKED" is displayed, the slot lock is not released by turning power on eff with the [I/⏻] button.

[Repeat Limit Release Mode]

Procedure:

1. Press three buttons of [⏏], [|◀◀ PREV] and [VOLUME-] simultaneously.
2. Repeat limit is released.

[CDM Ship Mode]

- This mode moves the optical pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

1. Turn the set on.
2. Set the function to DVD.
3. Press the [■] button for five seconds.
4. The message "MECHA LOCK" is displayed.
5. Press the [I/⏻] button to turn off. The CDM ship mode is set.

[GENERAL DESCRIPTION]

The Test Mode allows you to make diagnosis and adjustment easily using the remote commander and monitor TV. The instructions, diagnostic results, etc. are given on the on-screen display (OSD).

[TEST DISC LIST]

Use the following test disc on test mode.

TDV-520CSO (DVD-SL): PART No. J-2501-236-A
LUV-P01 (CD): PART No. 4-999-032-01
TDV-540C (DVD-DL): PART No. J-2501-235-A

Note: Do not use exiting test disc for DVD.

[STARTING TEST MODE]

1. Press the [I/⏻] button to turn the power on, and set the function to DVD.
2. Press three buttons of [⏏], [⏮ PREV] and [VOLUME+] simultaneously to enter the test mode.
3. It displays "SERVICE IN" on the fluorescent indicator tube, and displays the Test Mode Menu on the monitor screen as follows. (At the bottom of the menu screen, the model name and revision number are displayed)

```
          Test Mode Menu

0. Syscon Diagnosis
1. Drive Auto Adjustment
2. Drive Manual Operation
3. Mecha Aging
4. Emergency History
5. Mecha Error History
6. Version Information
7. Video Level Adjustment
                    Exit: POWER Key
Model     :DAV-SCX      xx
Revision  :x.xx
```

4. To execute each function, select the desired menu and press its number on the remote commander (RM-SP800).
5. To release from test mode, press the [I/⏻] button and turn the power off.

[OPERATING TEST MODE]

0. SYSCON DIAGNOSIS

The same contents as board detail check by serial interface can be checked from the remote commander operation.
On the Test Mode Menu screen, press [10/0] key on the remote commander, and the following Check Menu will be displayed.

```
### Syscon Diagnosis ###

          Check Menu
0. Quit
1. All
2. Version
3. EEPROM
4. GPIO
5. SD Bus
6. Video
```

0-0. Quit

Quit the Syscon Diagnosis and return to the Test Mode Menu.

0-1. All (All items continuous check)

This menu checks all diagnostic items continuously. Normally, all items are checked successively one after another automatically unless an error is found, but at a certain item that requires judgment through a visual check to the result, the following screen is displayed for the key entry.

• *Example display*

```
      ### Syscon Diagnosis ###

            Diag All Check
             No.2 Version

          2-3. ROM Check Sum
Check Sum = 7906



Press NEXT Key to Continue
Press PREV Key to Repeat
```

For the ROM Check, the check sum calculated by the Syscon is output, and therefore you must compare it with the specified value for confirmation.
Following the message, press the [NEXT ⏭] button to go to the next item, or press the [⏮ PREV] button to repeat the same operation again.
To quit the diagnosis and return to Check Menu screen, press the [RETURN] key on the remote commander to display Check Menu.

• Error occurred

If an error occurred, the diagnosis is suspended and error is displayed. Press the [RETURN] key on the remote commander to quit the diagnosis, or press the [⏮ PREV] button to repeat the same check where an error occurred, or press the [NEXT⏭] button to continue the check from the item next to faulty item.

General Description of Checking Method

Selecting 2 and subsequent items calls the submenu screen of each item. And selecting 2 and subsequent items executes respective menus and outputs the results.
For the contents of each submenu, see "Check Items List" as below.

Check Items List:

- 0-2. Version
  - 0-2-1. All
  - 0-2-2. Revision
  - 0-2-3. ROM Check Sum
  - 0-2-4. Model Type
  - 0-2-5. Region
- 0-3. EEPROM Check
  - 0-3-1. Sampling Check
  - 0-3-2. Detail Check
- 0-4. GP I/O Check
- 0-5. SD Bus Check
- 0-6. Video Check

0-2. Version

0-2-2. Revision
The revision number of ROM (IC205) that the program for the DVD system processor (IC206) is stored.

0-2-3. ROM Check Sum
Check sum is calculated. (4 digits hexadecimal number)

0-2-4. Model Type
Model name is displayed. (DAV-SCX)

0-2-5. Region
Model destination code is displayed. (2 digits number)

0-3. EEPROM Check

0-3-1. Sampling Check
EEPROM check at every 64 words.
It compares read data with write data of each address. When there are discrepancies between two data, it displays error.

0-3-2. Detail Check
EEPROM check at every 1 word.
It compares read data with write data of each address. When there are discrepancies between two data, it displays error.

0-4. GP I/O Check

Pull up/down setting check of the DVD system processor (IC206) pin 150, 151 and 154 (for clock setting port).

0-5. SD Bus Check

SD bus data check between DVD decoder (IC701) and D-RAM (IC706).

0-6. Video Check

Output the color bars for video level adjustment.

1. DRIVE AUTO ADJUSTMENT

On the Test Mode Menu screen, press the [1] key on the remote commander, and the Adjustment Menu will be displayed.

```
## Drive Auto Adjustment ##
        Adjustment Menu

0. ALL
1. DVD-SL
2. CD
3. DVD-DL




                    Exit: RETURN
```

Normally, [10/0] is selected to adjust DVD (single layer), CD and DVD (dual layer) in this order. But, individual items can be adjusted for the case where adjustment is suspended due to an error. In this mode, the adjustment can be made easily through the operation following the message displayed on the screen.
The disc used for adjustment must be the one specified for adjustment.

1-0. ALL

Press the [10/0] key on the remote commander, and the servo set data in EEPROM will be initialized. Then, 1. DVD-SL disc, 2. CD disc and 3. DVD-DL disc are adjusted in this order.
Each time one disc was adjusted, it is ejected. Replace it with the specified disc following the message. You can finish the adjustment by pressing the [RETURN] button on the remote commander.

Note: During adjustment of each disc, the measurement for disc type judgment is made. As automatic adjustment does not judge the disc type unlike conventional models, take care not to insert wrong type discs. Also, do not give a shock during adjustment.

1-1. DVD-SL (single layer)

Press the [1] key on the remote commander and insert a DVD single layer disc following the message. Then the adjustment will be made through the steps below, then adjusted values will be written to the EEPROM.

DVD Single Layer Disc Adjustment Steps:

1. Sled tilt reset
2. Disc check memory SL
3. Wait 300 msec
4. Set disc type SL
5. LD on
6. Spindle start
7. Wait 1 sec
8. Focus servo on 0
9. Auto track offset adjust
10. CLVA on
11. Wait 500 msec
12. Tracking on
13. Wait 1 sec
14. Sled on
15. Check CLV on
16. Auto LFO adjust
17. Auto focus offset adjust
18. Auto tilt position adjust
19. Auto focus gain adjust
20. Auto focus offset adjust
21. EQ boost adjust
22. Auto loop filter offset adjust
23. Auto track gain adjust

Search Check

24. 32 track jump forward
25. 32 track jump reverse
26. 500 track jump forward
27. 500 track jump reverse

28. All servo stop
29. EEP copy loop filter offset

1-2. CD

Press the [2] key on the remote commander and insert a CD disc following the message. Then the adjustment will be made through the steps below, then adjusted values will be written to the EEPROM.

CD Adjustment Steps

1. Sled tilt rest
2. Disc check memory CD
3. Wait 500 msec
4. Set disc type CD
5. LD on
6. Spindle start
7. Wait 500 msec
8. Focus servo on 0
9. Auto track offset adjust
10. CLVA on
11. Wait 500 msec
12. Tracking on
13. (TC display start)
14. Wait 1 sec
15. Jitter display start
16. Sled ON
17. Check CLV on
18. Auto loop filter offset adjust
19. Auto focus offset adjust
20. Auto focus gain adjust
21. Auto focus offset adjust
22. EQ boost adjust
23. Auto LFO Adjust

24. Auto track gain adjust

Search Check

25. 32Tj forward
26. 32Tj reverse
27. 500Tj forward
28. 500Tj reverse

29. All servo stop

1-3. DVD-DL (dual layer)

Press the [3] key on the remote commander and insert a DVD dual layer disc following the message. Then the adjustment will be made through the steps below, then adjusted values will be written to the EEPROM.

DVD Dual Layer Disc Adjustment Steps:

1. Sled tilt reset
2. Disc check memory DL
3. Wait 500 msec
4. Set disc type DL
5. LD on
6. Spindle start
7. Wait 1 sec

Layer 1 Adjust

8. Focus servo on 0
9. Auto track offset adjust
10. CLVA on
11. Wait 500 msec
12. Tracking on
13. Wait 500 msec
14. Sled on
15. Check CLV lock
16. Auto loop filter offset adjust, Auto focus adjust
17. Auto focus gain adjust
18. Auto focus offset adjust
19. EQ boost adjust
20. Auto loop filter offset adjust
21. Auto Track Gain Adjust

Search Check

22. 32 track jump forward
23. 32 track jump reverse
24. 500 track jump forward
25. 500 track jump reverse

Layer 0 Adjust

26. Focus jump (L1 → L0)
27. Auto track offset adjust L0
28. CLVA on
29. Wait 500 msec
30. Tracking on
31. Wait 500 msec
32. Sled on
33. Check CLV lock
34. Auto focus filter offset adjust
35. Auto Focus Adjust
36. Auto focus gain adjust
37. Auto focus offset adjust
38. EQ boost adjust
39. Auto Loop Filter Offset
40. Auto track gain adjust

Search Check

41. 32 track jump forward
42. 32 track jump reverse
43. 500 track jump forward
44. 500 track jump reverse

Layer Jump Check

45. Layer jump (L0 ? L1)
46. Layer jump (L1 ? L0)
47. All servo stop

2. DRIVE MANUAL OPERATION

Note: This mode is used for design, and not used in service fundamentally.

On the Test Mode Menu screen, press the [2] key on the remote commander, and the Operation Menu will be displayed. For the manual operation, each servo on/off control and adjustment can be executed manually.

```
## Drive Manual Operation ##
        Operation Menu
1. Disc Type
2. Servo Control
3. Track/Layer Jump
4. Non EEPROM Write Adjust
5. EEPROM Write Adjust
6. Memory Check
7. Disc Check Memory
8. Error Rate Display
9. SACD Water Mark

                    Exit: RETURN
```

In using the manual operation menu, take care of the following points. These commands do not provide protection, thus requiring correct operation. The sector address or time code field is displayed when a disc is loaded.

Note:
1. Set correctly the disc type to be used on the Disc Type screen.
2. In case of an alarm, immediately press the [■] button to stop the servo operation, and press the [I/⏻] button to turn the power off.

Basic operation:
(controllable from front panel or remote commander)

[I/⏻]	: Power OFF (release the Test Mode)
[■]	: Servo stop
[⏏]	: Stop and eject
[RETURN]	: Return to Operation Menu or Test Mode Menu
[⏮ PREV], [NEXT ⏭]	: Transition between sub modes of menu
[1] to [9], [10/0]	: Selection of menu items
Cursor [↓]/[↑]	: Increase/Decrease in manually adjusted value

2-1. Disc Type

```
                Disc Type

            Disc Type Select

  1. Disc Type Auto Check
  2. Set Disc Type DVD
  3. Set Disc Type CD
  4. Set Disc Type Hybrid


                          Exit: RETURN
```

2-1-1. Disc Type Auto Check

1) Press the [1] key on the remote commander to display the Disc Type Auto Check screen.
2) Insert a disc and press the [ENTER] key on the remote commander.
3) It judges the type of inserted disc automatically and displays the disc type and so on as below.

```
            Disc Type Auto Check

  Disc Type          xx
  Layer              xx
  Mirr Time          xx
  Mirr Count         xx
  FZC Count          xx
  PI Reference       xx
  PI Peak            xx

  ENTER.Execute

                          Exit: RETURN
```

Disc Type	: CD, DVD or Hybrid (SACD)
Layer	: SINGLE, DUAL or HYBRID
Mirr Time	: Mirror time of between disc surface and record surface when disc type judgment. (hexadecimal number)
Mirr Count	: The number of times which mirror counts between disc surface and record surface when disc type judging. (hexadecimal number)
FZC Count	: The number of times which focus zero cross points of each layer when lens down. (hexadecimal number)
PI Reference	: The average of PI reference voltage. (hexadecimal number)
PI Peak	: PI peak level voltage. It performs only when disc type judgment is successful. (hexadecimal number)

2-1-2. Disc Type DVD

It sets up so that it may judge as a disc type of specification of the disc with which the set was inserted.

[1]: DVD single layer disc (12 cm)
[2]: DVD dual layer disc (0 layer, 12 cm)
[3]: DVD dual layer disc (1 layer, 12 cm)
[4]: DVD-RW disc (12 cm)
[5]: DVD single layer disc (8 cm)
[6]: DVD dual layer disc (0 layer, 8 cm)
[7]: DVD dual layer disc (1 layer, 8 cm)

2-1-3. Disc Type CD

It sets up so that it may judge as a disc type of specification of the disc with which the set was inserted.

[1]: CD disc (normal speed, 12 cm)
[2]: CD disc (double speed, 12 cm)
[3]: CD disc (normal speed, 8 cm)
[4]: CD disc (double speed, 8 cm)
[5]: CD-RW disc (normal speed, 12 cm)
[6]: CD-RW disc (double speed, 12 cm)
[7]: CD-RW disc (normal speed, 8 cm)
[8]: CD-RW disc (double speed, 8 cm)

2-1-4. Disc Type Hybrid

It sets up so that it may judge as a disc type of specification of the disc with which the set was inserted.

[1]: SACD Hybrid disc (SACD layer, 12 cm)
[2]: SACD Hybrid disc (CD layer, normal speed, 12 cm)
[3]: SACD Hybrid disc (CD layer, double speed, 12 cm)
[4]: SACD Hybrid disc (SACD layer, 8 cm)
[5]: SACD Hybrid disc (CD layer, normal speed, 8 cm)
[6]: SACD Hybrid disc (CD layer, double speed, 8 cm)

2-2. Servo Control

Note: Be sure to perform the disc type setup before performing this item.

```
              Servo Control
  1.LD          off R.Sled FWD
  2.Focus       off L.Sled REV
  3.SPDL        off U.Sled Reset
  4.CLVA        off D.Sled Limit
  5.Trk.        off
  6.Sled        off
  7.Fcs.Srch    off


  0.All Servo Off

                          Exit: RETURN
```

On this screen, the servo on/off control necessary for replay is executed. Normally, turn on each servo from 1 sequentially and when CLVA is turned on, the usual trace mode becomes active. In the trace mode, DVD sector address or CD time code is displayed. This is not displayed where the spindle is not locked.
The spindle could run overriding the control if the spindle system is faulty or RF is not present. In such a case, do not operate CLVA.

[1] LD	: Turn on/off the laser.
[2] Focus	: Search the focus and turn on the focus.
[3] SPDL	: Turn on/off the spindle.
[4] CLVA	: Turn on/off normal servo of spindle servo.
[5] Trk.	: Turn on/off the tracking servo.
[6] Sled	: Turn on/off the sled servo.
[7] FCS. Srch	: Turn on/off the focus search.
[8] FCS. OppL	: Turn on/off the focus search to another layer of designated layer in Disc Type setting. (dual layer disc only)
[10/0]	: All servo off.
[R] Sled FWD (right cursor)	: Move the sled forward.
[L] Sled REV (left cursor)	: Move the sled reverse.
[U] Sled FWD (up cursor)	: Reset the sled.
[D] Sled REV (down cursor)	: Limit in the sled.

2-3. Track/Layer Jump

```
        Track/Layer Jump
1.  1Tj          FWD R.Lj L0>L1
2.  1Tj          REV L.Lj L1>L0
3.500Tj Fine     FWD U.Fj L0>L1
4.500Tj Fine     REV D.Fj L1>L0
5.10kTj Dirc     FWD
6.10kTj Dirc     REV
7.20kTj Dirc     FWD
8.20kTj Dirc     REV

0. All Servo Off

                         Exit: RETURN
```

On this screen, track jump, etc. can be performed. Only for the DVD dual layer disc, the focus jump and layer jump are displayed in the right field

- [1] 1Tj FWD : 1 track jump forward.
- [2] 1Tj REV : 1 track jump reverse.
- [3] 500Tj FWD: 500 track jump (fine search)forward.
- [4] 500Tj REV : 500 track jump (fine search) reverse.
- [5] 10kTj FWD: 10k track jump (direct search) forward.
- [6] 10kTj REV : 10k track jump (direct search) reverse.
- [7] 20kTj FWD: 20k track jump (direct search) forward.
- [8] 20kTj REV : 20k track jump (direct search) reverse.
- [10/0] : All servo off.

2-4. Non EEPROM Write Adjust

```
      Non EEPROM Write Adjust

1. Focus Offset
2. Focus Gain
3. Trk.  Offset Coarse
4. Trk.  Offset Fine
5. Trk.  Gain
6. EQ    Boost

0.All Servo Off


                         Exit: RETURN
```

On this screen, each item can be adjusted manually. Select the desired number [1] to [10/0] from the remote commander, and current setting for the selected item will be displayed, then increase or decrease numeric value with the [↑] key or [↓] key. This value is stored in the EEPROM. If CLV has been applied, the jitter is displayed for reference for the adjustment.

- [1] Focus Offset : Adjusts focus offset.
- [2] Focus Gain : Adjusts focus gain.
- [3] TRK. Offset : Adjusts tracking offset of the RF amp (IC001) side.
- [4] TRK. Offset : Adjusts tracking offset of the DSP (IC401) side.
- [5] TRK. Gain : Adjusts track gain.
- [6] EQ Boost : Adjusts amount of boost of equalizer.
- [10/0] : All servo off.

2-5. EEPROM Write Adjust

```
      EEPROM Write Adjust

1. Focus Offset
2. Focus Gain
3. Trk.  Offset Coarse
4. ------
5. Trk.  Gain
6. EQ    Boost

0.All Servo Off


                         Exit: RETURN
```

On this screen, each item can be adjusted automatically. Select the desired number [1] to [10/0] from the remote commander, and selected item is adjusted automatically.

- [1] Focus Offset : Adjusts focus offset.
- [2] Focus Gain : Adjusts focus gain.
- [3] TRK. Offset : Adjusts tracking offset of the RF amp (IC001) side.
- [5] TRK. Gain : Adjusts track gain.
- [6] EQ Boost : Adjusts amount of boost of equalizer.
- [10/0] : All servo off.

2-6. Memory Check

Display images are shown as follows, and all two screens are able to switch by the [↑] key (UP) or [↓] key (DW).

```
EEPROM Data 1/2   CD  SL  L0  L1
Focus  Gain       xx  xx  xx  xx
Trk.   Gain       xx  xx  xx  xx
Focus  Offset     xx  xx  xx  xx
Trk.   Offset     xx  xx  xx  xx
EQ.    Boost      xx  xx  xx  xx
PI     Level      xx  xx  --  --
Fcs. Balance      --  xx  --  --
Jitter            xx  xx  xx  xx
Mirror Time       xx  xx  xx  --
FE Level          --  xx  --  --
Traverse Lvl.     --  xx  --  --
Next:DW Default:CLR    Exit:RET
```

```
EEPROM Data 2/2   CDRW DVDRW
Focus  Gain         xx    xx
Trk.   Gain         xx    xx
Focus  Offset       xx    xx
Trk.   Offset       xx    xx
EQ.    Boost        xx    xx




Prev:UP Default:CLR       Exit:RET
```

On this screen, current servo adjusted data stored in the EEPROM are displayed. The adjusted data are initialized by pressing the [CLEAR] key, but be careful that they are not recoverable after initialization.
Before clearing the adjusted data, make a note of the set data. This screen will also appear if [0]-All is selected in the Drive Auto Adjustment. In this case, default setting cannot be made.

2-7. Disc Check Memory

```
        Disc Check Memory

1. SL Disc check
2. CD Disc check
3. DL Disc check









                         Exit: RETURN
```

On this screen, measure the mirror time of chucked disc, and write to the EEPROM.

2-8. Error Rate Display

```
          Error Rate Display
              UC    CR  Address
PI1 Err  Now xx xxxx xxxxxxxx
         Max xx xxxx xxxxxxxx
         Avg xx xxxx
PI2 Err  Now xx xxxx xxxxxxxx
         Max xx xxxx xxxxxxxx
         Avg xx xxxx
PO  Err  Now xx xxxx xxxxxxxx
         Max xx xxxx xxxxxxxx
         Avg xx xxxx

Start:ENTER               Exit: RETURN
```

On this screen, measure and display the error rate.

UC : Incorrect value
CR : Correct value

2-9. SACD Water Mark Check

```
SACD Water Mark Check



 PSP AMP
 PSN                    *









 Start: ENTER              Exit: RETURN
```

On this screen, measure the PSP AMP value and PSN value of SACD water mark.

3. EMERGENCY HISTORY

On the Test Mode Menu screen, selecting [4] displays the information such as servo emergency history.
The history information from last 1 up to 10 can be scrolled with the [↑] key or [↓] key. Also, specific information can be displayed by directly entering that number with ten keys.

```
      ### EMG. History ###

  Laser Hours     CD  xxxxhxxm
                  DVD xxxxhxxm

a.   bb xx xx xx  xx xx xx xx
     xx xx xx xx  xx xx xx xx

a.   bb xx xx xx  xx xx xx xx
     xx xx xx xx  xx xx xx xx

  Select:1-9        Scroll:UP/DOWN
 (1.Latest EMG.)     Exit: RETURN
```

xxxxhxxm : The laser on total hours. Data below minutes are omitted.
a. : Error number.
bb : Error code.
xx : Not used.

- Clearing History Information

Clearing laser hours:
Press the [DVD DISPLAY] and [CLEAR] keys in this order.
Then both CD and DVD data are cleared.

Clearing emergency history:
Press the [DVD TOP MENU] and [CLEAR] keys in this order.

Initializing set up data:
Press [DVD MENU] and [CLEAR] keys in this order.
The data have been initialized when "EEPROM Initialize Finished.". message is displayed. The EMG. History screen will be restored soon.

- Code list of Emergency History

10: Communication to RF AMP (IC001) failed.
11: Each servo for focus, tracking, and spindle is unlocked.
12: Check sum error of EEPROM (IC203).
14: Communication to servo DSP (IC401) failed, or servo DSP (IC401) is faulty.
15: Communication to DVD decoder (IC701) failed, or DVD decoder (IC701) is faulty.
16: Communication to DSD decoder (IC801) failed, or DSD decoder (IC801) is faulty.
20: Initialization of sled servo failed. It is not placed in the initial position.
23: Sled servo operation error.
24: Made a request to move the sled servo to wrong position.
30: Tracking balance adjustment error.
31: Tracking gain adjustment error.
33: Focus bias adjustment error.
34: Focus gain adjustment error.
35: Equalizer adjustment error.
40: Focus servo does not operate.
41: With a DVD dual layer disc, focus jump failed.
50: CLV (spindle) servo does not operate.
51: Spindle does not stop.
60: Made a request to seek nonexistent address.
61: Seek error of retry more than regulated times.
70: Control data could not be read.
80: Disc reading failed.

4. MECHA ERROR HISTORY

On the Test Mode Menu screen, selecting [5] displays the information of mechanism deck error history.
The history information from last 1 up to 8 can be scrolled with the [↑] key or [↓] key. Also, specific information can be displayed by directly entering that number with ten keys.

```
    ### Mecha Error History ###

  1. aa bb cc dd xx xx xx xx
  2. aa bb cc dd xx xx xx xx
  3. aa bb cc dd xx xx xx xx
  4. aa bb cc dd xx xx xx xx
  5. aa bb cc dd xx xx xx xx
  6. aa bb cc dd xx xx xx xx
  7. aa bb cc dd xx xx xx xx
  8. aa bb cc dd xx xx xx xx

                    Scroll:UP/DOWN
(1.Latest Err.)       Exit: RETURN
```

aa : The error in the midst of initializing the mechanism deck.
bb : The error in the midst of loading operation.
cc : The error in the midst of up/down the stocker.
dd : The error in the midst of switching the mechanism deck mode.
xx : Not used.

• Error code (aa)
FF : Complete the initializing. (normal operation)
11 : Stocker movement (to chucking position) failing in the midst of initializing the mechanism deck.
12 : Stocker movement (to chucking position) failing in the midst of initializing the mechanism deck.
1x : Initializing the mechanism deck.
2x : Initializing the mechanism deck.
3x : Initializing the mechanism deck.
41 : Disc eject failing in the midst of initializing the mechanism deck.
4x : Initializing the mechanism deck.
50 : Disc eject failing in the midst of initializing the mechanism deck.
5x : Initializing the mechanism deck.
A2 : Disc eject failing in the midst of initializing the mechanism deck.
Ax : Initializing the mechanism deck.
D3 : Disc eject failing in the midst of initializing the mechanism deck.
Dx : Initializing the mechanism deck.
Ex : Initializing the mechanism deck.

• Error code (bb)
00 : Initializing the mechanism deck.
10 : Retry over of eject and loading.
30 : Open operation in no disc status.
60 : Retry over of eject and loading.
70 : Disc is chucking position.
81 : Retry failed of disc movement from chucking position to stocker.
83 : Retry preparation failed of disc movement from chucking position to stocker.
90 : Disc is stored in the stocker.
A1 : Retry failed of disc movement from stocker to chucking position.
A3 : Retry preparation failed of disc movement from stocker to chucking position.
B0 : Just before the release operation.
B1 : Retry failed of the release operation.

• Error code (cc)
10 : Under a stop.
22 : Retry preparation failed.
23 : Retry failed.

• Error code (dd)
10 : Under a stop.
22 : Retry preparation failed.
23 : Retry failed.

5. VERSION INFORMATION

On the Test Mode Menu screen, selecting [6] displays the ROM version and region code.
The parenthesized hexadecimal number in version field is checksum value of ROM.

```
     ## Version Information ##

IF con.   Ver.x. xx

SYScon.   Ver.x. xx  (xxxx)
      Model      DAV-SCX
      Region     0x
      Config     xxxxxxxx

Front End Ver.x.xx


                       Exit: RETURN
```

IF con. : The version of system controller(IC901).
SYScon. : The version of DVD system processor (IC206).
Front End: The version of mechanism controller (IC301).

6. VIDEO LEVEL ADJUSTMENT

On the Test Mode Menu screen, selecting [7] displays color bars for video level adjustment. During display of color bars, OSD disappears but the menu screen will be restored if pressing the [RETURN] key.

SECTION 5
ELECTRICAL ADJUSTMENT

[TEST DISC LIST]

Use the following test disc on test mode.
TDV-520CSO (DVD-SL): PART No. J-2501-236-A
LUV-P01 (CD): PART No. 4-999-032-01
TDV-540C (DVD-DL): PART No. J-2501-235-A
Note: Do not use exiting test disc for DVD.

AUTO SERVO ADJUSTMENT

After parts related to the servo circuit (RF amplifier (IC001), DSP (IC401), motor driver (IC501), EEPROM (IC302) so on) are replaced, re-adjusting the servo circuit is necessary. Select "ALL" at "1. DRIVE AUTO ADJUSTMENT" (Refer to page 23 in TEST MODE) and adjust DVD-SL (single layer), CD and DVD-DL (dual layer).

SECTION 6
DIAGRAMS

6-1. CIRCUIT BOARDS LOCATION

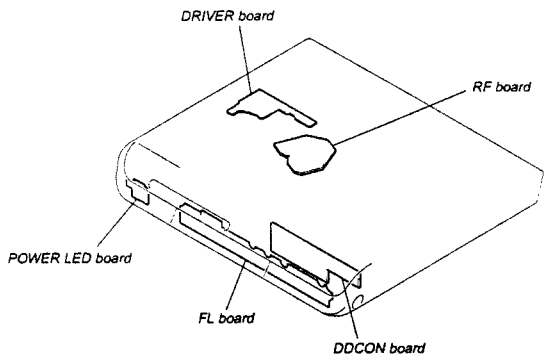

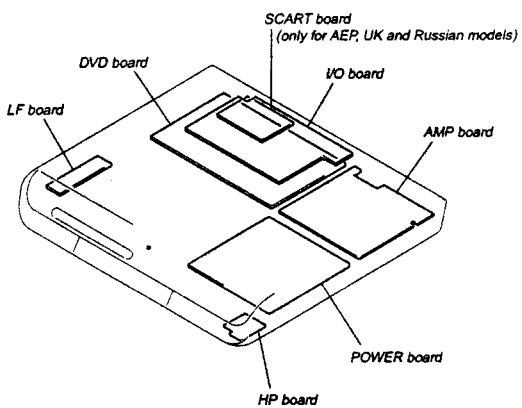

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- ▭ : panel designation.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

- ——— : B+ Line.
- - - - : B– Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages and waveforms are dc with respect to ground in service mode.
- Waveforms are taken with a oscilloscope.
  Voltage variations may be noted due to normal production tolerances.
  no mark : DVD STOP
- Circled numbers refer to waveforms.
- Signal path.
  - ⇨ : AUDIO
  - ⇨ : CD PLAY
  - ⇨ : DVD PLAY
  - ⇨ : TUNER
  - ⇨ : VIDEO
  - ⇨ : OPTICAL DIGITAL IN
  - ⇨ : VIDEO IN
  - ⇨ : CHROMA
  - ⇨ : Y
  - ⇨ : COMPONENT VIDEO
  - ⇨ : AUX IN
  - ⇨ : SACD PLAY
  - ⇨ : R, G, B
- Abbreviation
  - AUS : Australian model
  - E32 : 110-240V AC area in E model
  - EA : Saudi Arabia model
  - HK : Hong Kong model
  - KR : Korean model
  - MX : Mexican model
  - RU : Russian model
  - SP : Singapore model
  - TW : Taiwan model

For printed wiring boards.

Note:

- o——— : parts extracted from the component side.
- ○ : Through hole.
- : Pattern from the side which enables seeing.
  (The other layers' patterns are not indicated.)

Caution:

Pattern face side: (SIDE A)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (SIDE B)	Parts on the parts face side seen from the parts face are indicated.

- **Indication of transistor**

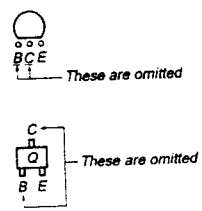

6-2. BLOCK DIAGRAMS – RF/SERVO SECTION –

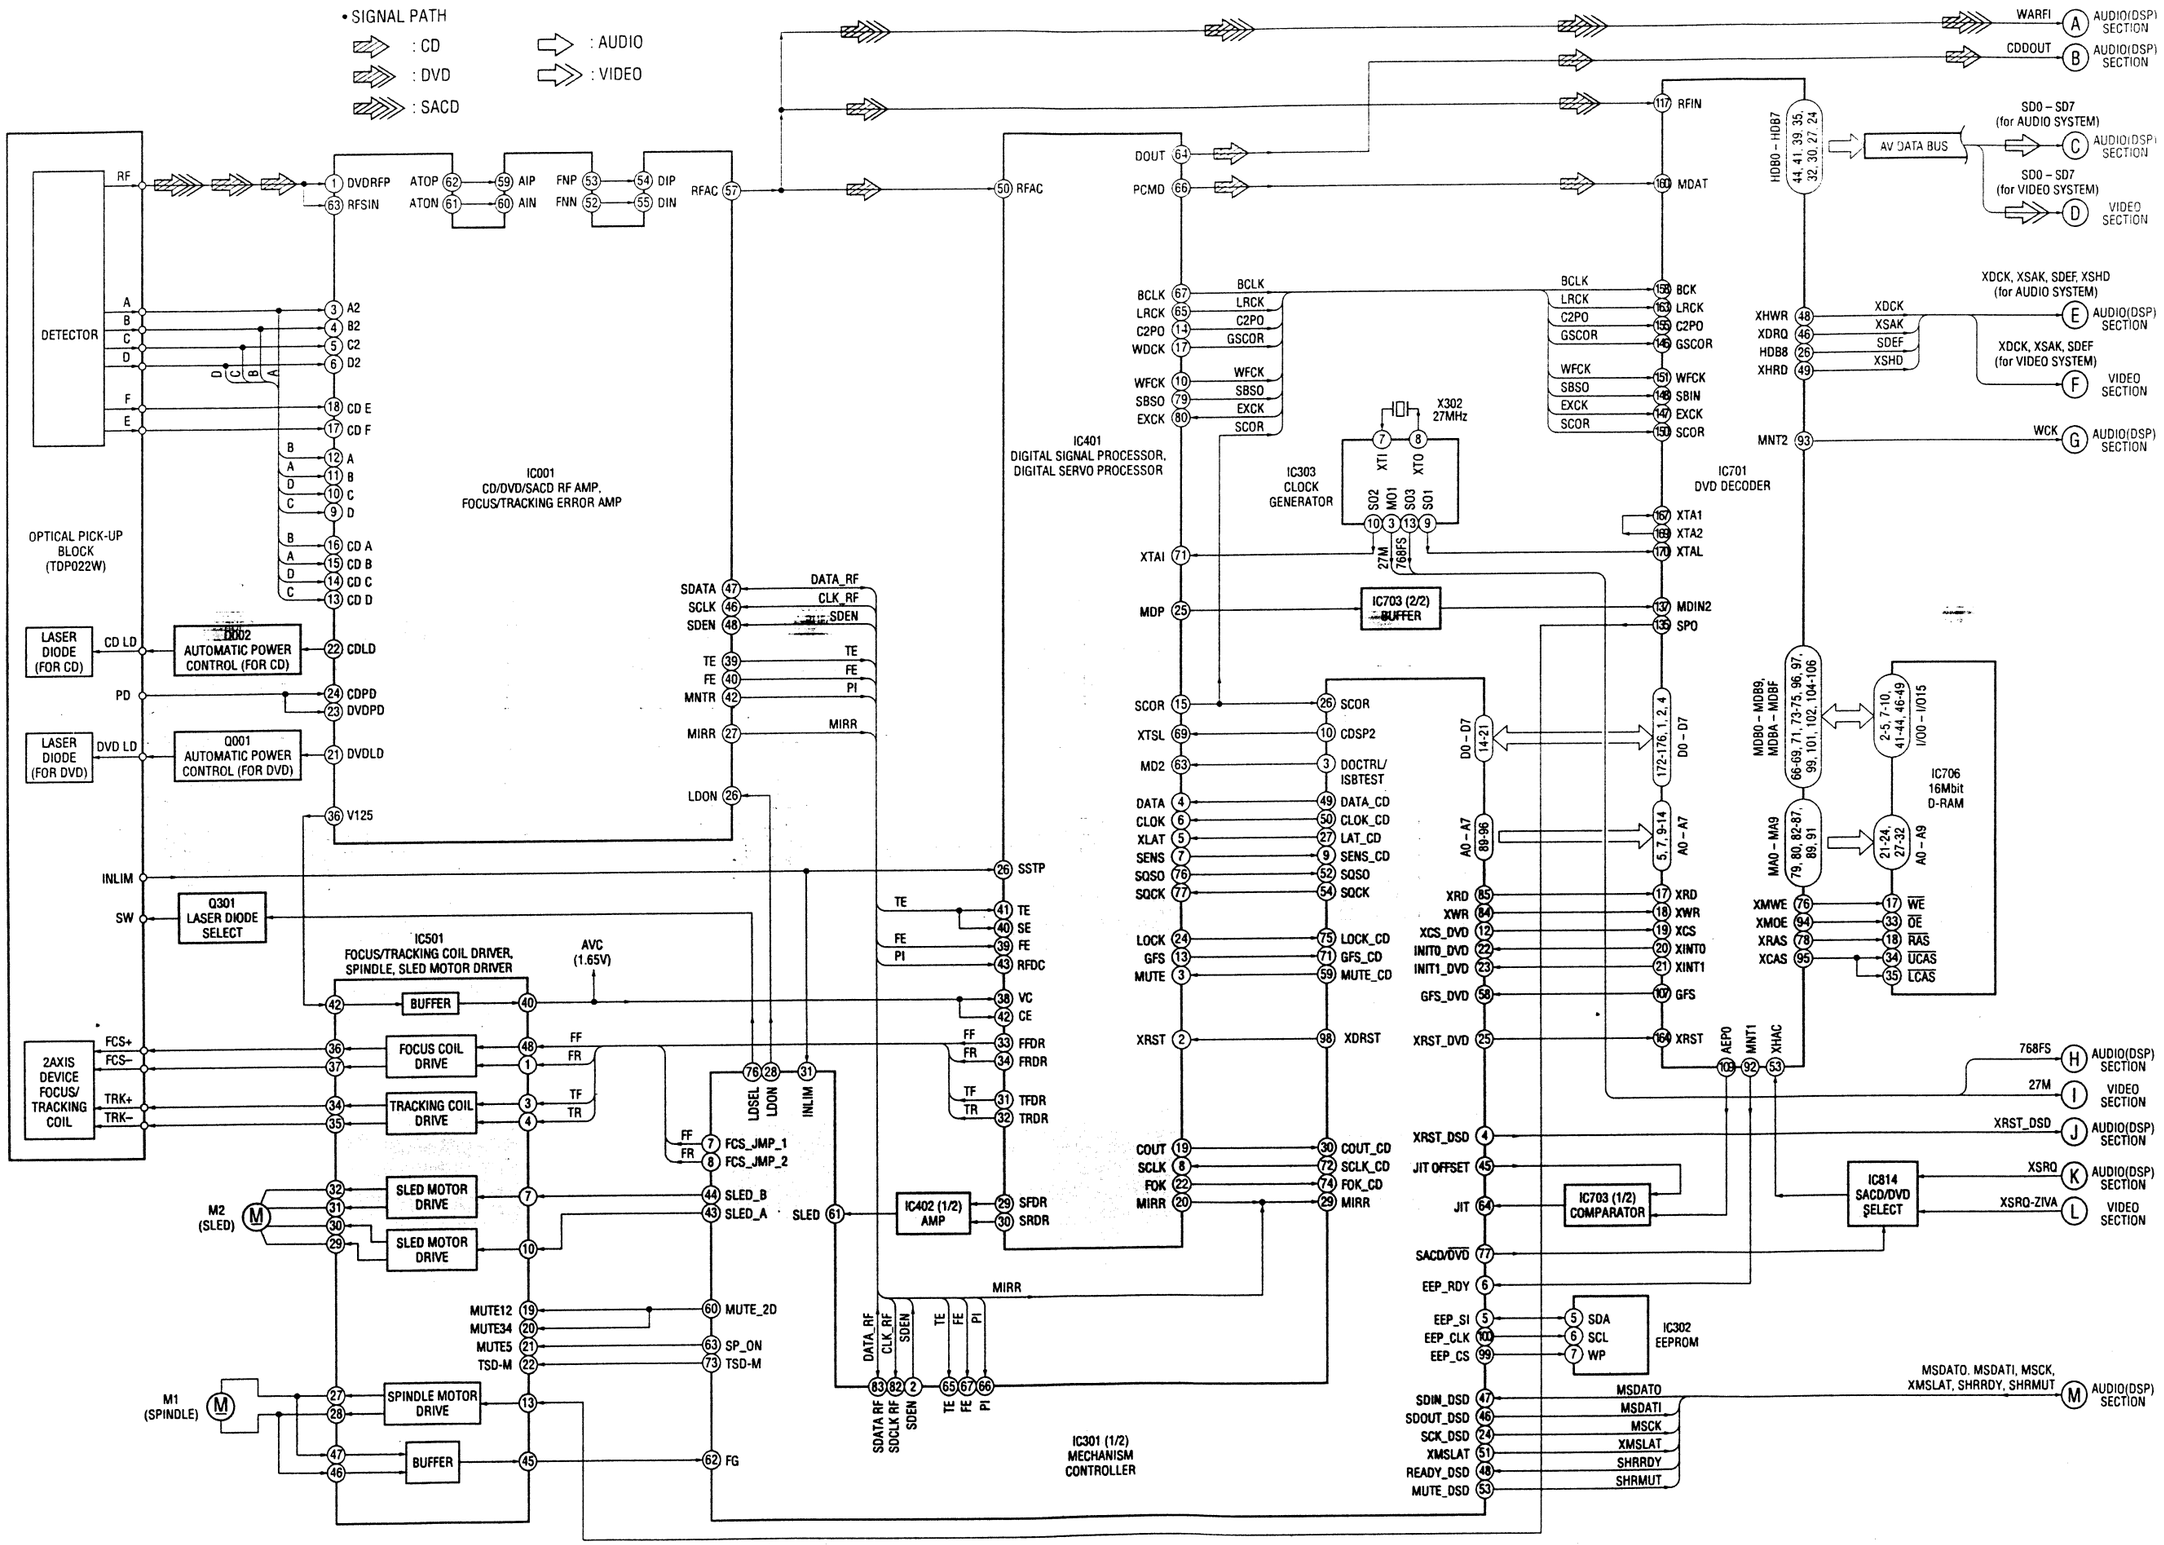

– AUDIO (DSP) SECTION –

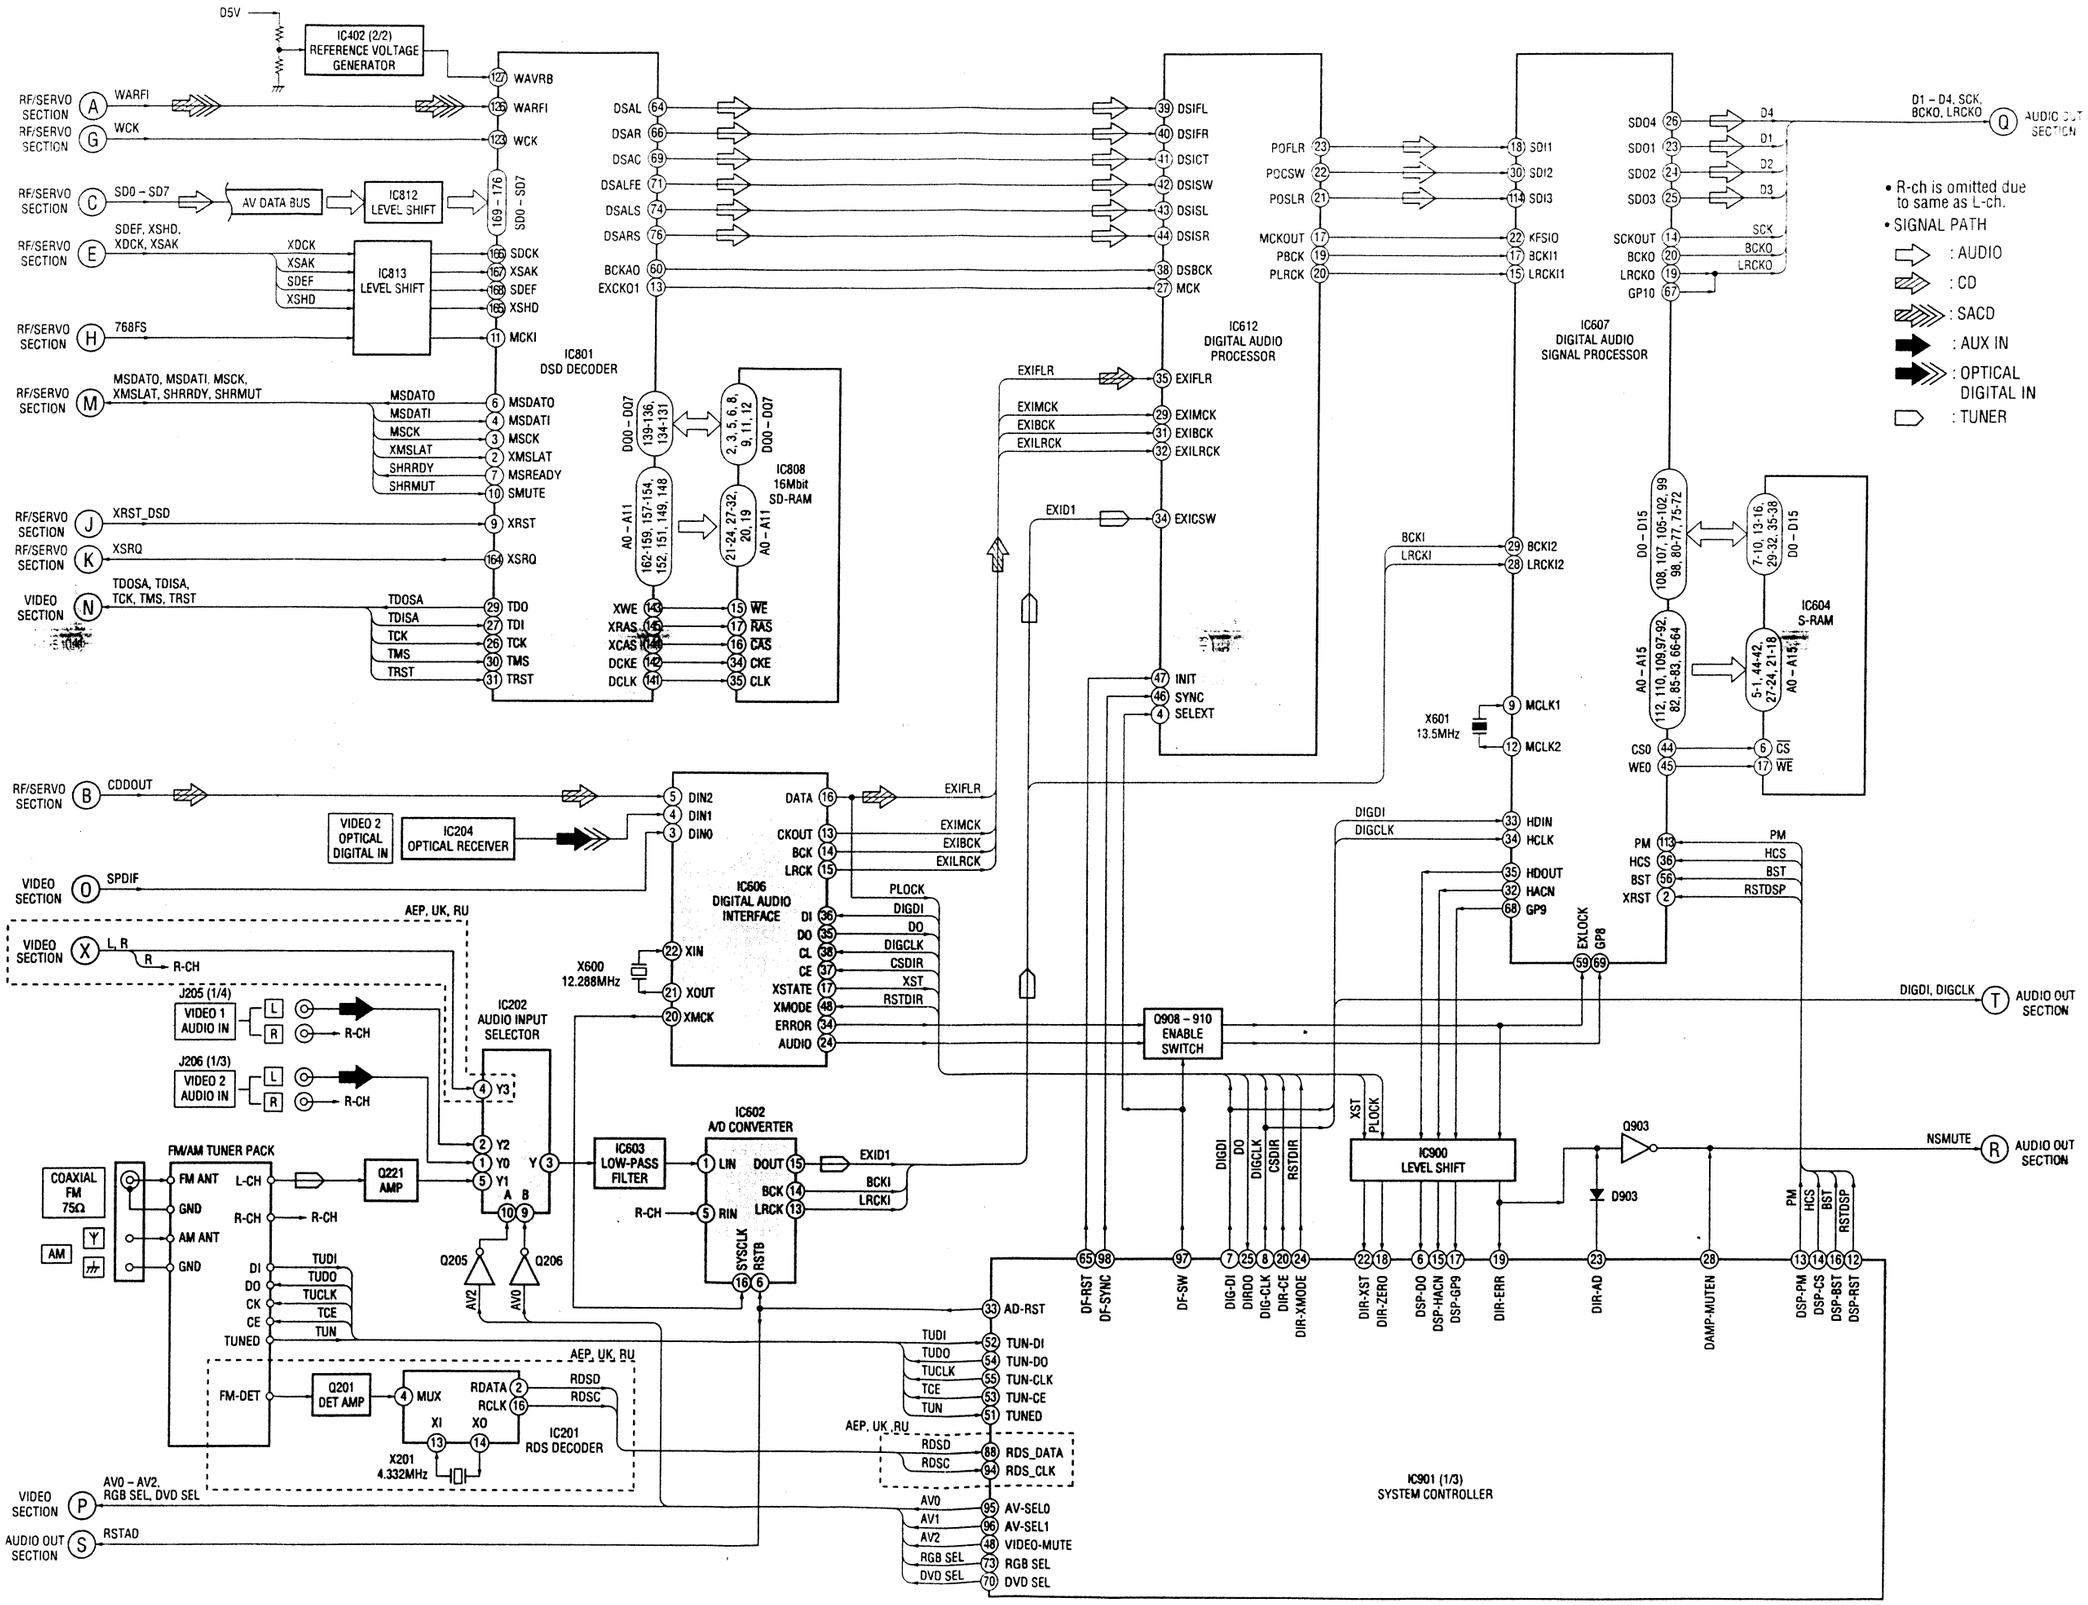

– AUDIO OUT SECTION –

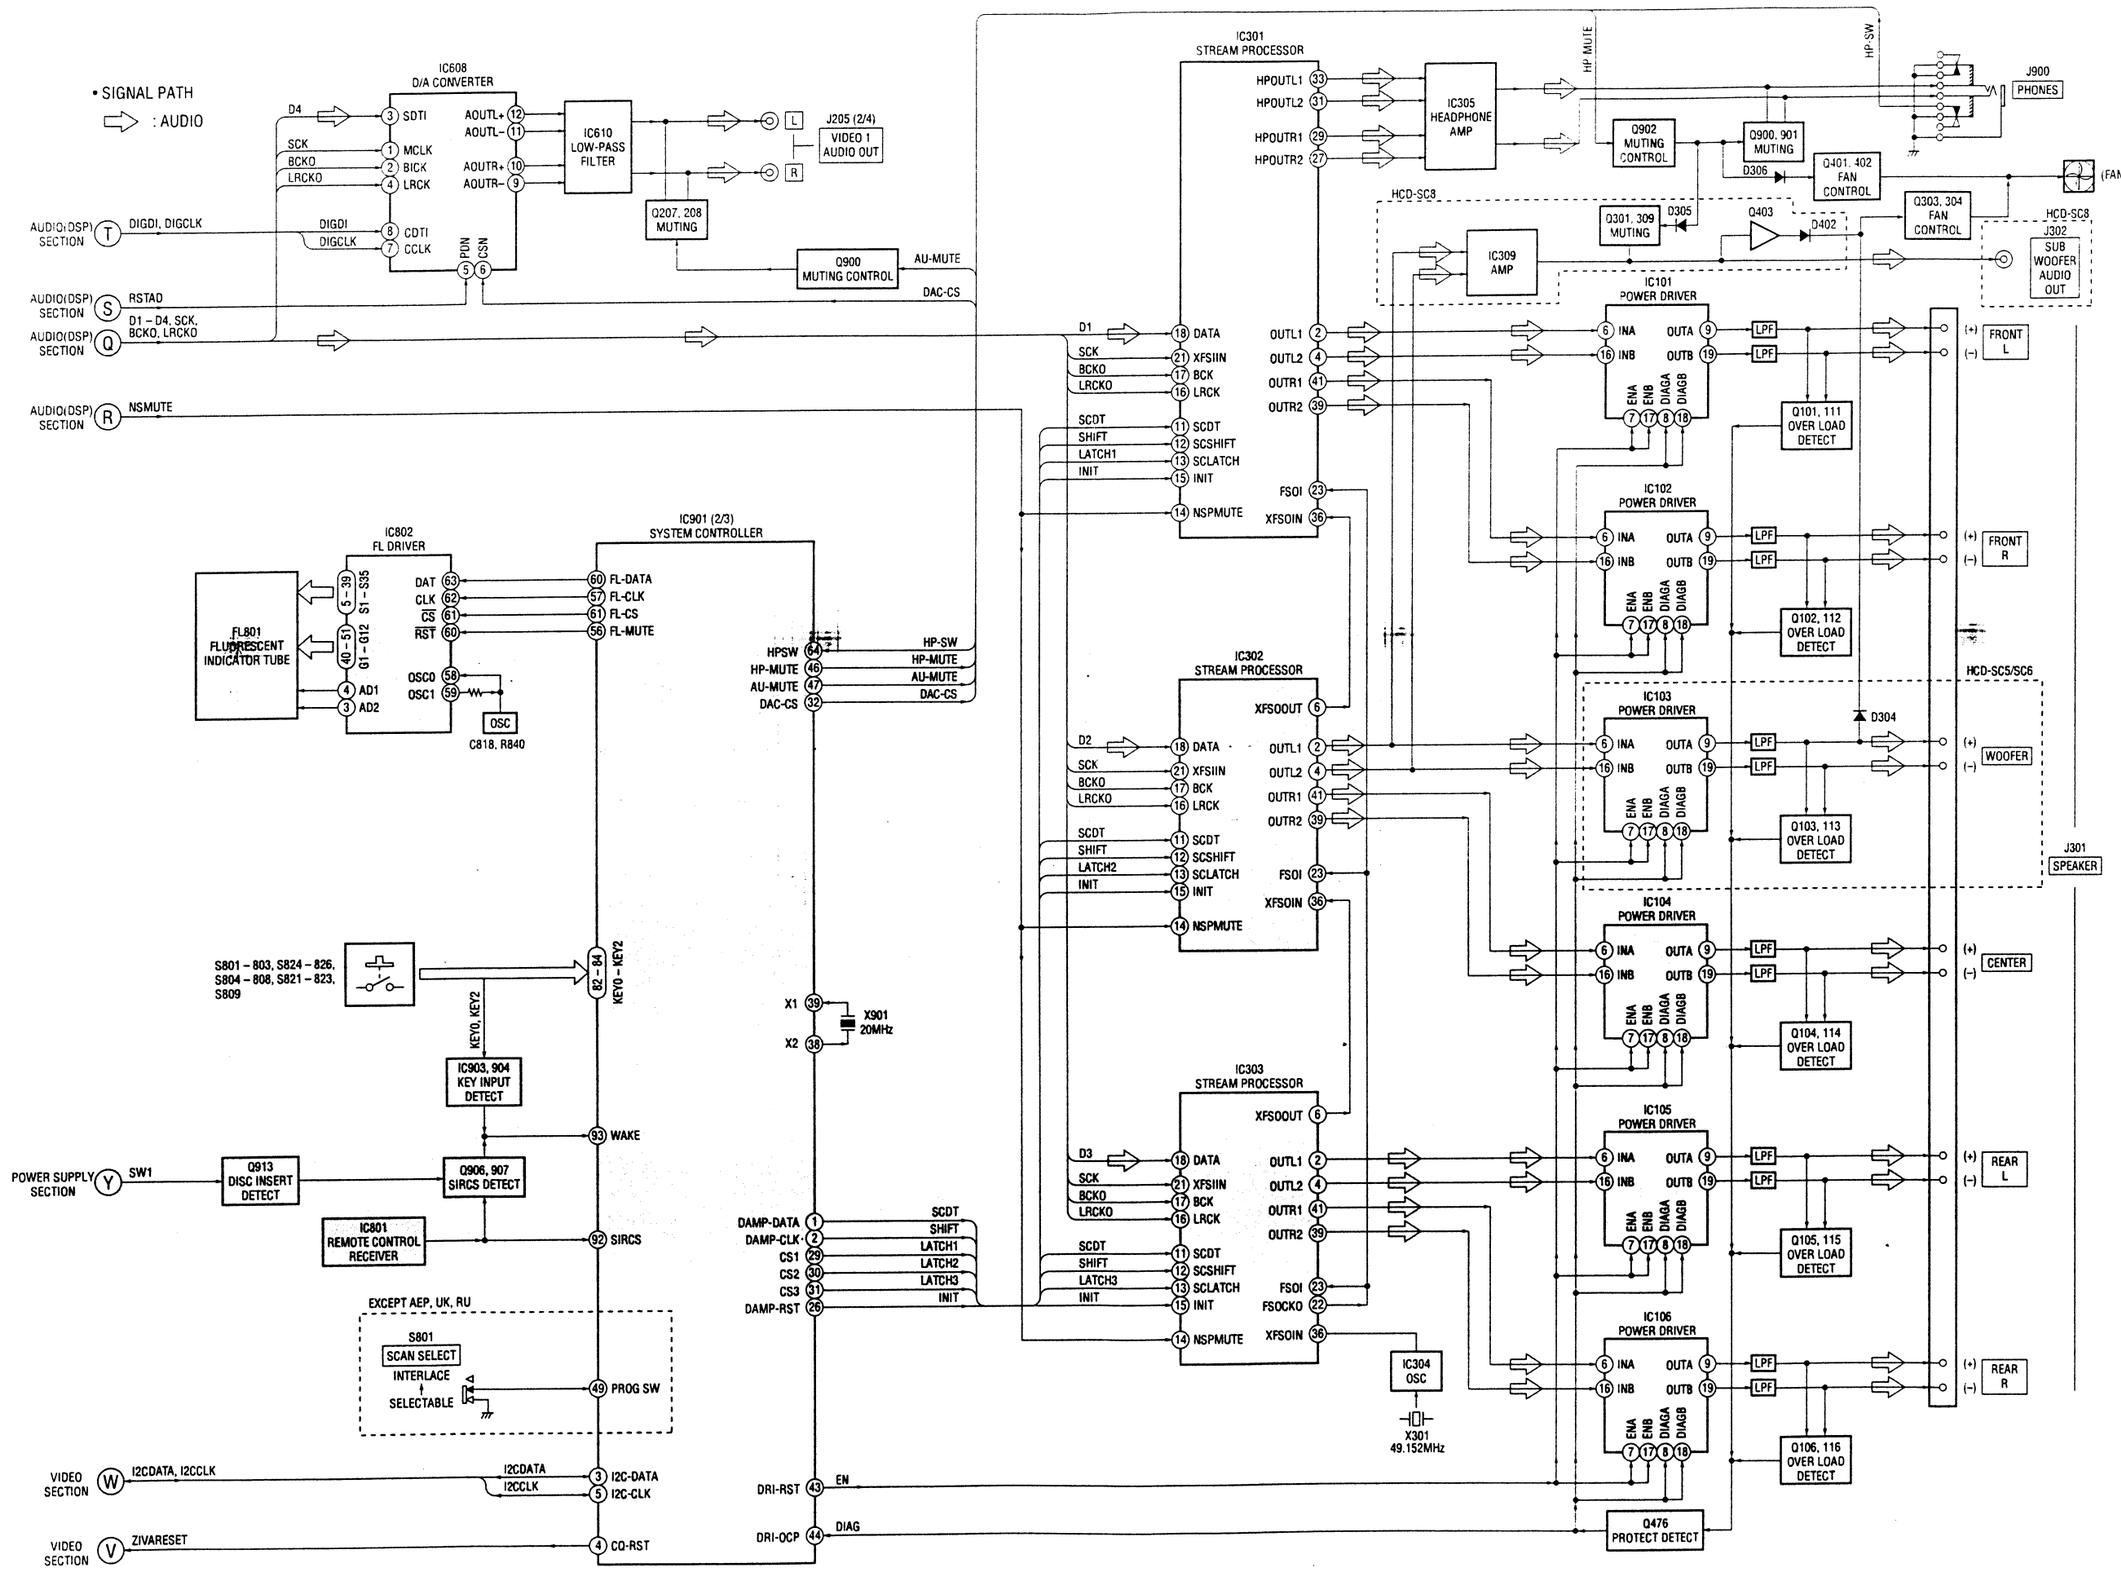

– VIDEO SECTION –

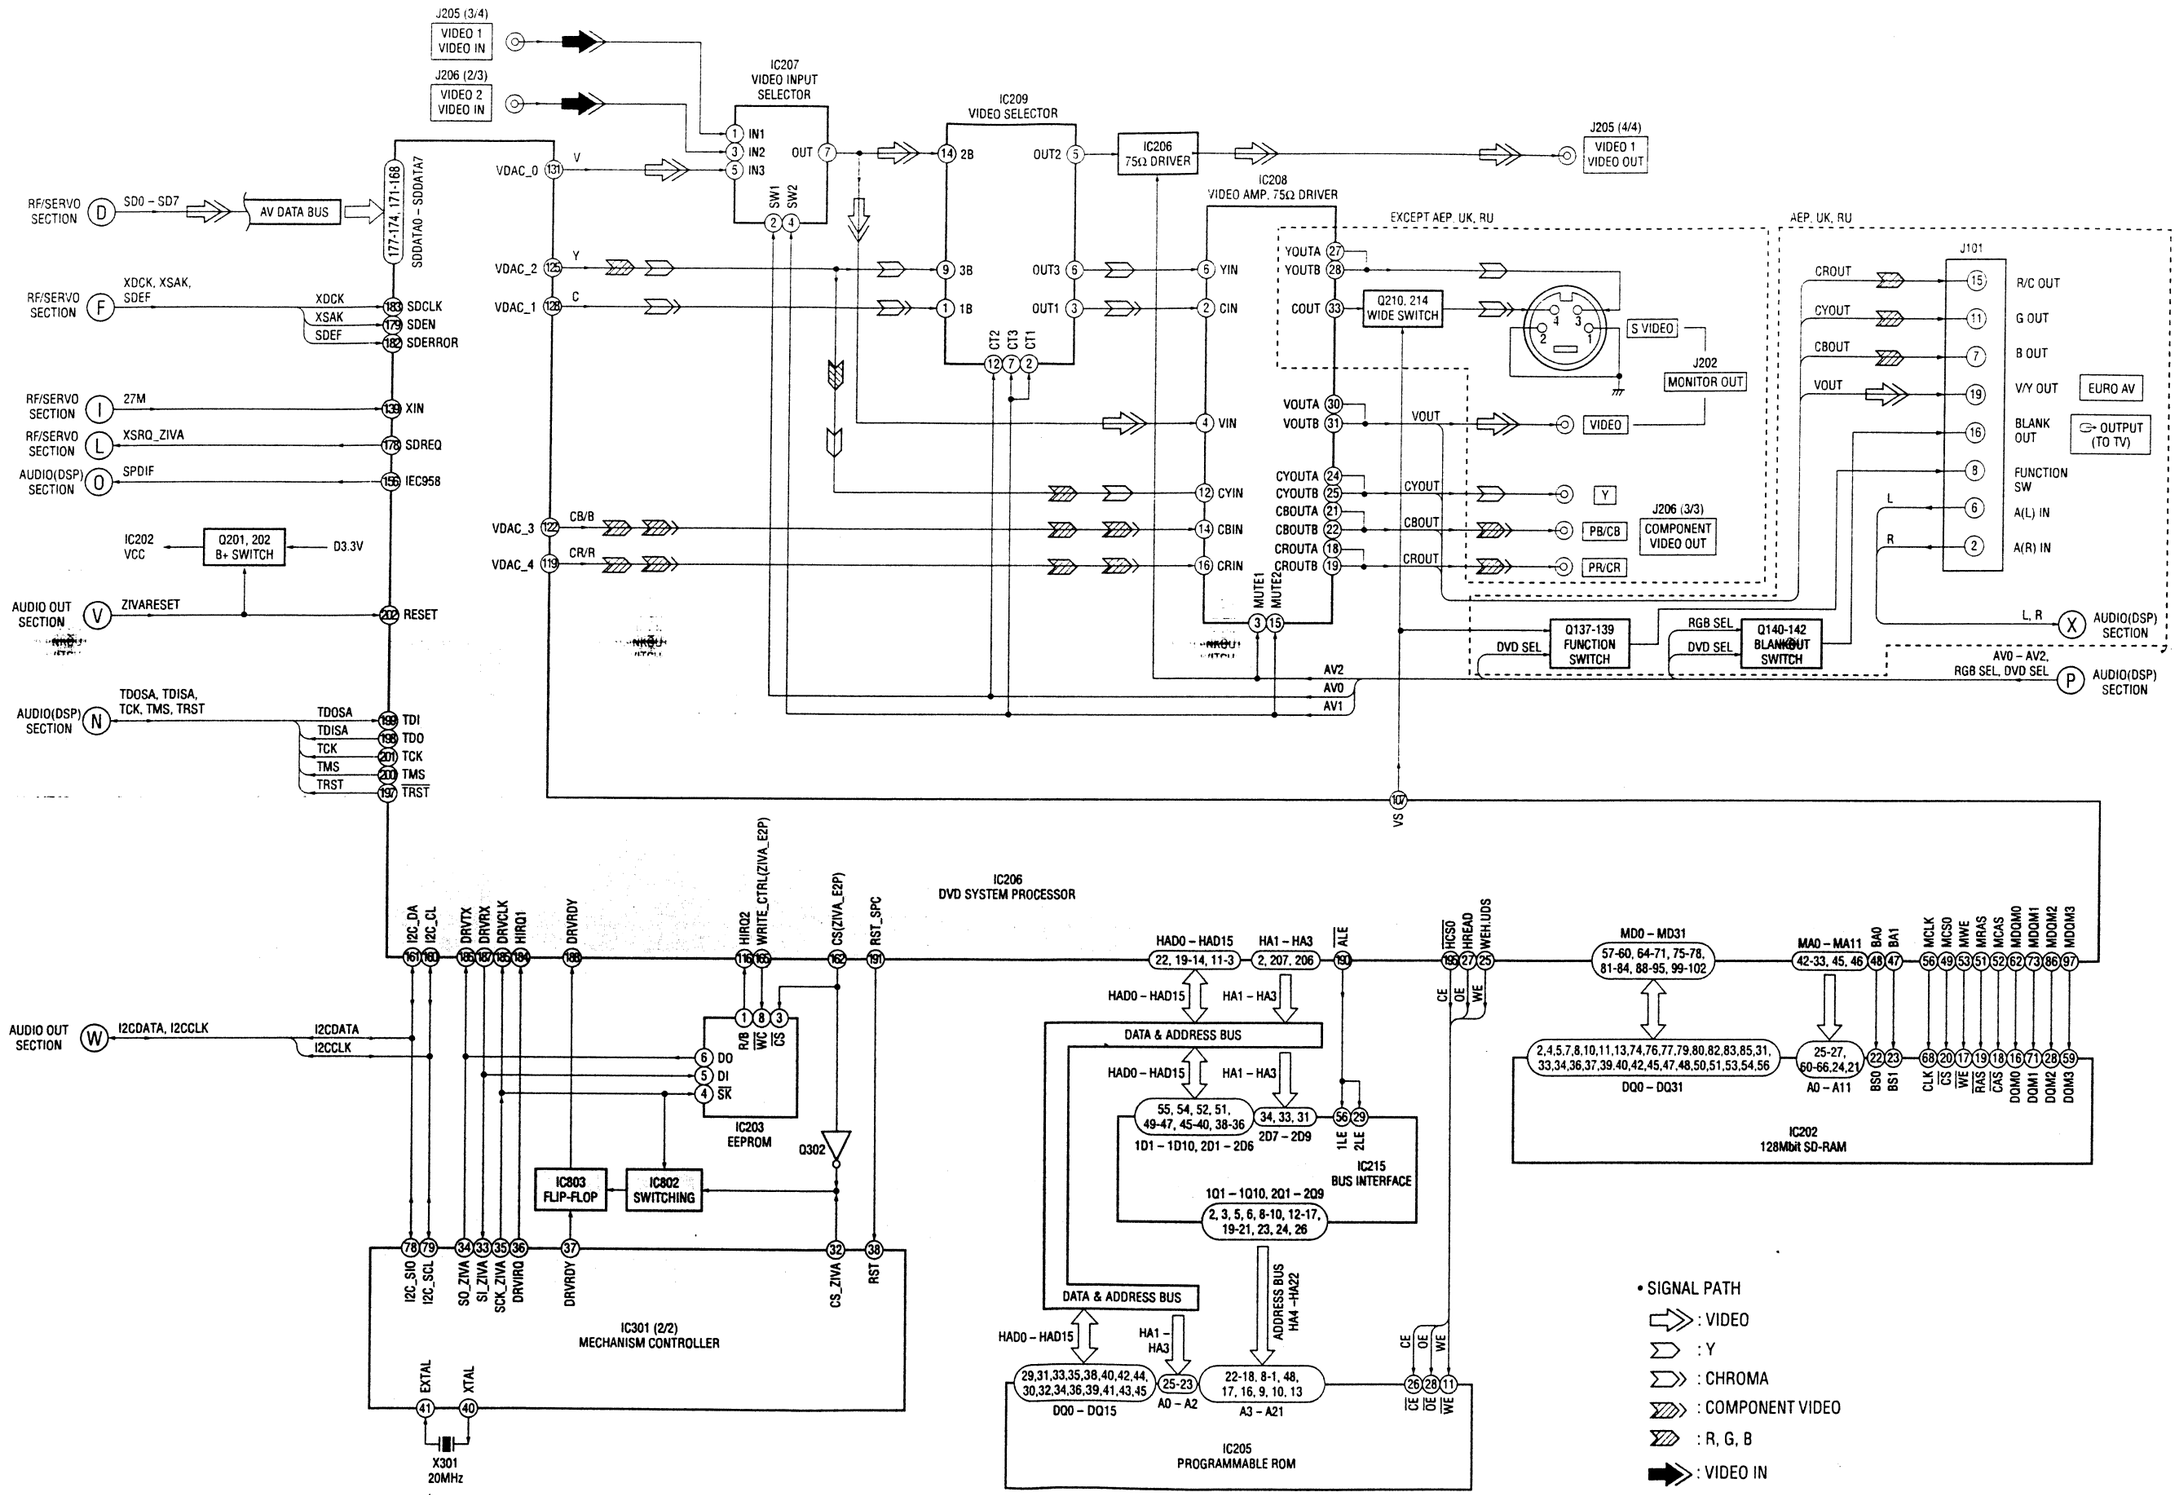

35

– POWER SUPPLY SECTION –

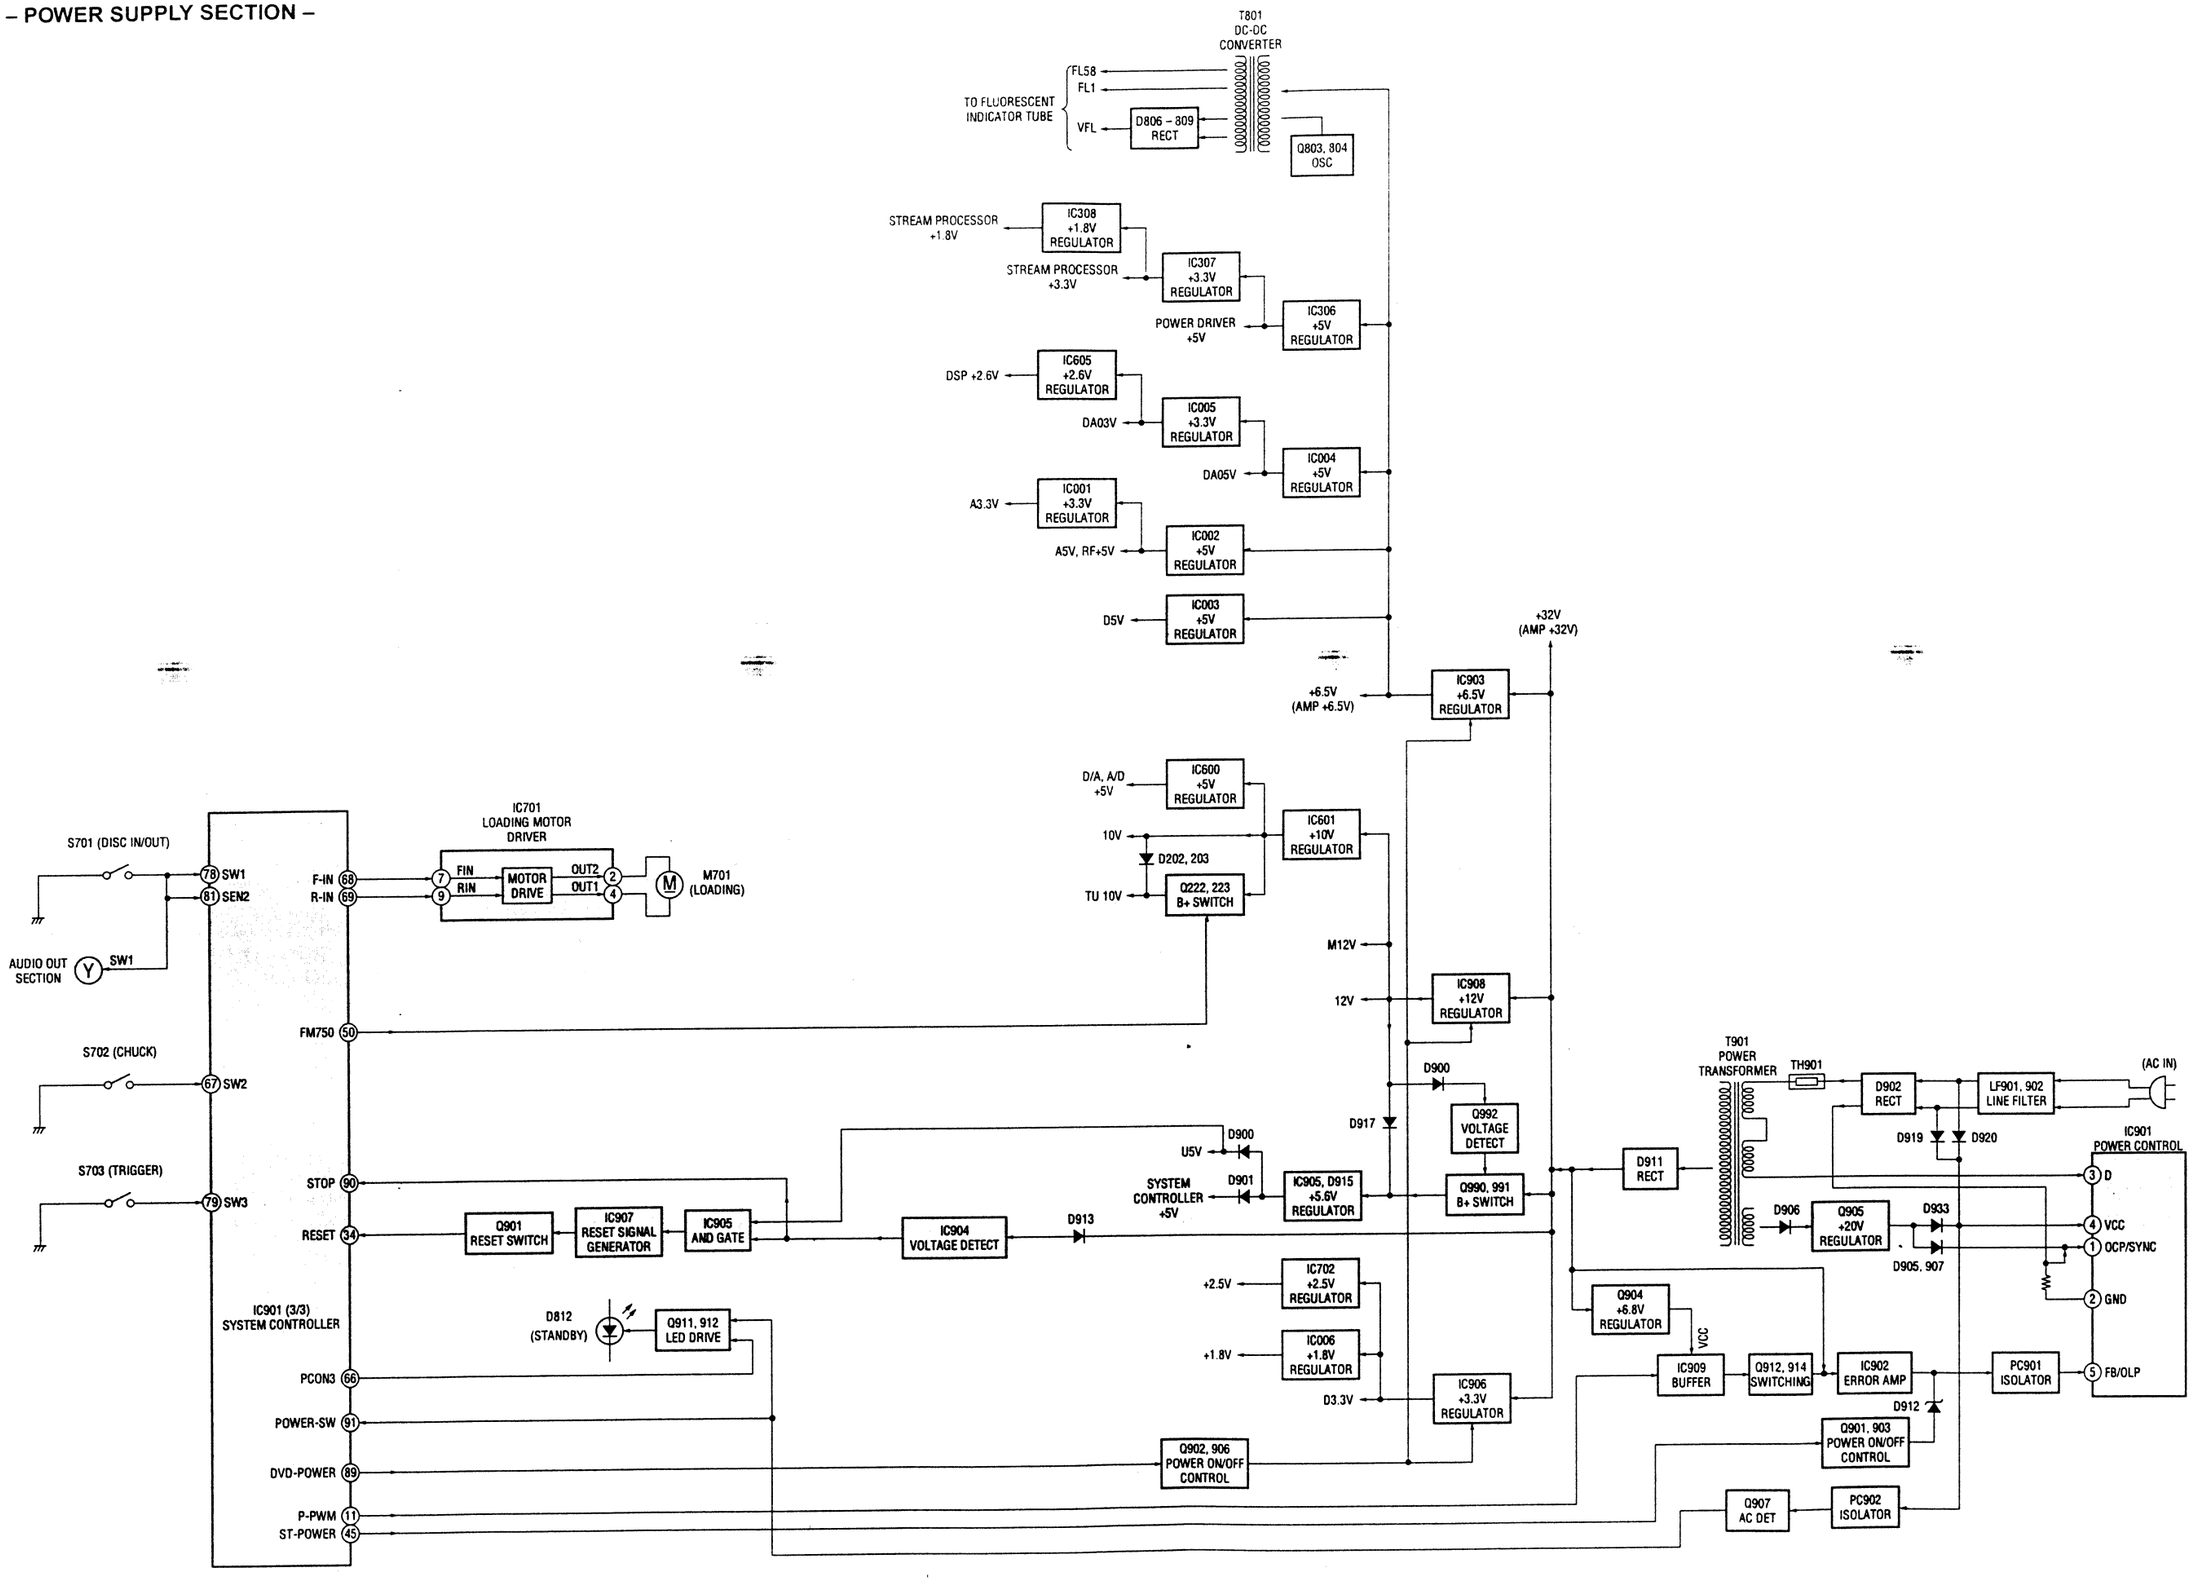

36

6-3. PRINTED WIRING BOARD – RF SECTION –

• See page 30 for Circuit Boards Location. • : Uses unleaded solder.

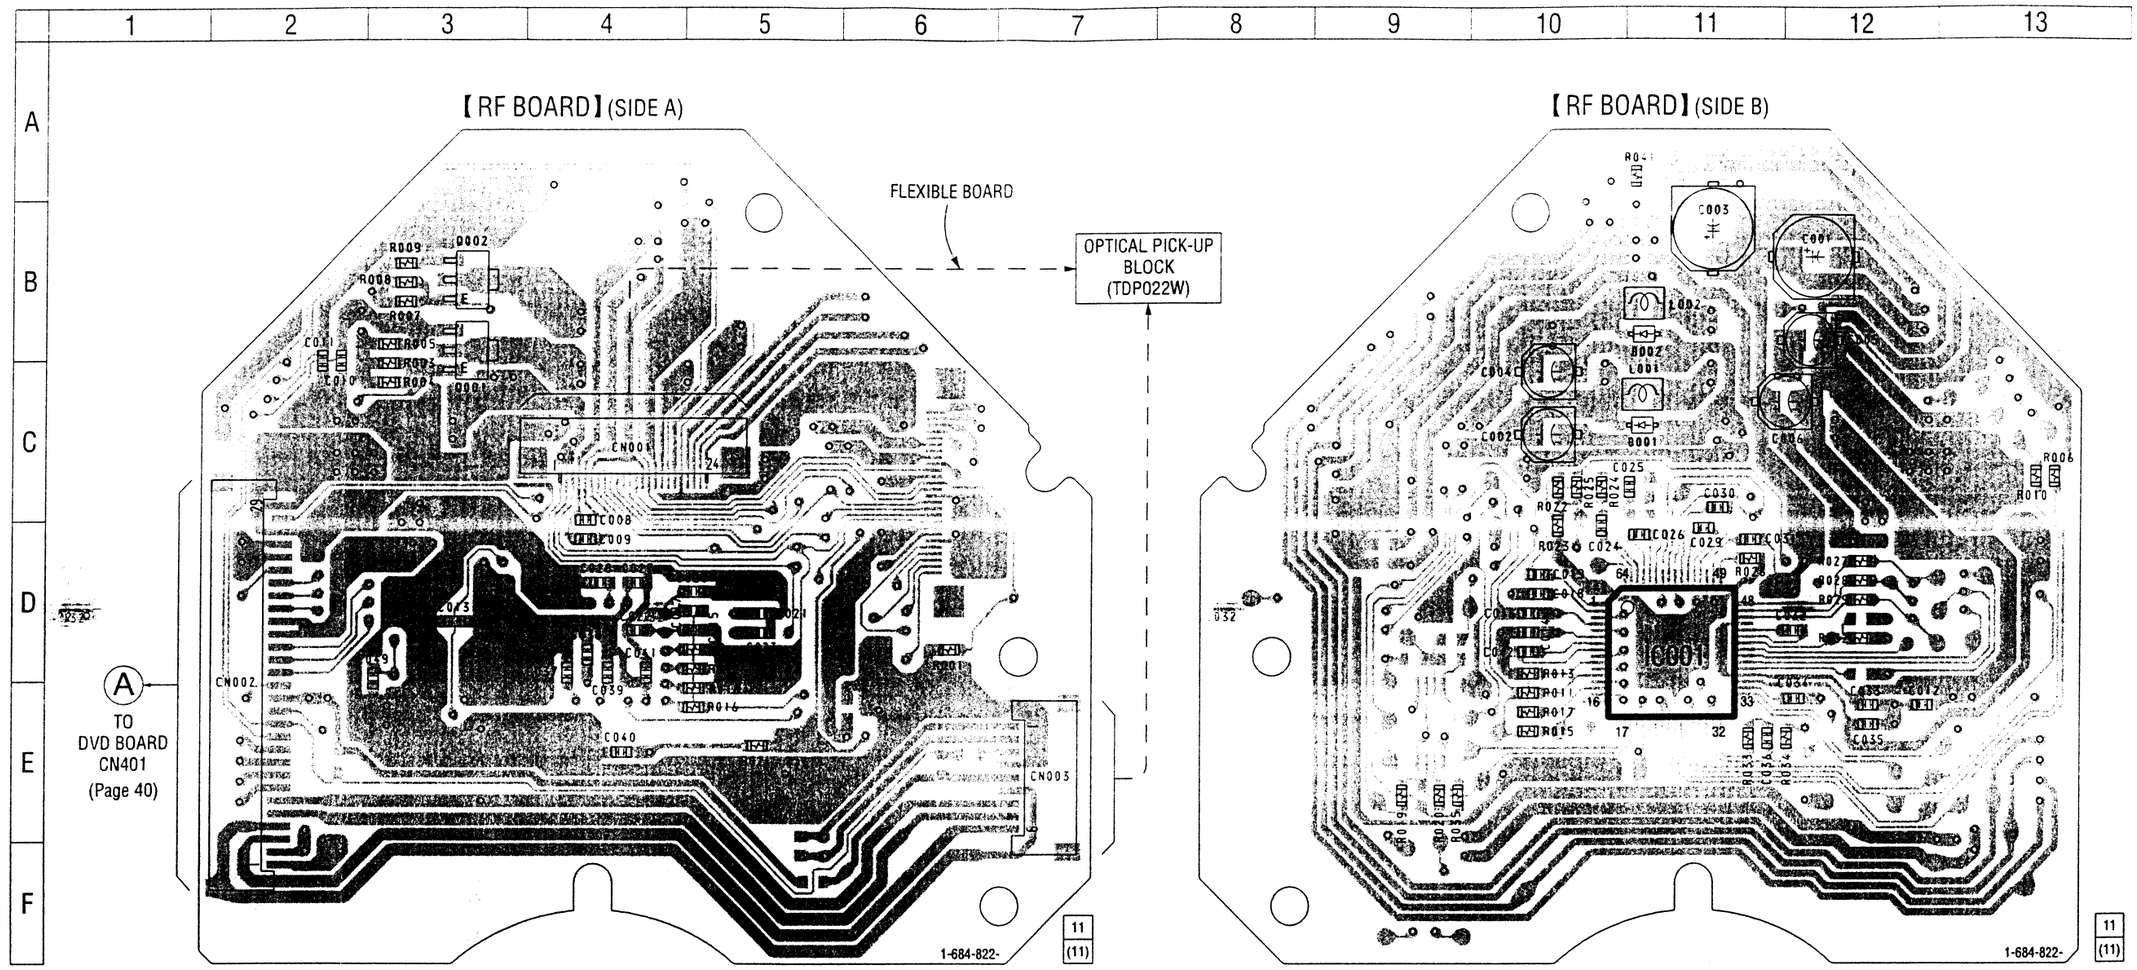

• **Semiconductor Location**

Ref. No.	Location
D001	B-3
D002	B-3
IC001	D-11
Q001	C-11
Q002	B-11

6-4. SCHEMATIC DIAGRAM – RF SECTION –

• See page 63 for Waveforms. • See page 72 for IC Block Diagram.

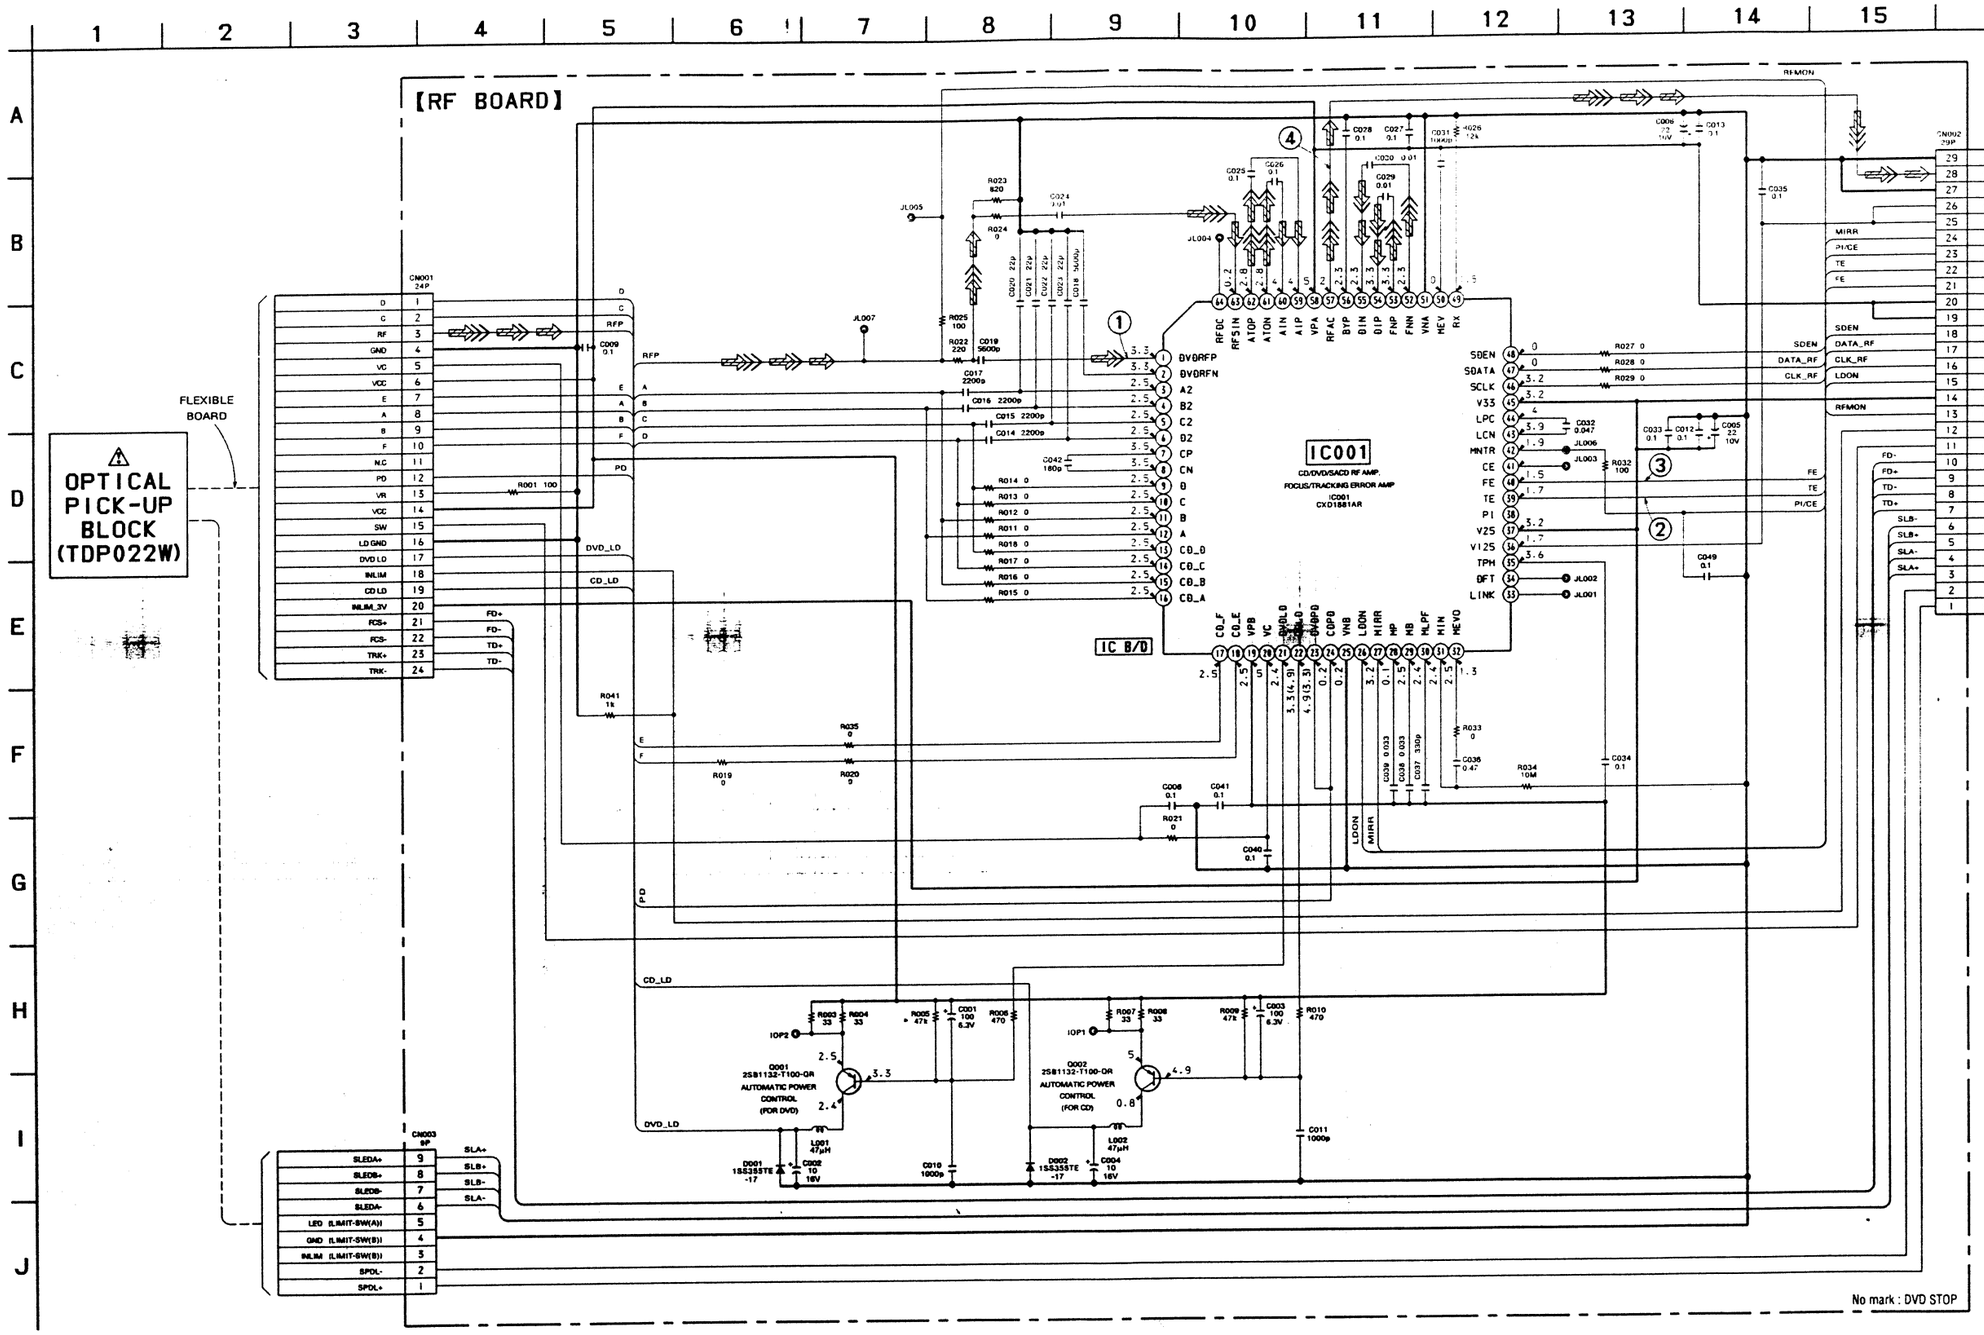

6-5. PRINTED WIRING BOARD – DRIVER SECTION –

• See page 30 for Circuit Boards Location.

• : Uses unleaded solder.

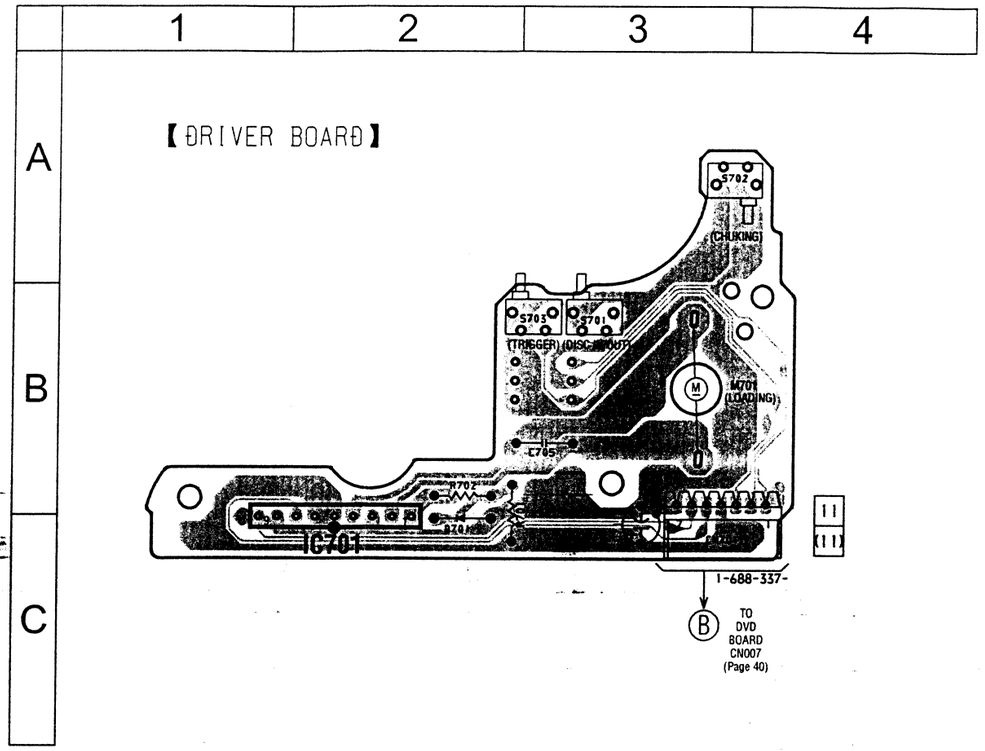

6-6. SCHEMATIC DIAGRAM – DRIVER SECTION –

• See page 65 for IC Block Diagram.

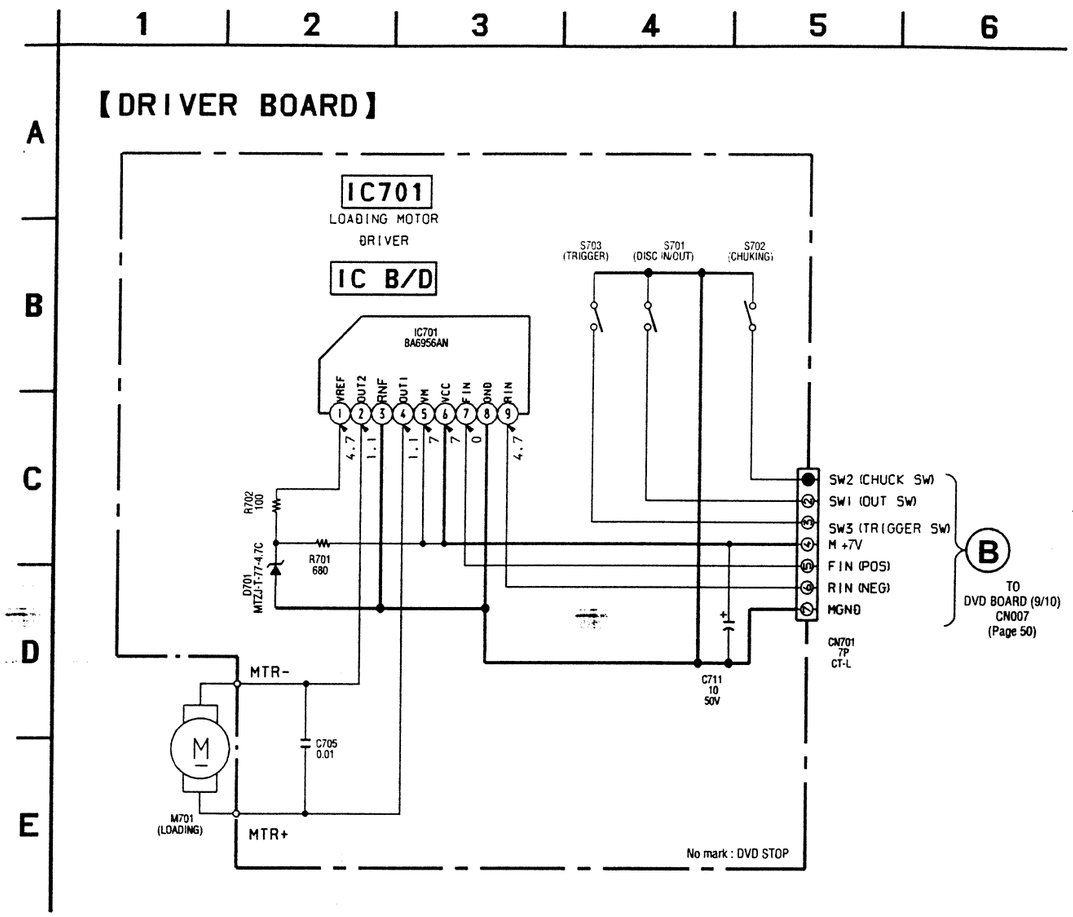

39

6-7. **PRINTED WIRING BOARD – DVD SECTION (SIDE A) –** • See page 30 for Circuit Boards Location. • : Uses unleaded solder.

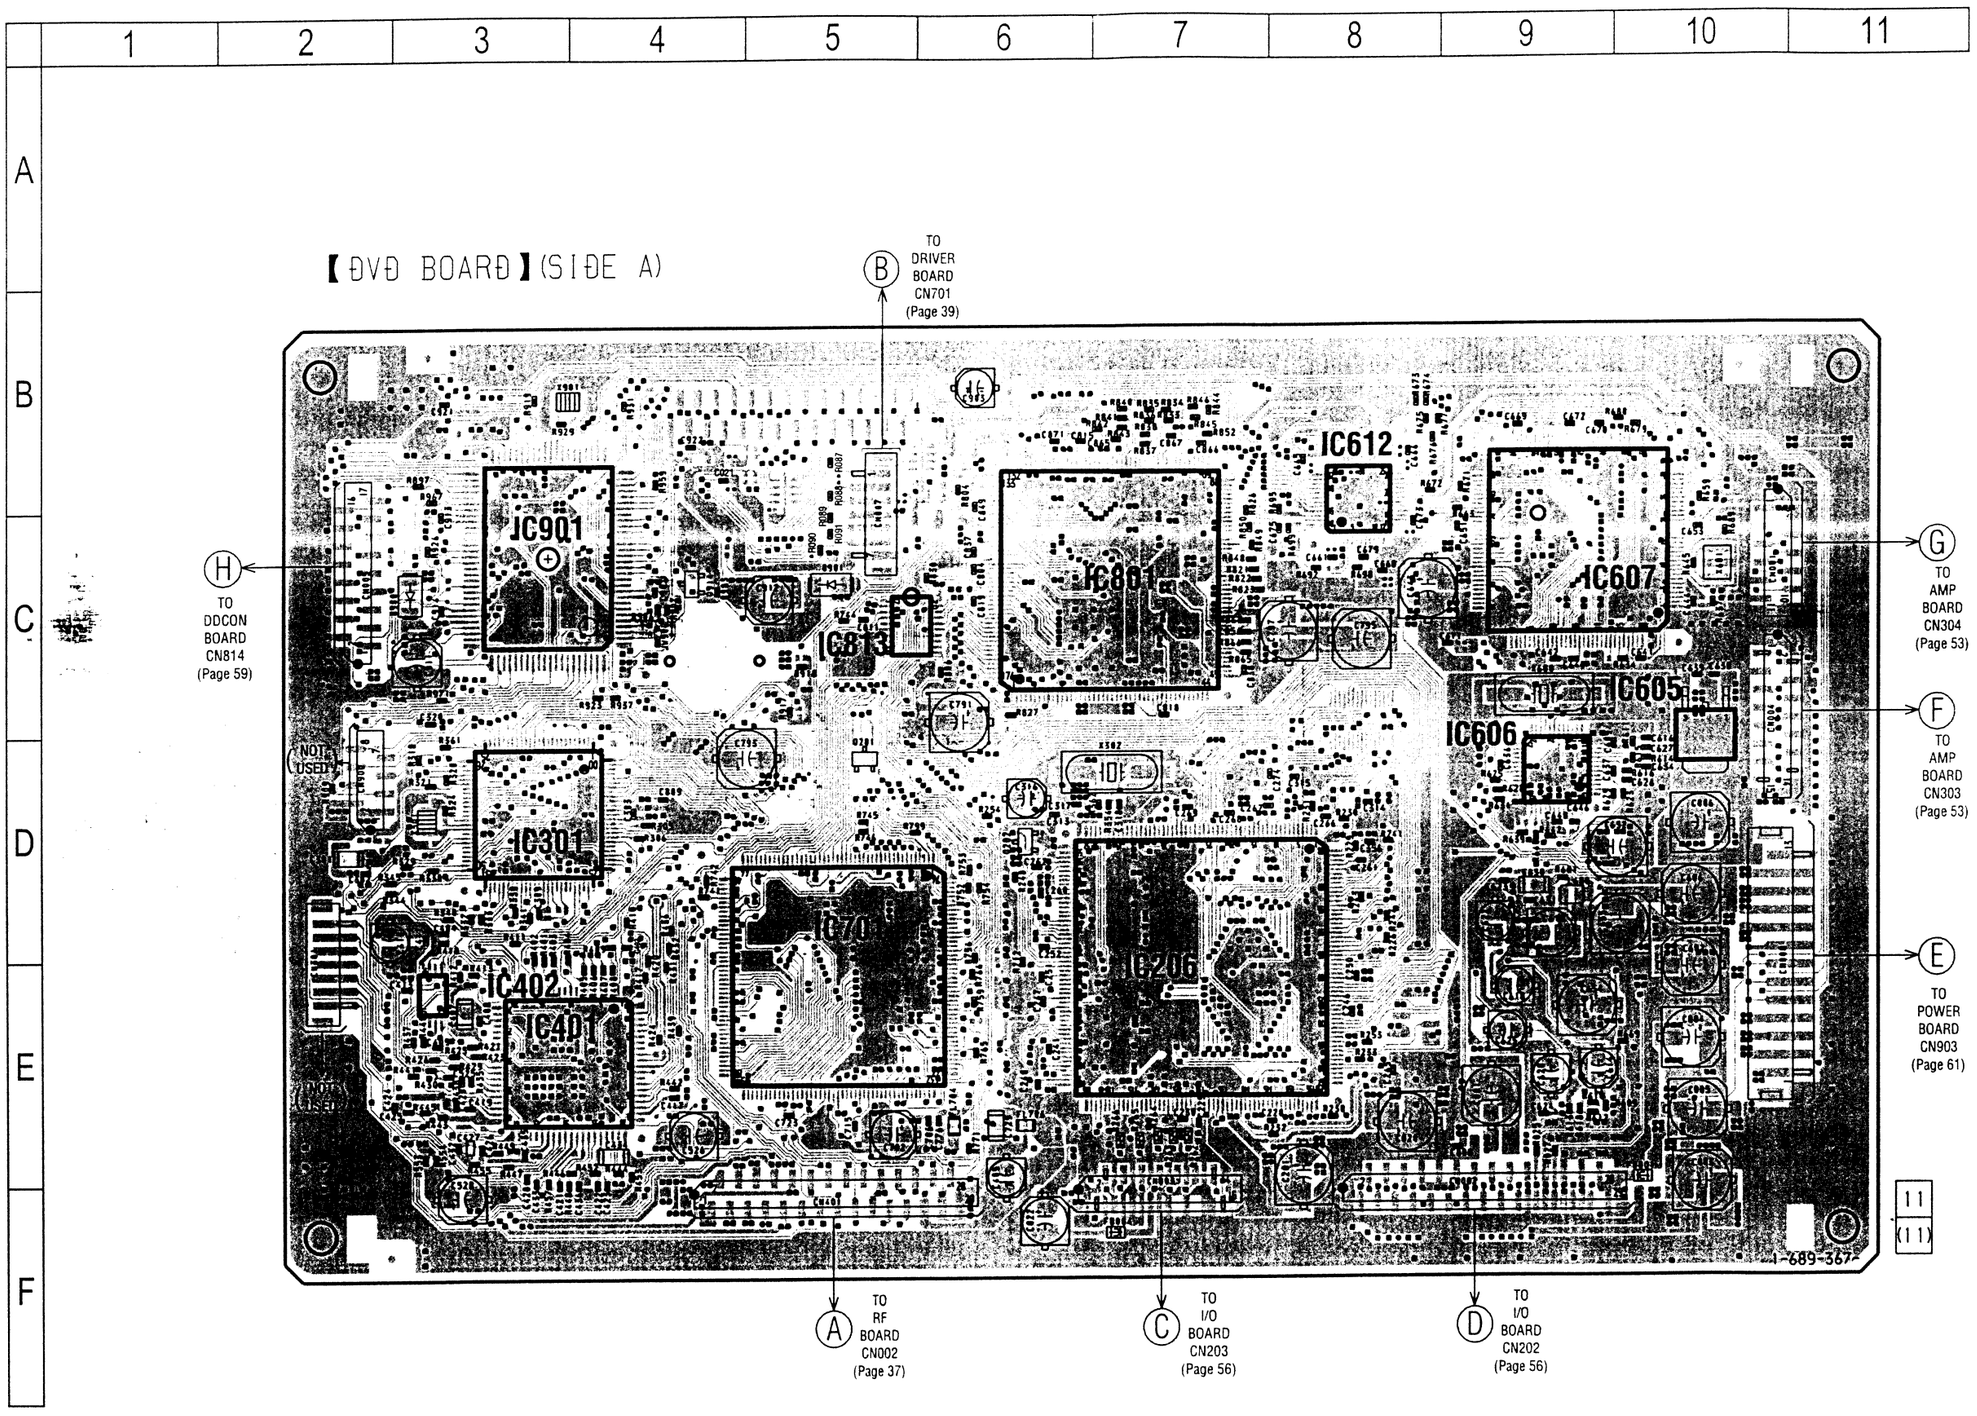

• Semiconductor Location

Ref. No.	Location
D900	C-3
D901	C-5
IC206	E-7
IC301	D-3
IC401	E-3
IC402	E-3
IC605	C-10
IC606	D-9
IC607	C-10
IC612	B-8
IC701	D-5
IC801	C-7
IC813	C-5
IC901	C-3

6-8. PRINTED WIRING BOARD – DVD SECTION (SIDE B) – • See page 30 for Circuit Boards Location. • 4F : Uses unleaded solder.

【ĐVĐ BOARĐ】(SIĐE B)

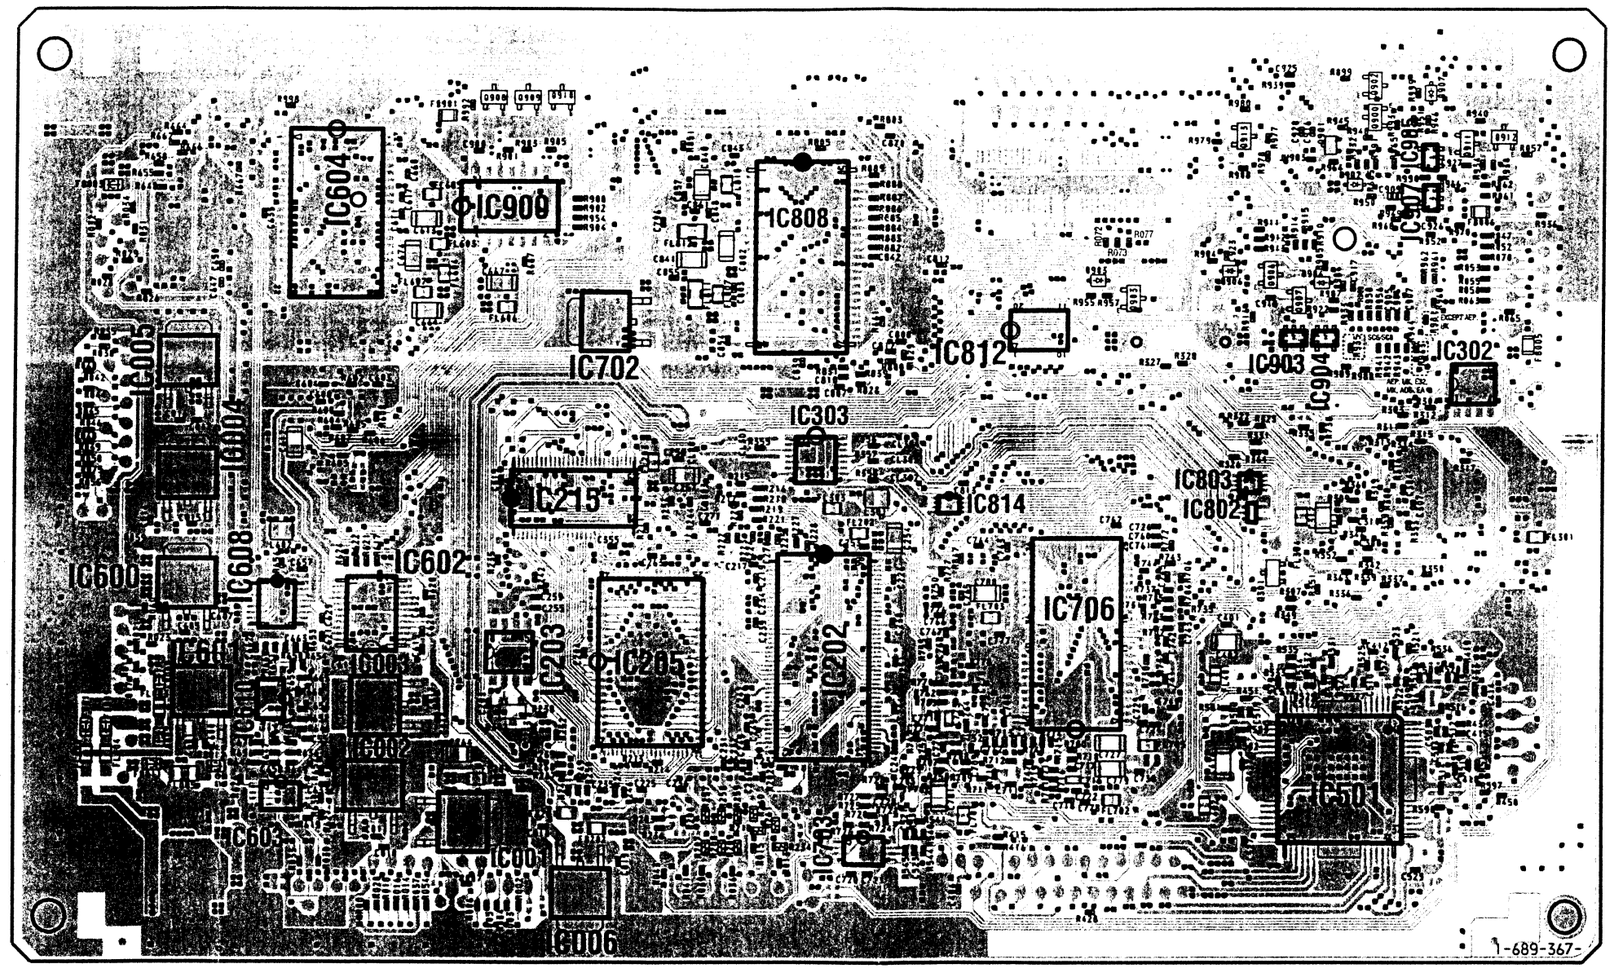

• Semiconductor Location

Ref. No.	Location
D902	B-6
D903	B-5
D904	B-6
D906	B-5
D907	A-6
IC001	D-3
IC002	D-2
IC003	C-2
IC004	C-2
IC005	B-1
IC006	D-3
IC202	C-4
IC203	C-3
IC205	C-3
IC215	C-3
IC302	B-6
IC303	C-4
IC501	D-6
IC600	C-1
IC601	C-2
IC602	C-2
IC603	D-2
IC604	B-2
IC608	C-2
IC610	D-2
IC702	B-3
IC703	D-4
IC706	C-5
IC802	C-5
IC803	C-5
IC808	B-4
IC812	B-4
IC814	C-4
IC900	B-3
IC903	B-5
IC904	B-6
IC905	A-6
IC907	B-6
Q201	D-5
Q202	D-6
Q301	C-5
Q302	D-3
Q900	A-6
Q901	A-6
Q902	A-6
Q903	B-5
Q906	B-5
Q907	B-6
Q908	A-3
Q909	A-3
Q910	A-3
Q911	A-6
Q912	A-6
Q913	A-5
Q914	C-4

6-9. SCHEMATIC DIAGRAM – DVD SECTION (1/10) –

• See page 66 for IC Block Diagram.

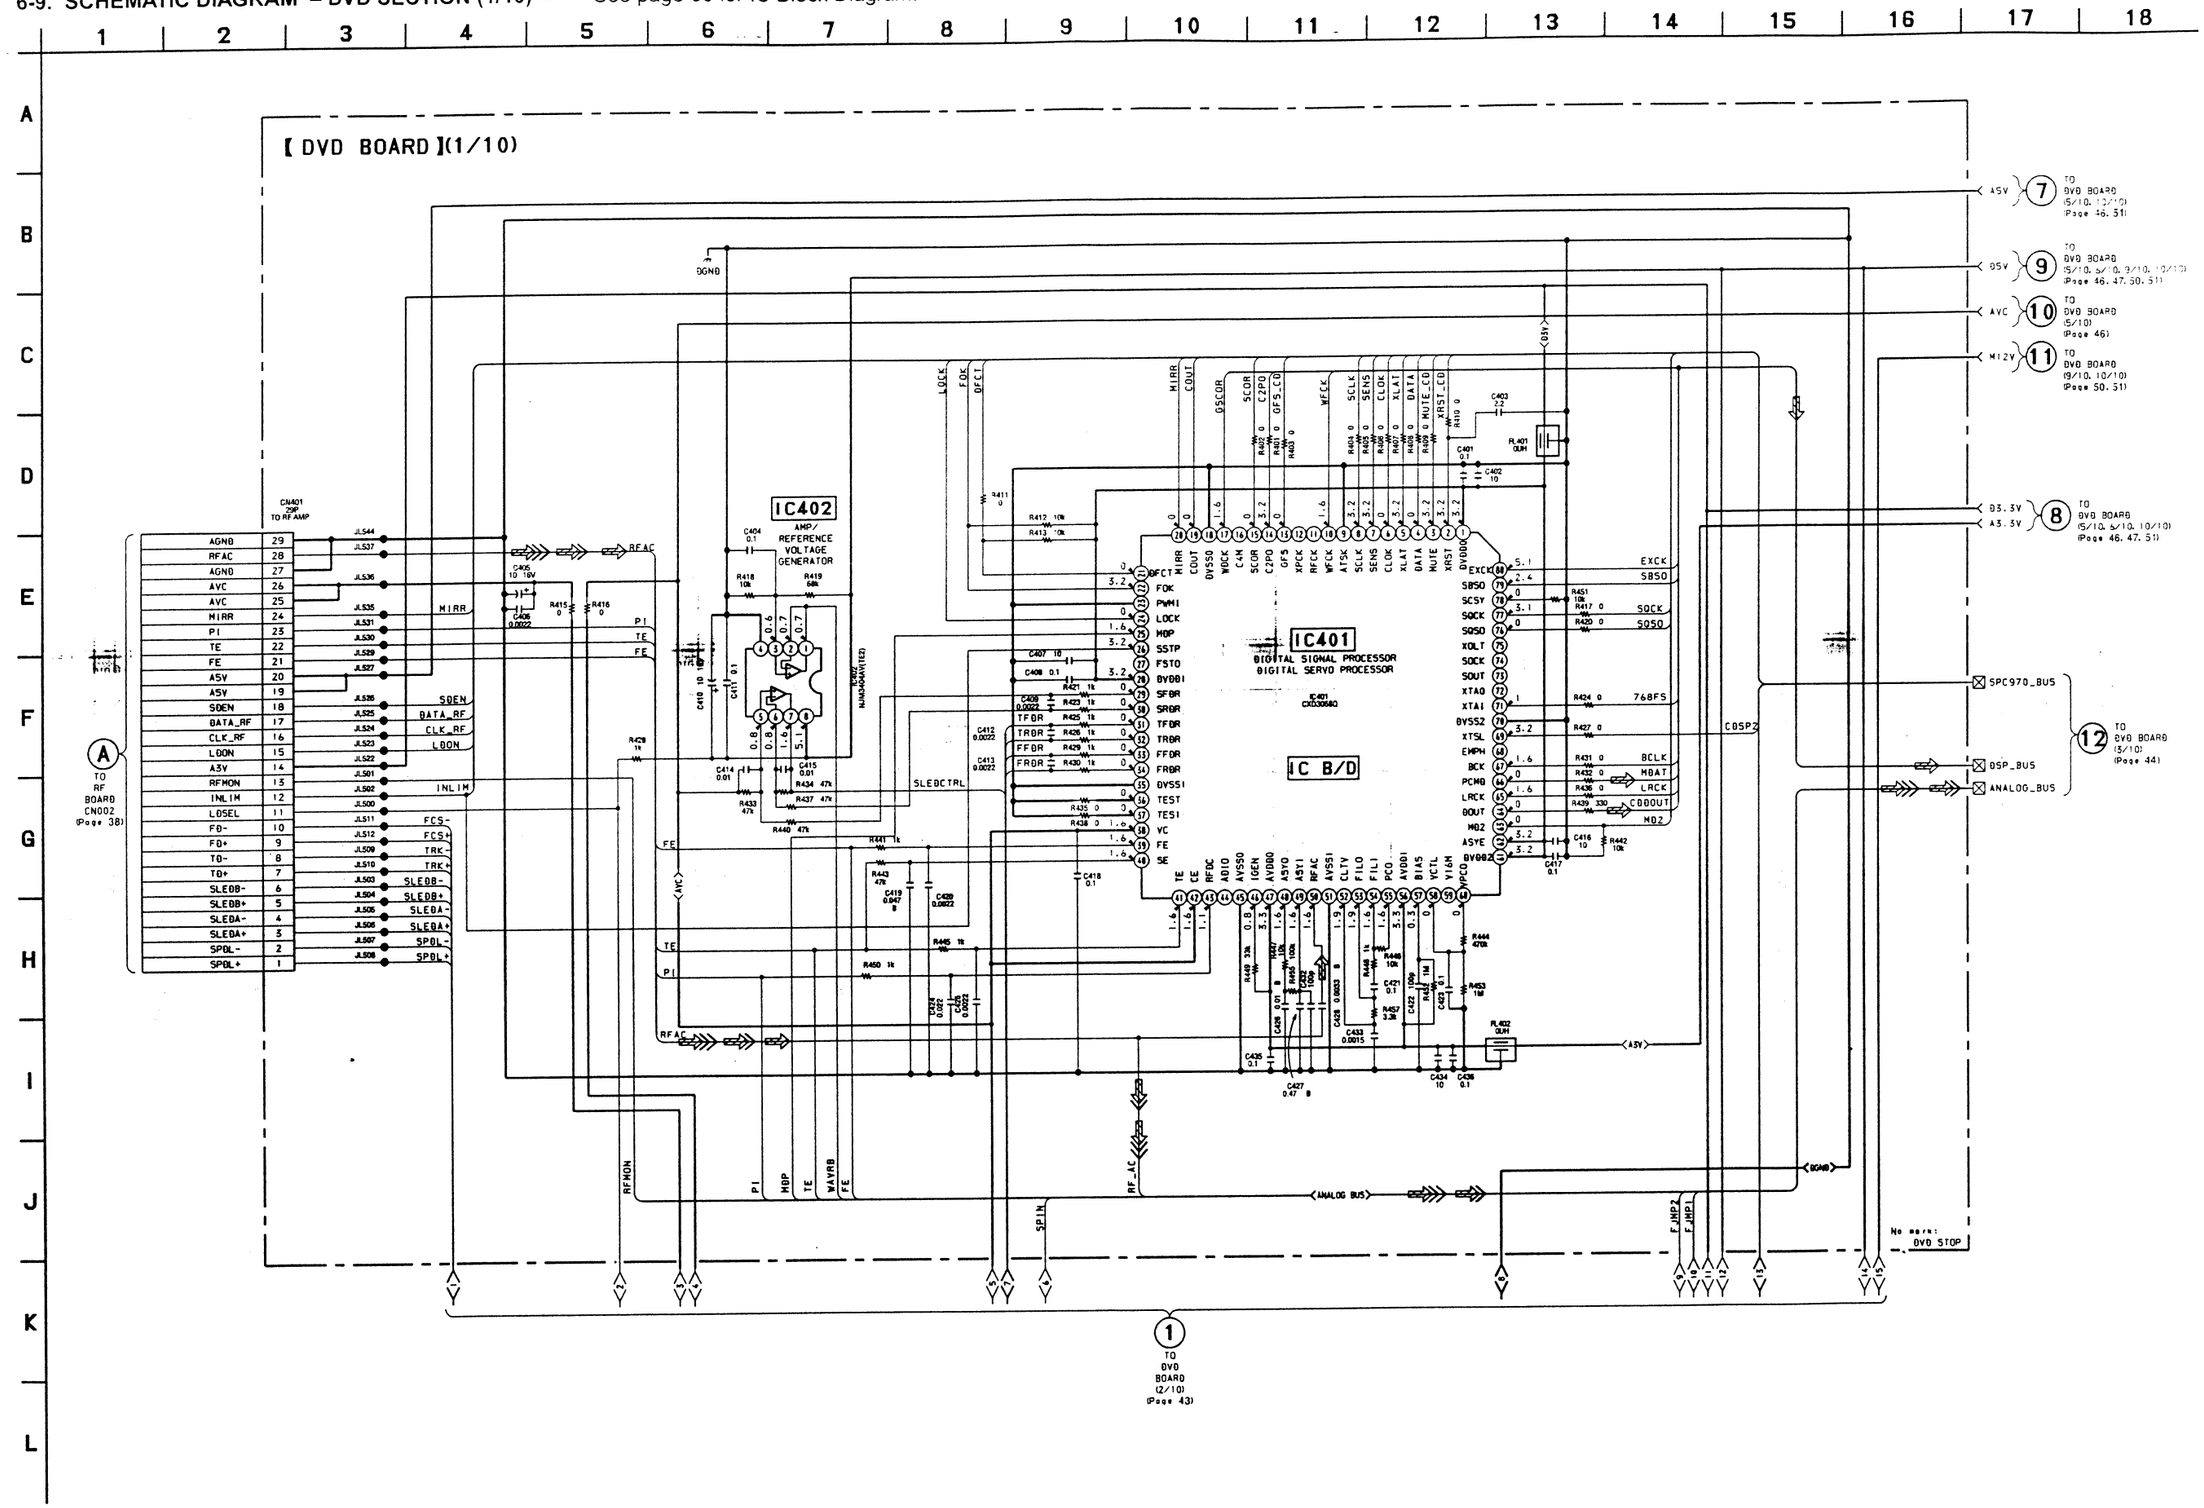

6-10. SCHEMATIC DIAGRAM – DVD SECTION (2/10) –

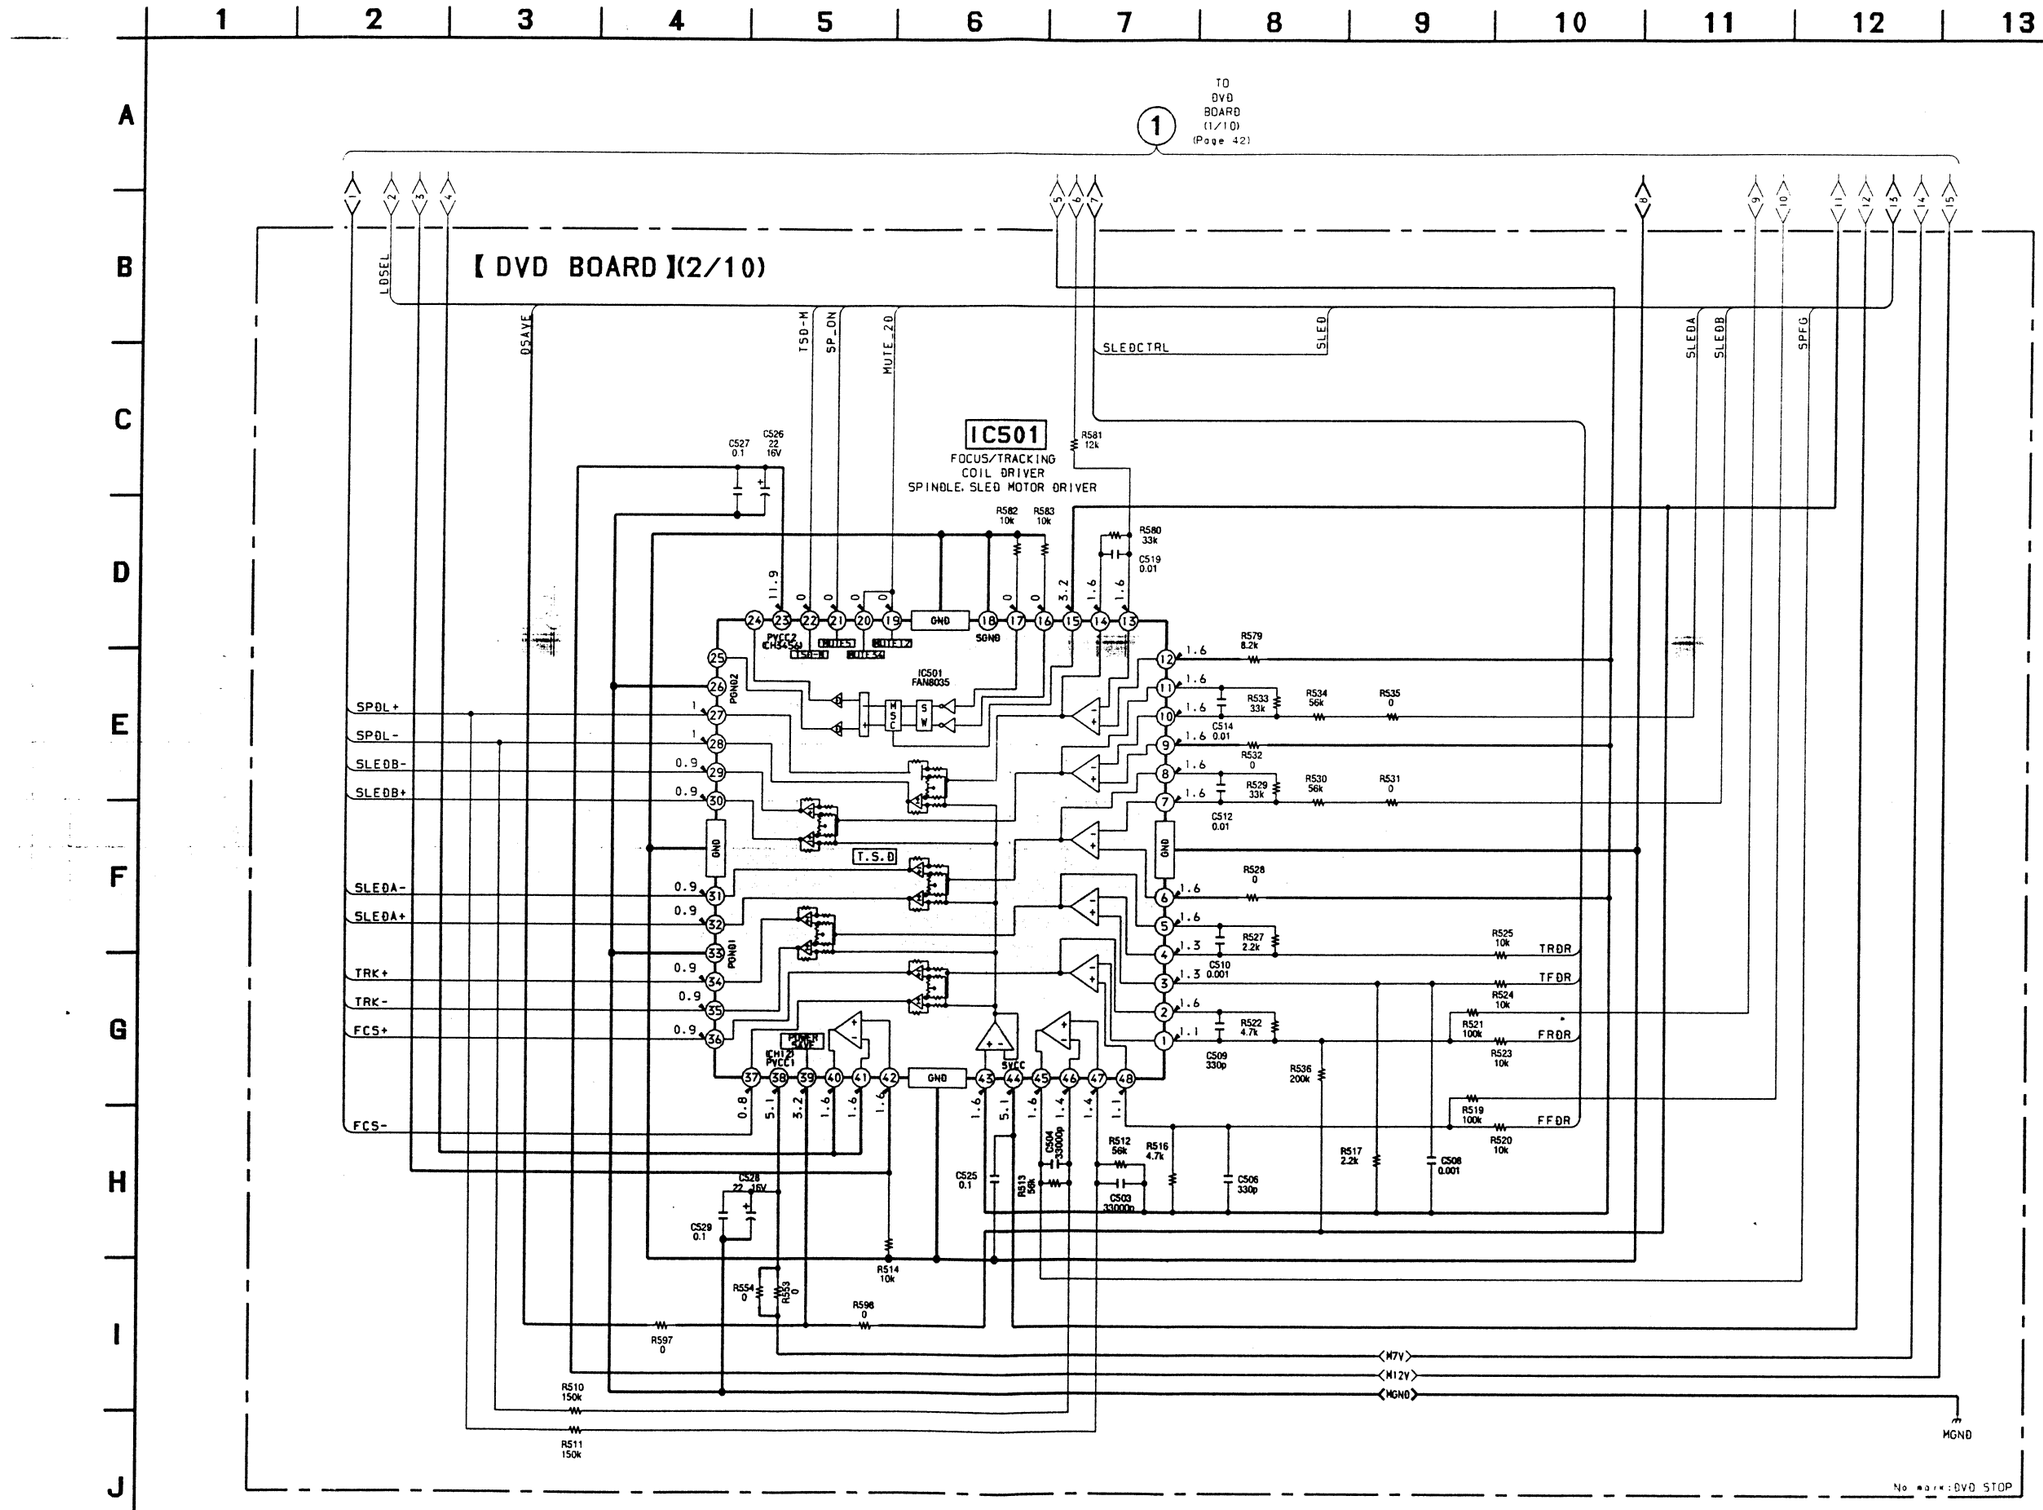

6-11. SCHEMATIC DIAGRAM – DVD SECTION (3/10) –

• See page 68 for IC Block Diagram.

【 DVD BOARD 】
(3/10)

IC703 (2/2) BUFFER

IC703 (1/2) COMPARATOR

IC706 16Mbit D-RAM

IC B/D

IC701 DVD DECODER

ANALOG_BUS

SPC970_BUS

05P_BUS

SCOR

XINIT1

TO DVD BOARD (1/10) (Page 42)

TO DVD BOARD (5/10) (Page 46)

TO DVD BOARD (4/10) (Page 45)

6-12. SCHEMATIC DIAGRAM – DVD SECTION (4/10) –

• See page 69 for IC Block Diagrams.

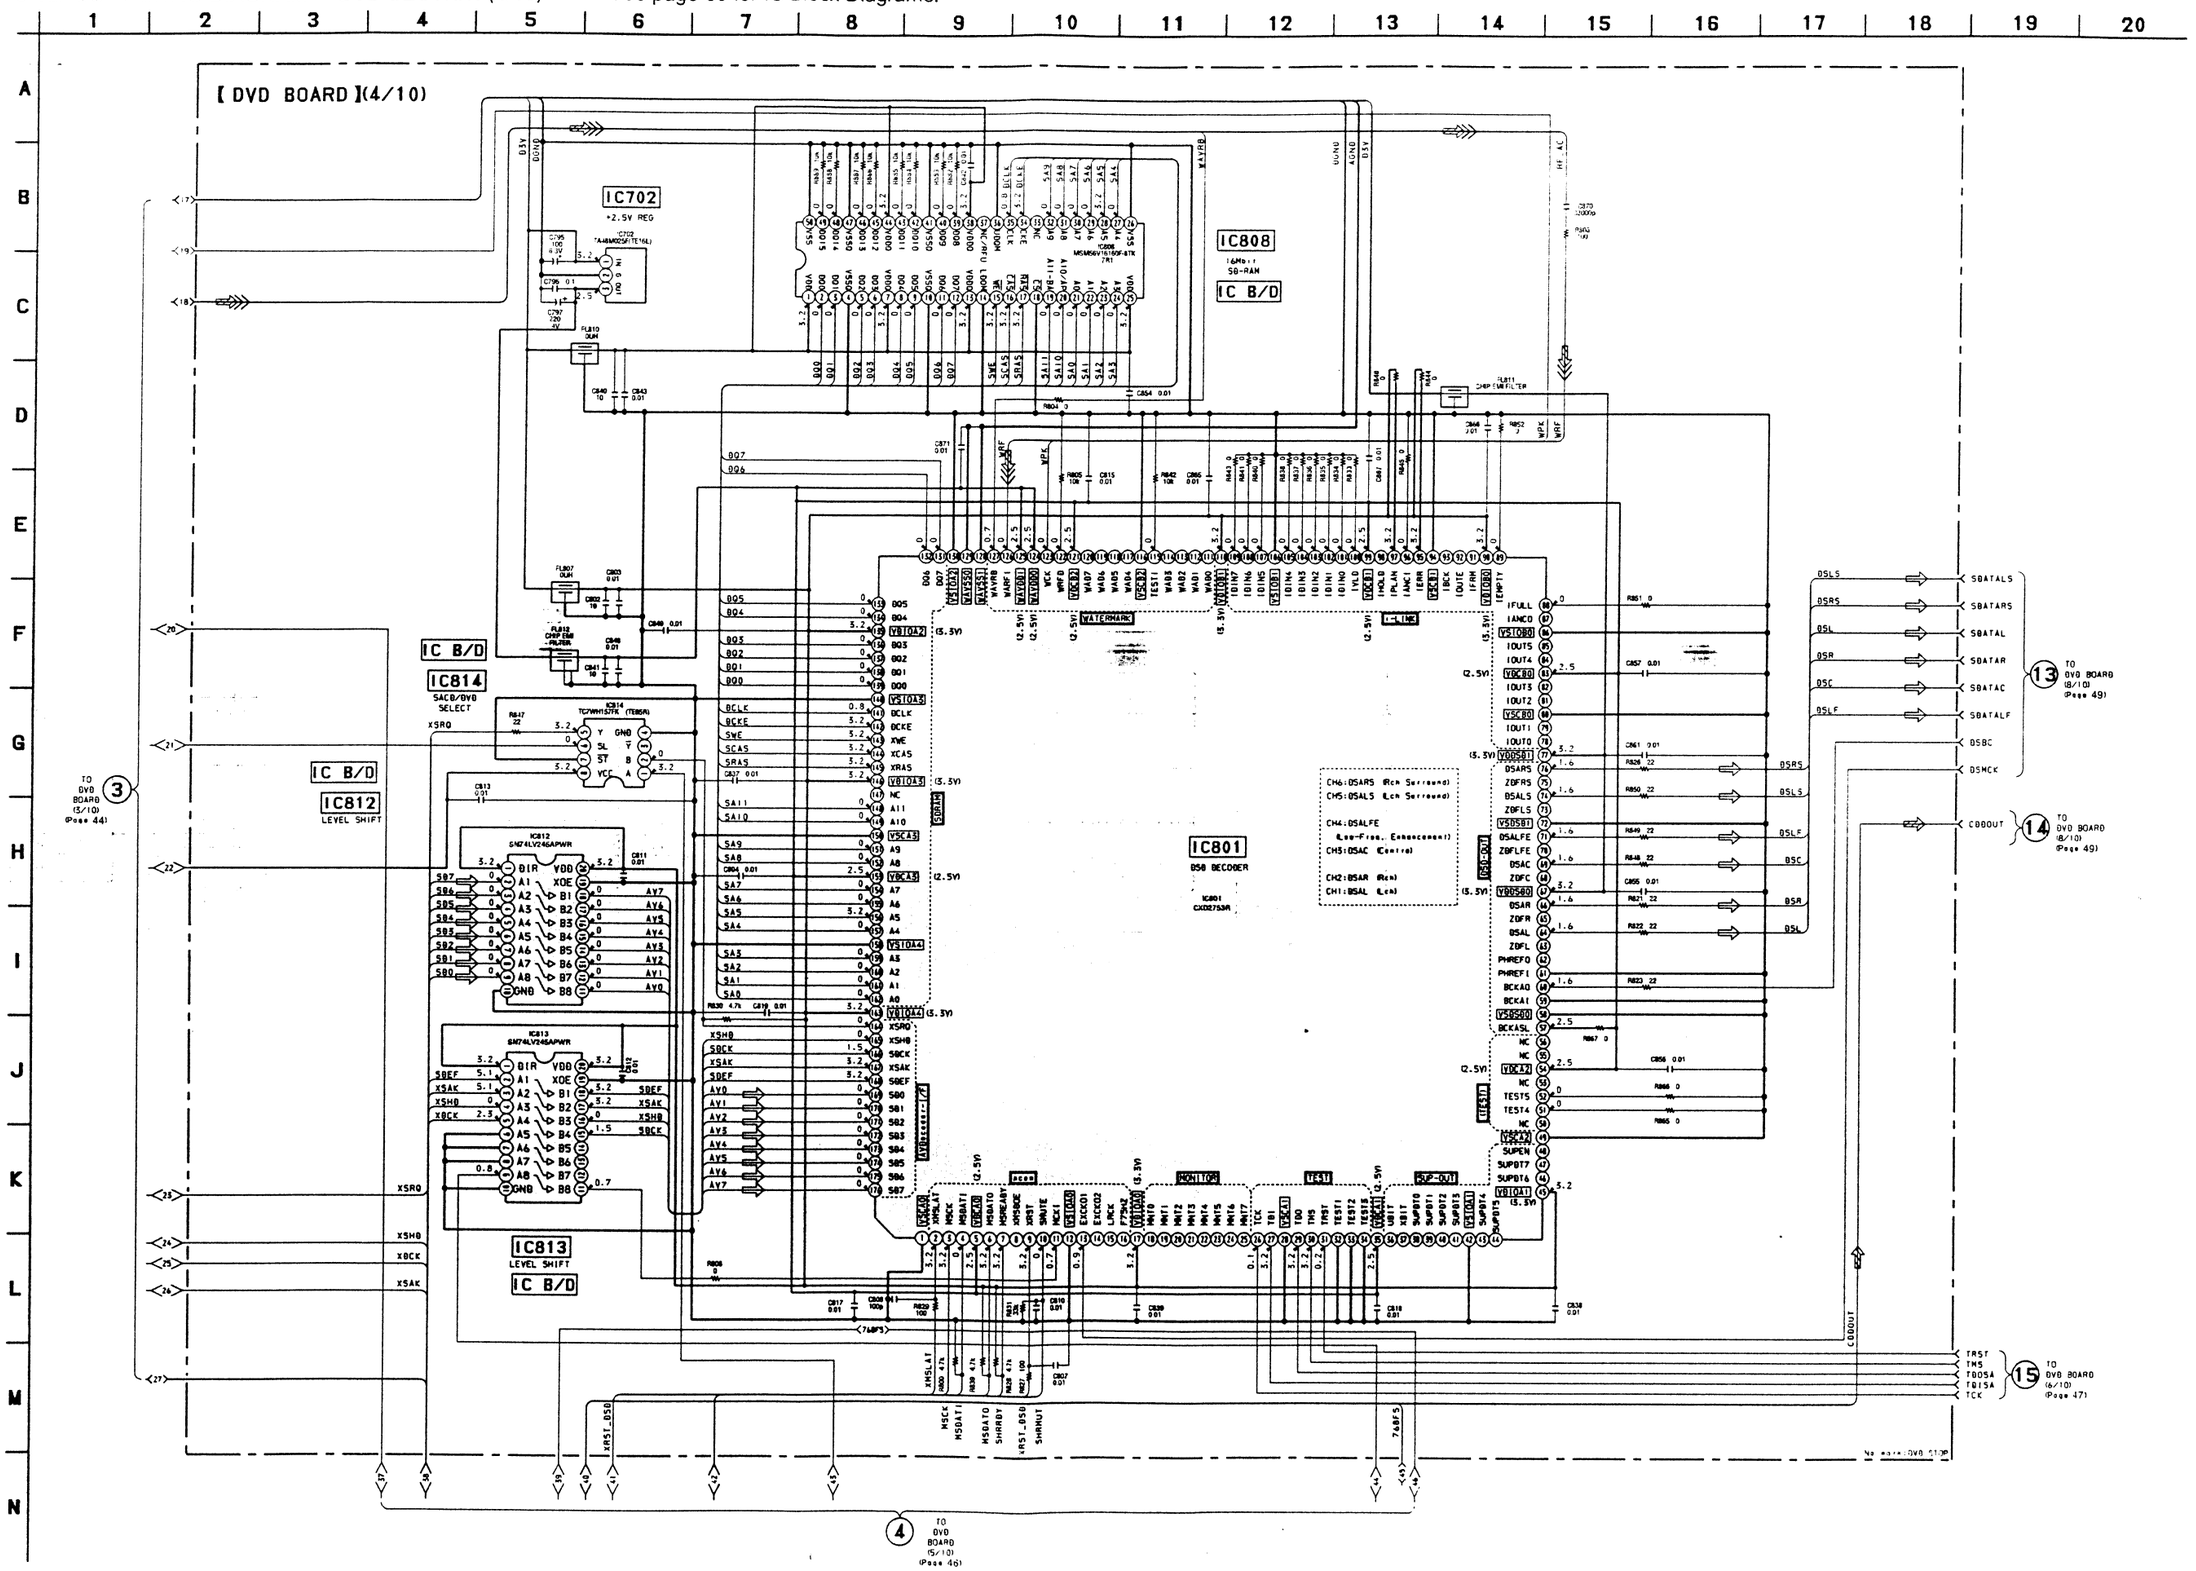

6-13. SCHEMATIC DIAGRAM – DVD SECTION (5/10) –

• See page 63 for Waveforms. • See page 68 for IC Block Diagram.

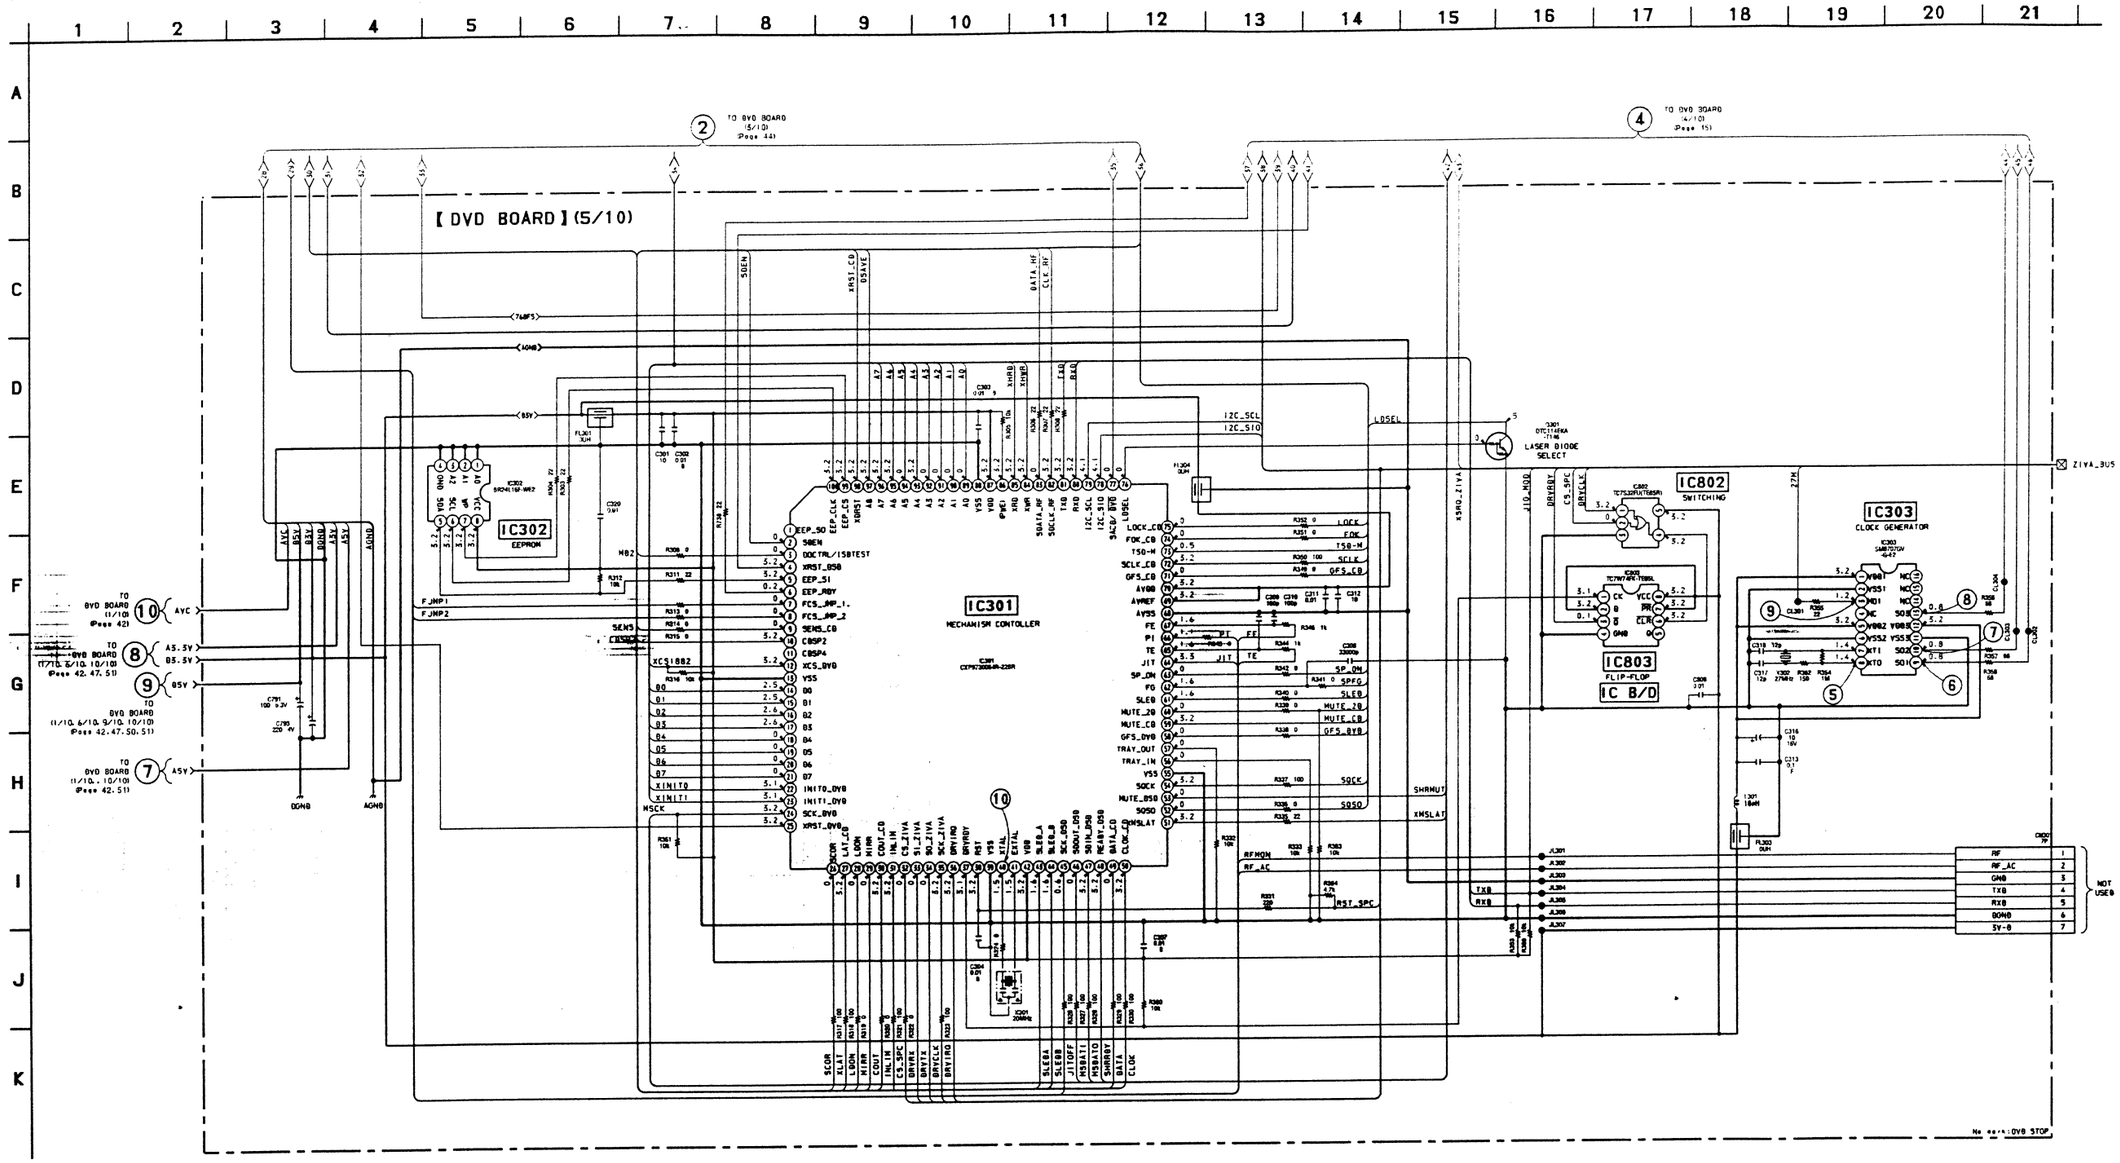

6-14. SCHEMATIC DIAGRAM – DVD SECTION (6/10) –

• See page 63 for Waveforms. • See page 65 for IC Block Diagram.

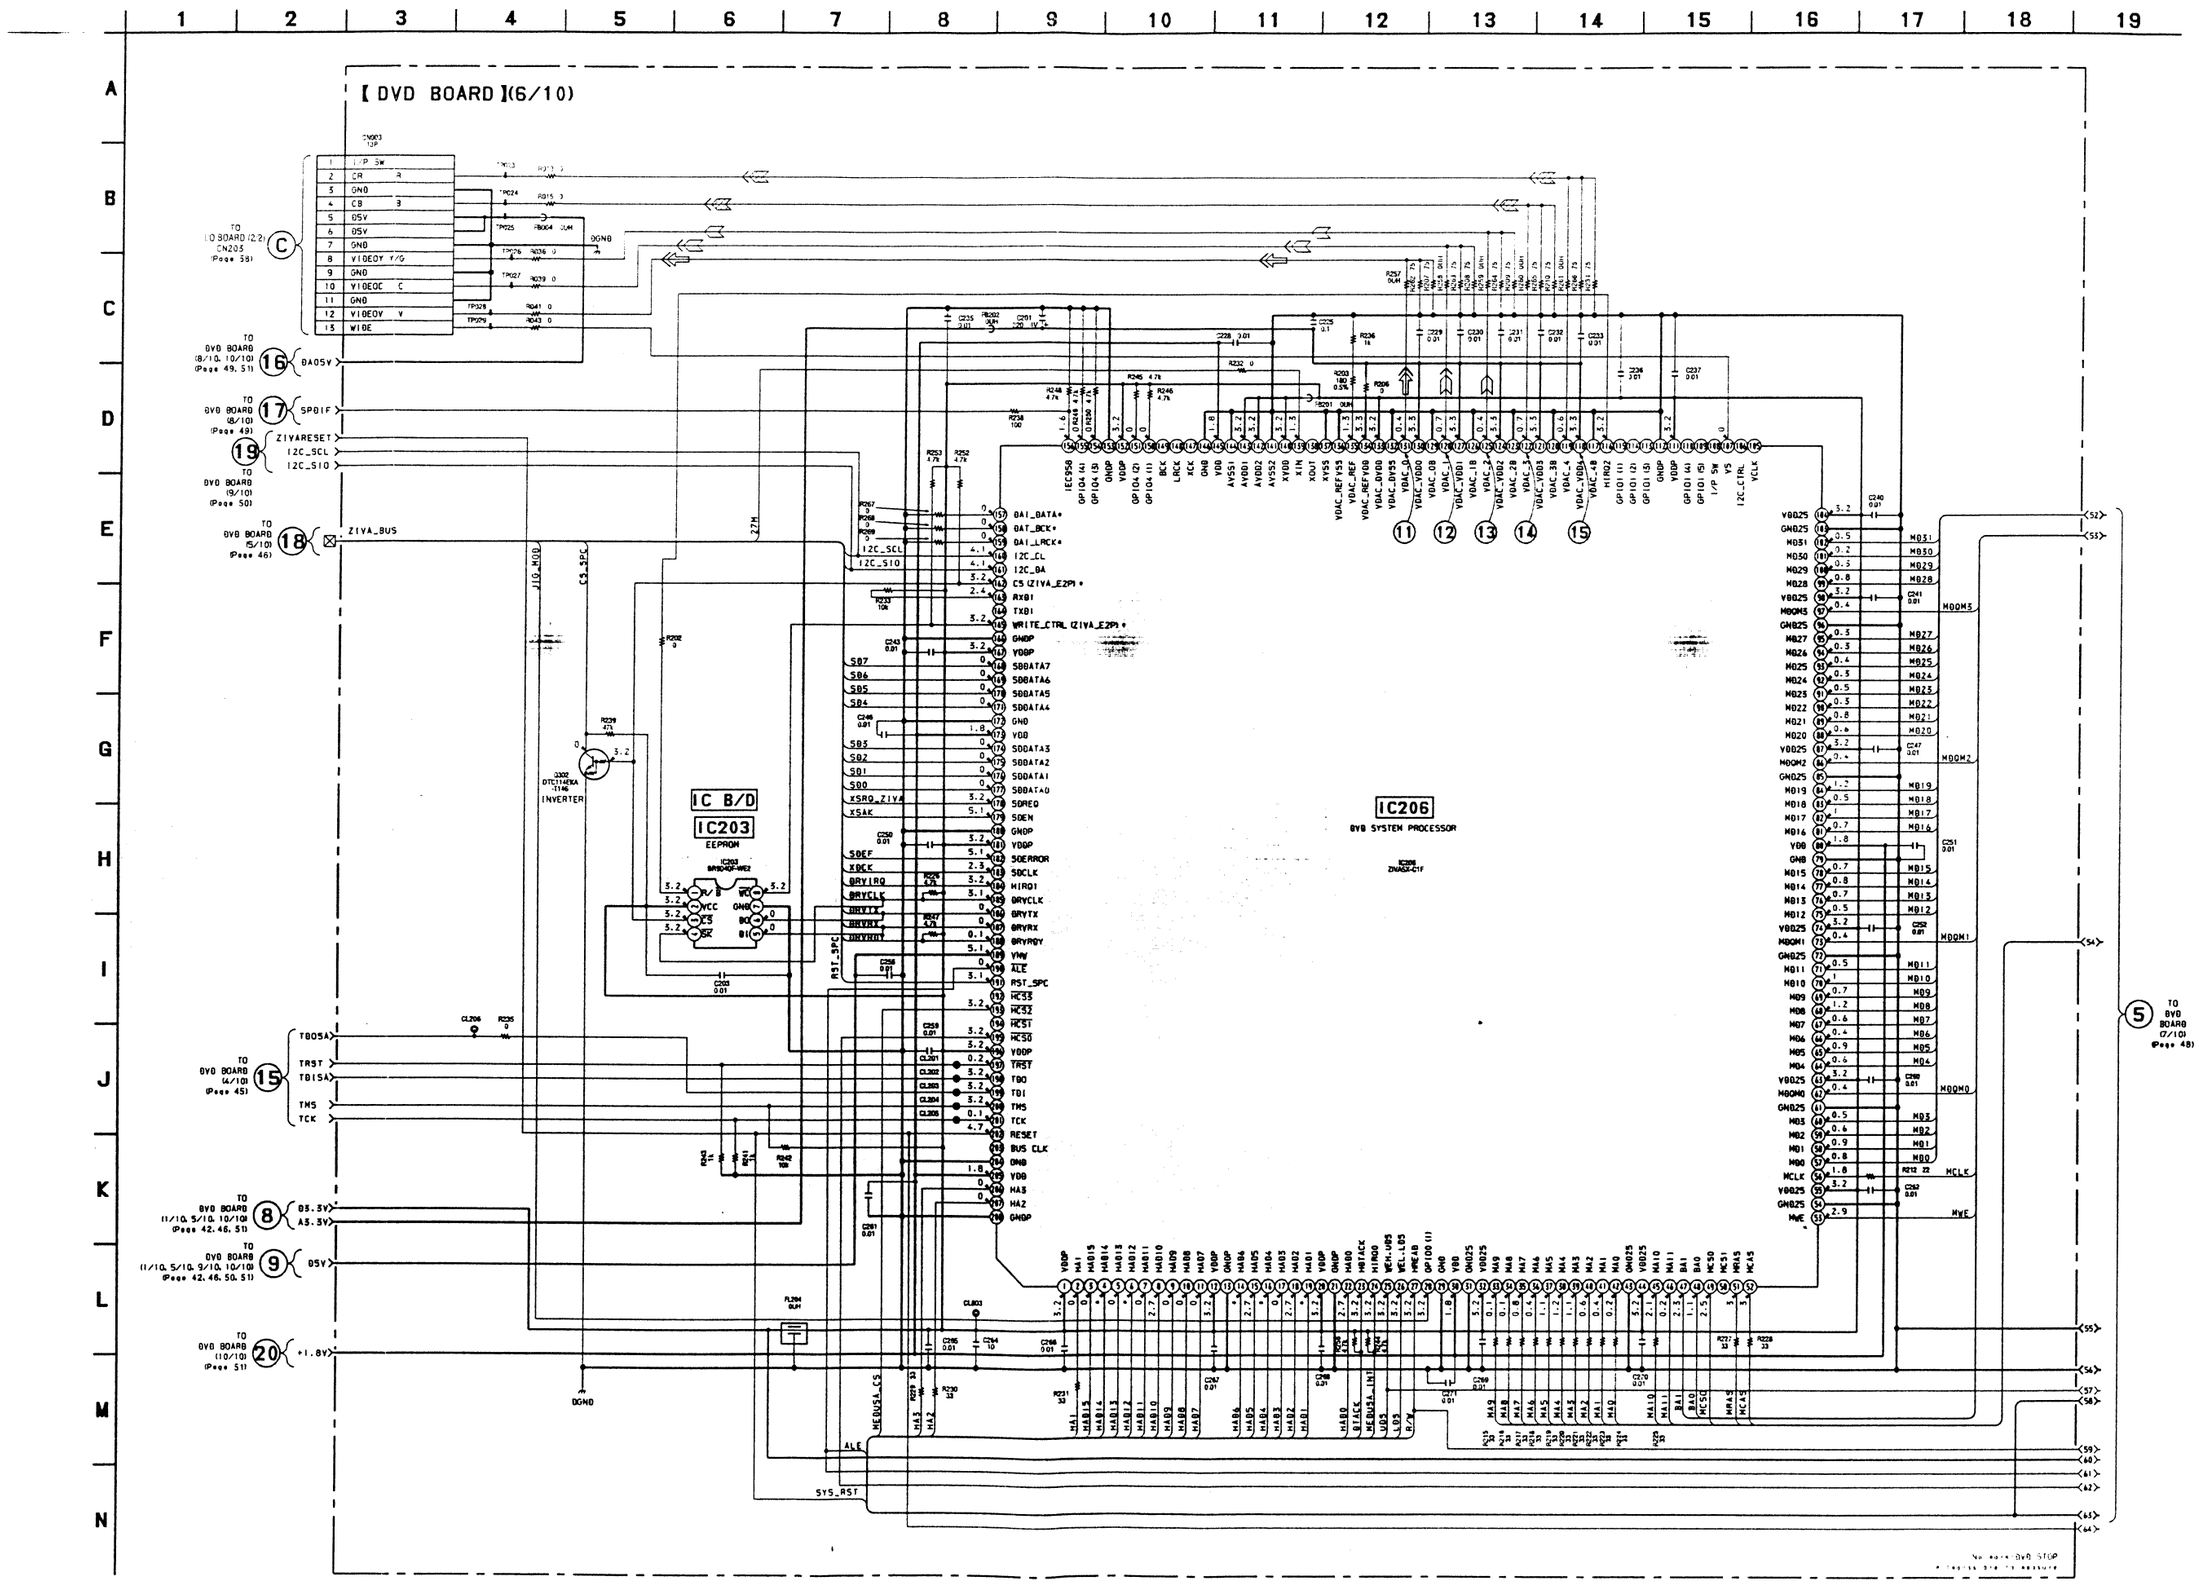

6-15. SCHEMATIC DIAGRAM – DVD SECTION (7/10) –

• See page 65 for IC Block Diagram.

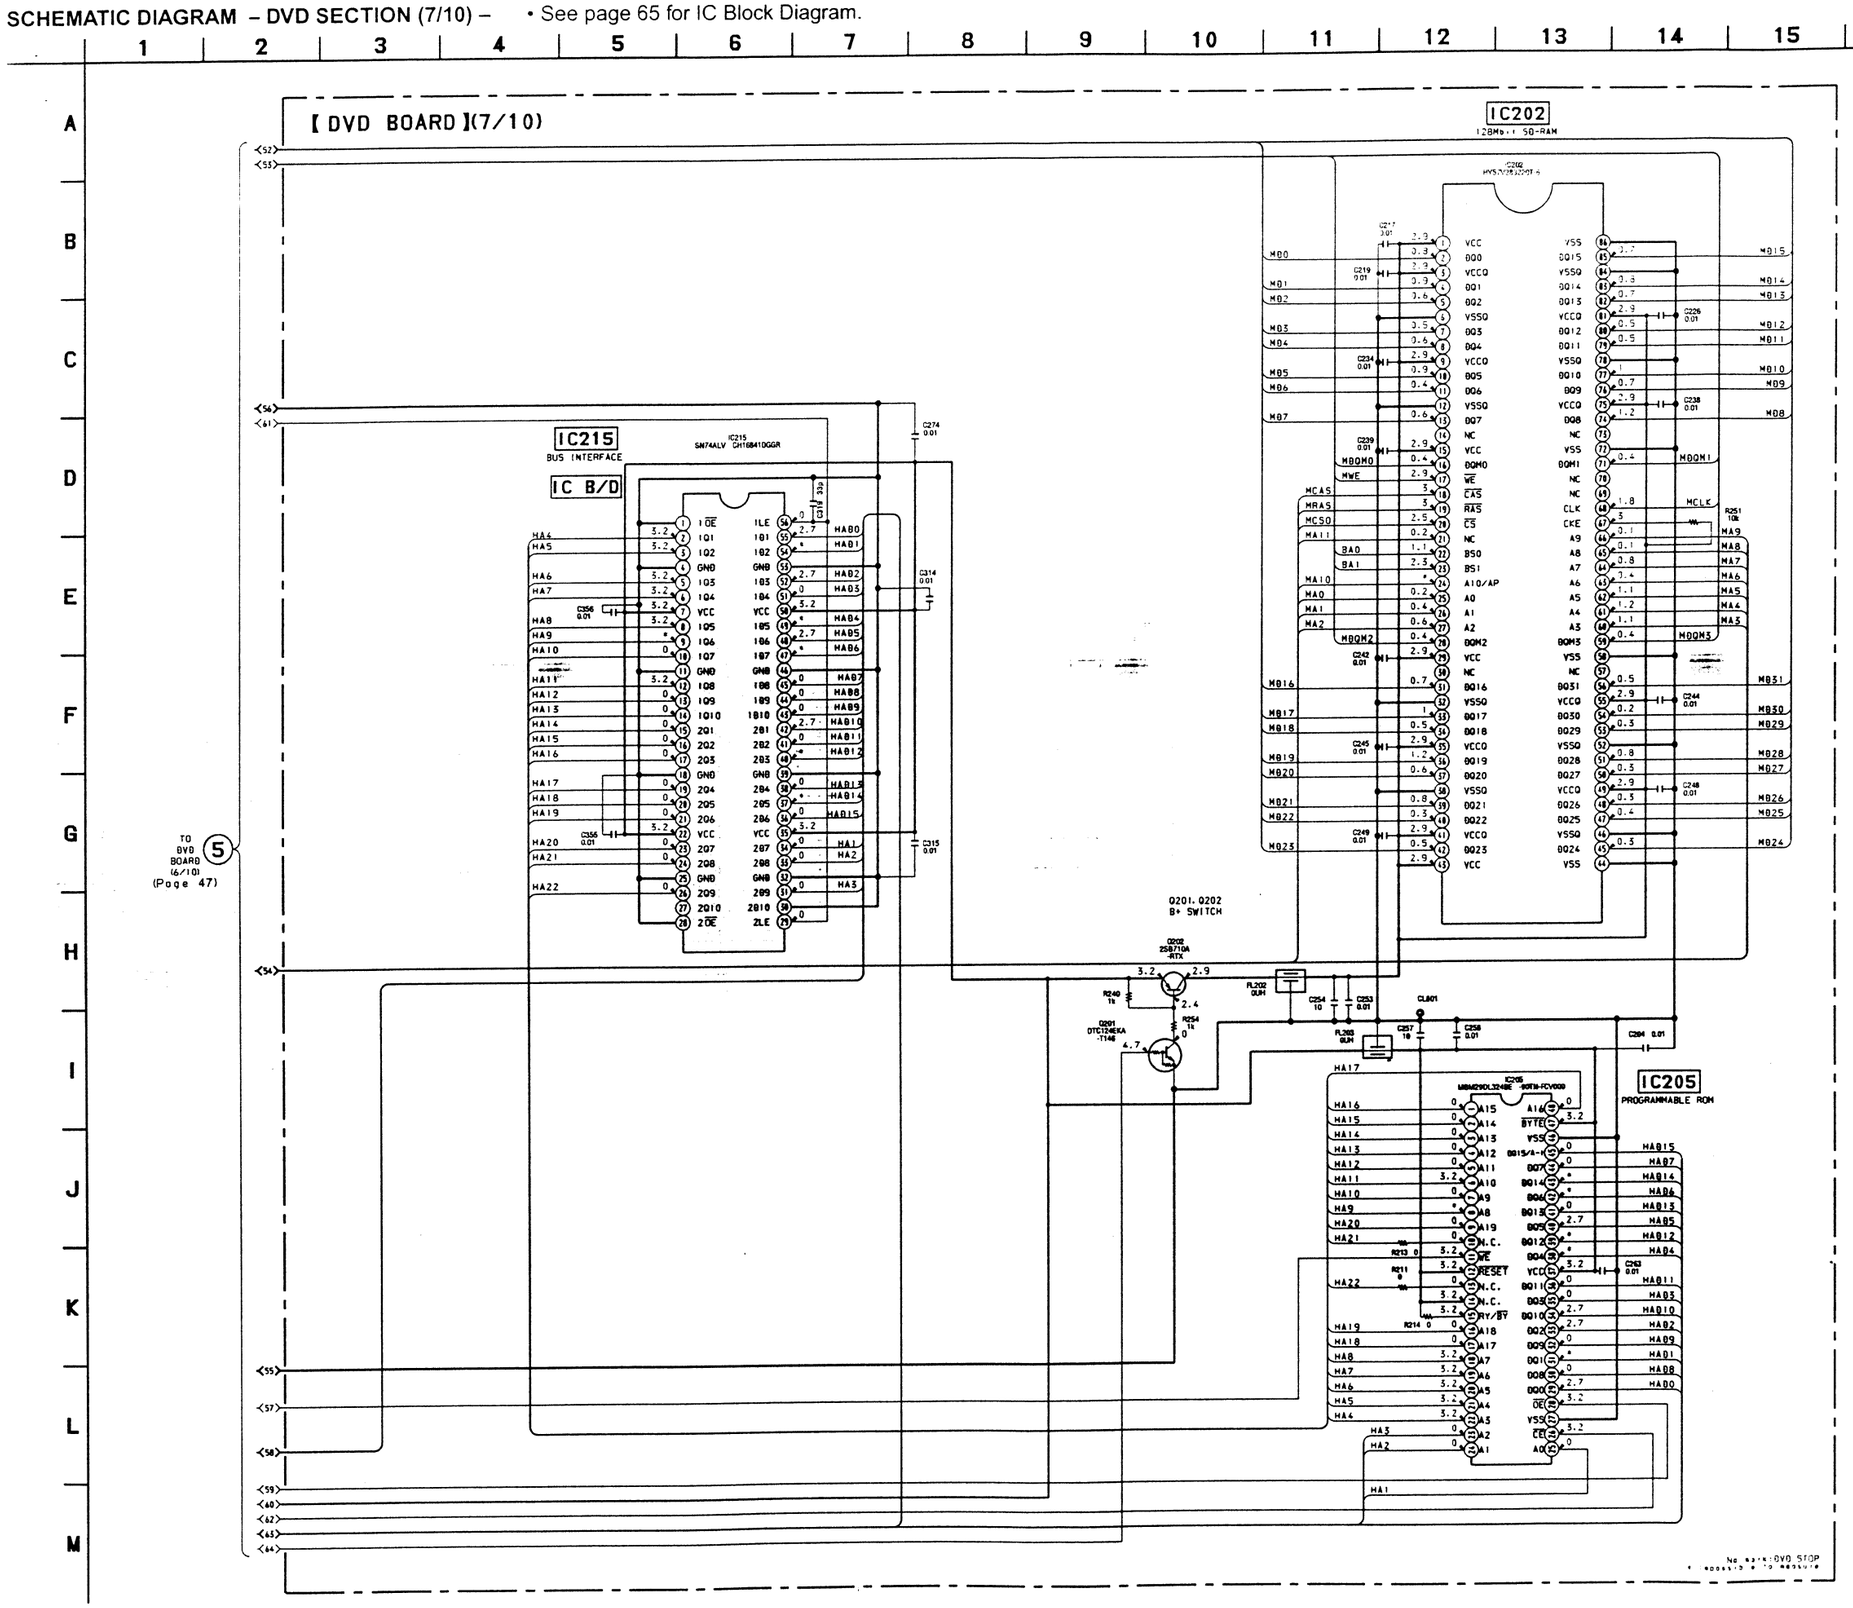

6-16. SCHEMATIC DIAGRAM – DVD SECTION (8/10) – • See page 63 for Waveforms. • See page 66, 67, 68 for IC Block Diagrams.

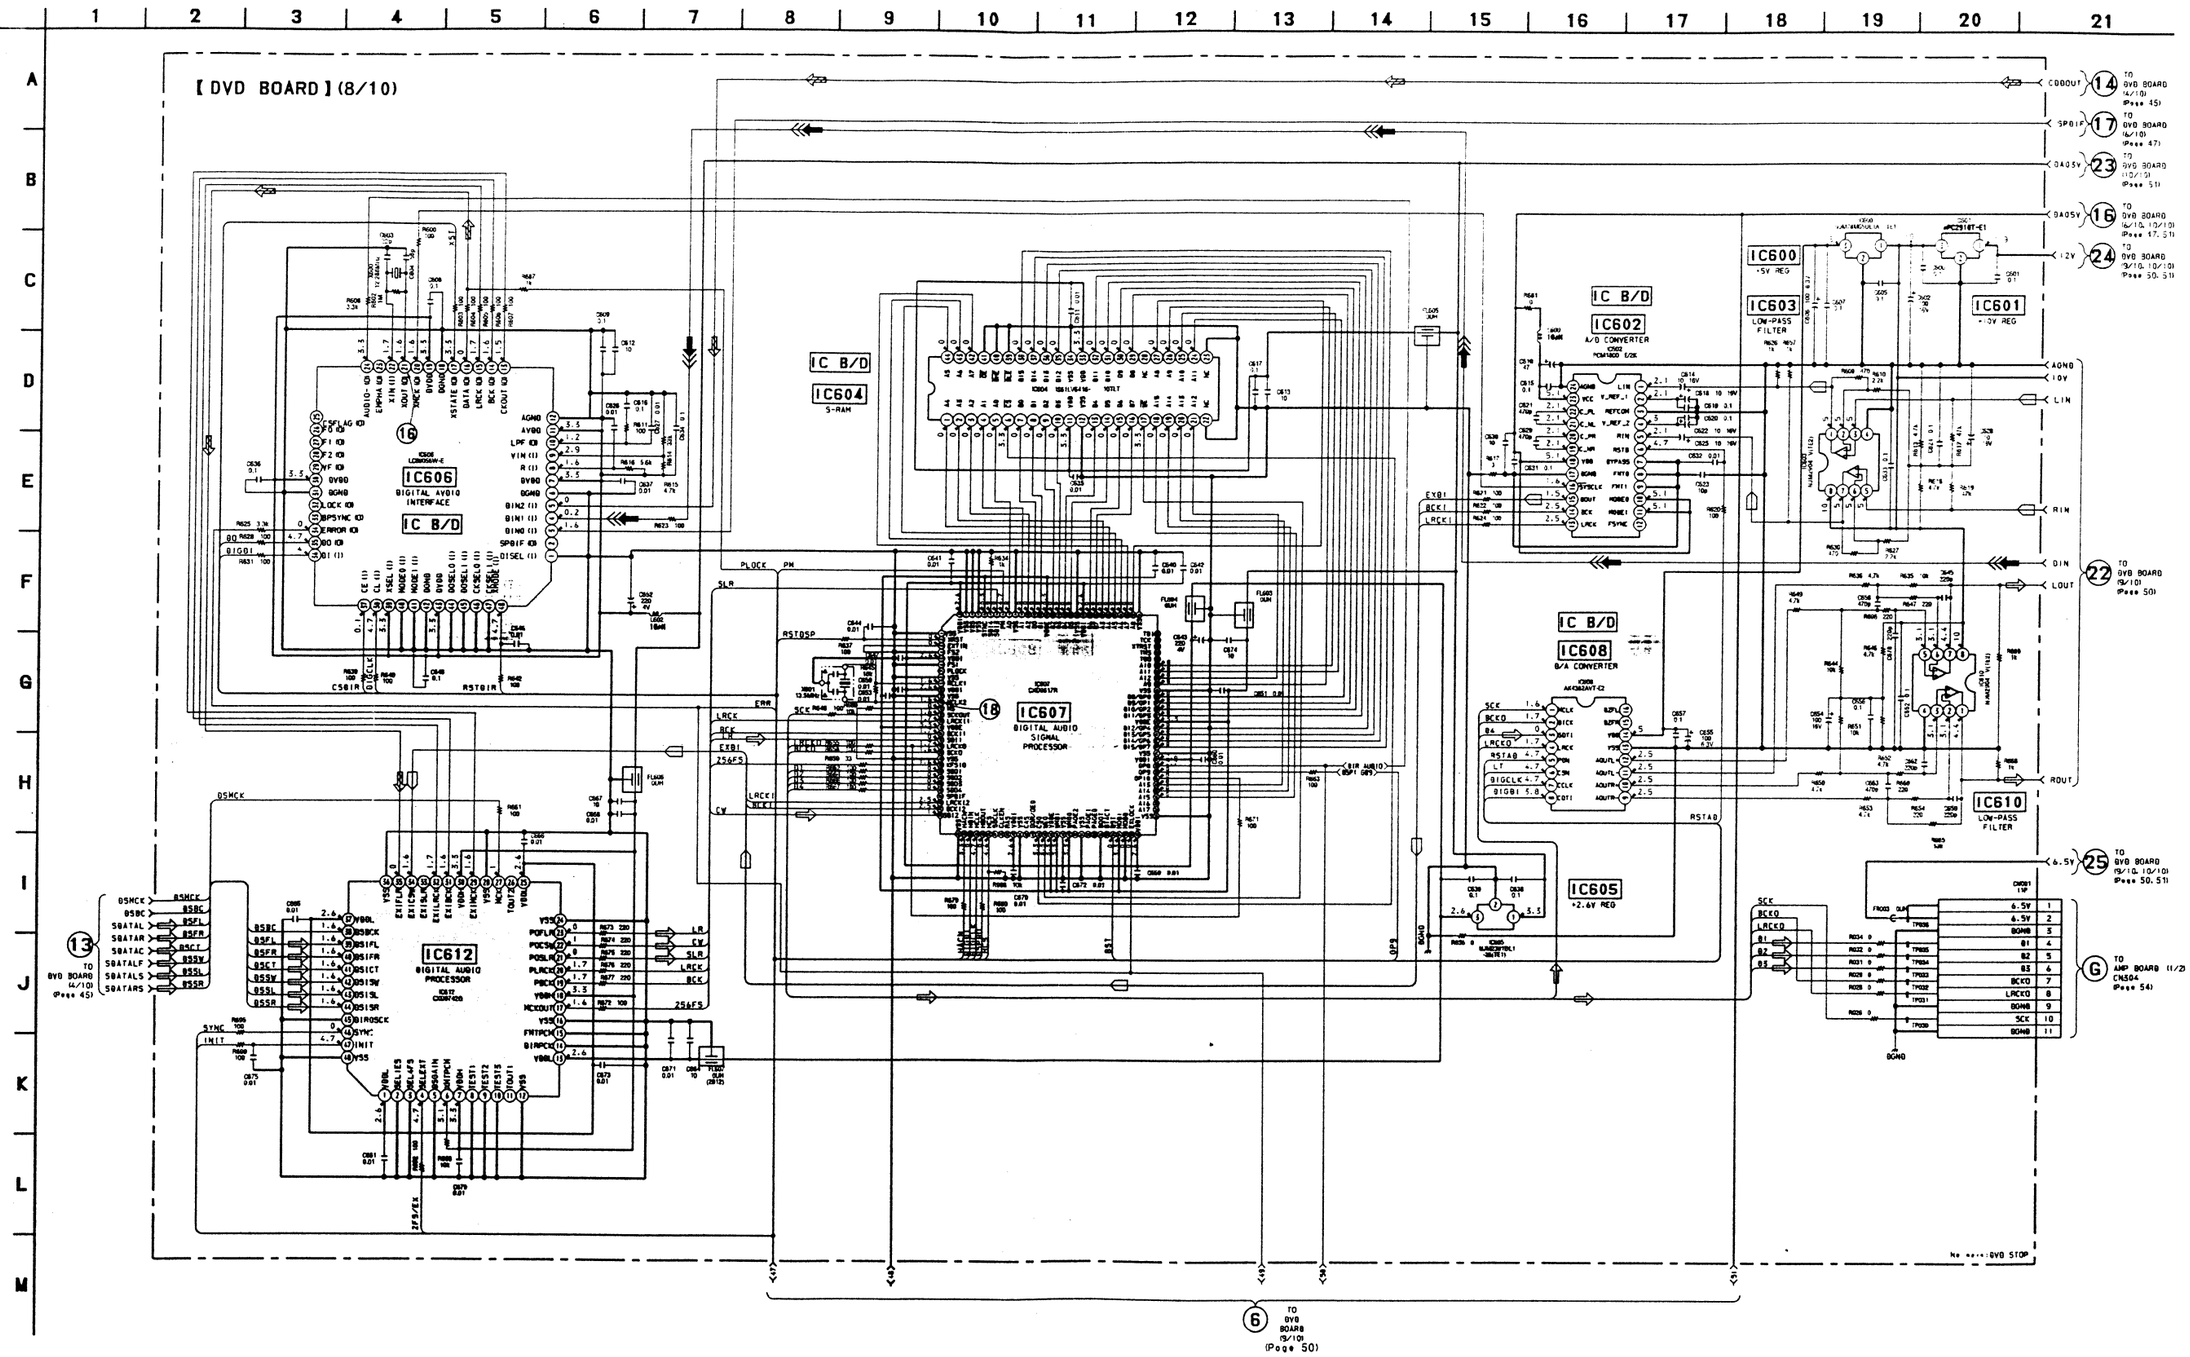

49

6-16. SCHEMATIC DIAGRAM – DVD SECTION (8/10) –

• See page 63 for Waveforms. • See page 66, 67, 68 for IC Block Diagrams.

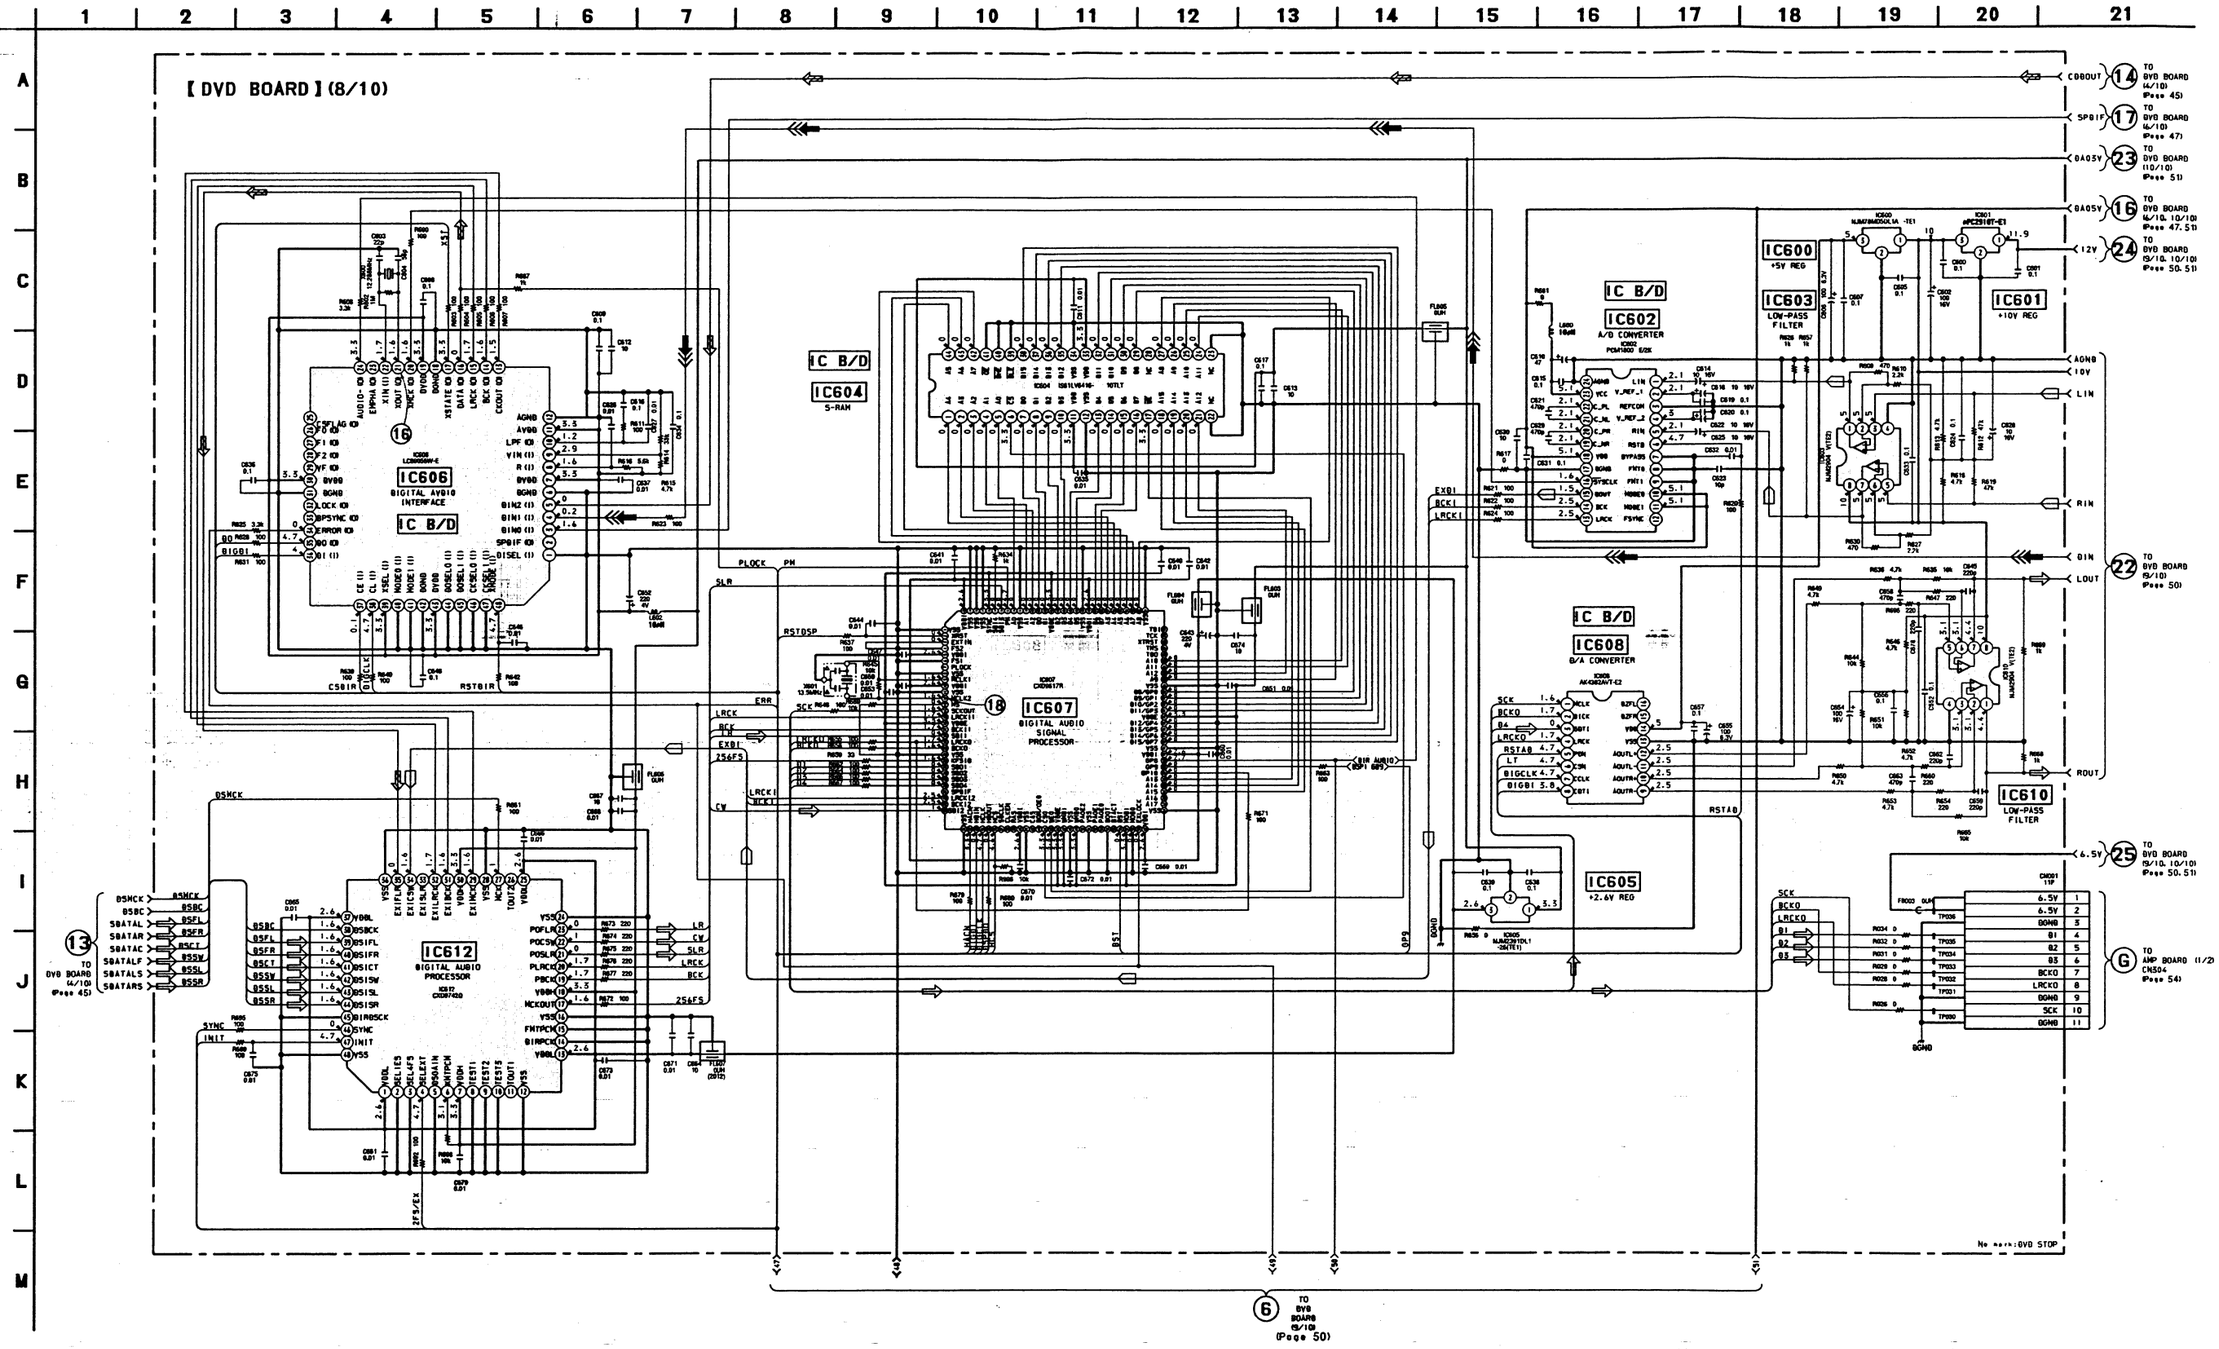

6-17. SCHEMATIC DIAGRAM – DVD SECTION (9/10) –

• See page 63 for Waveforms. • See page 69 for IC Block Diagram.

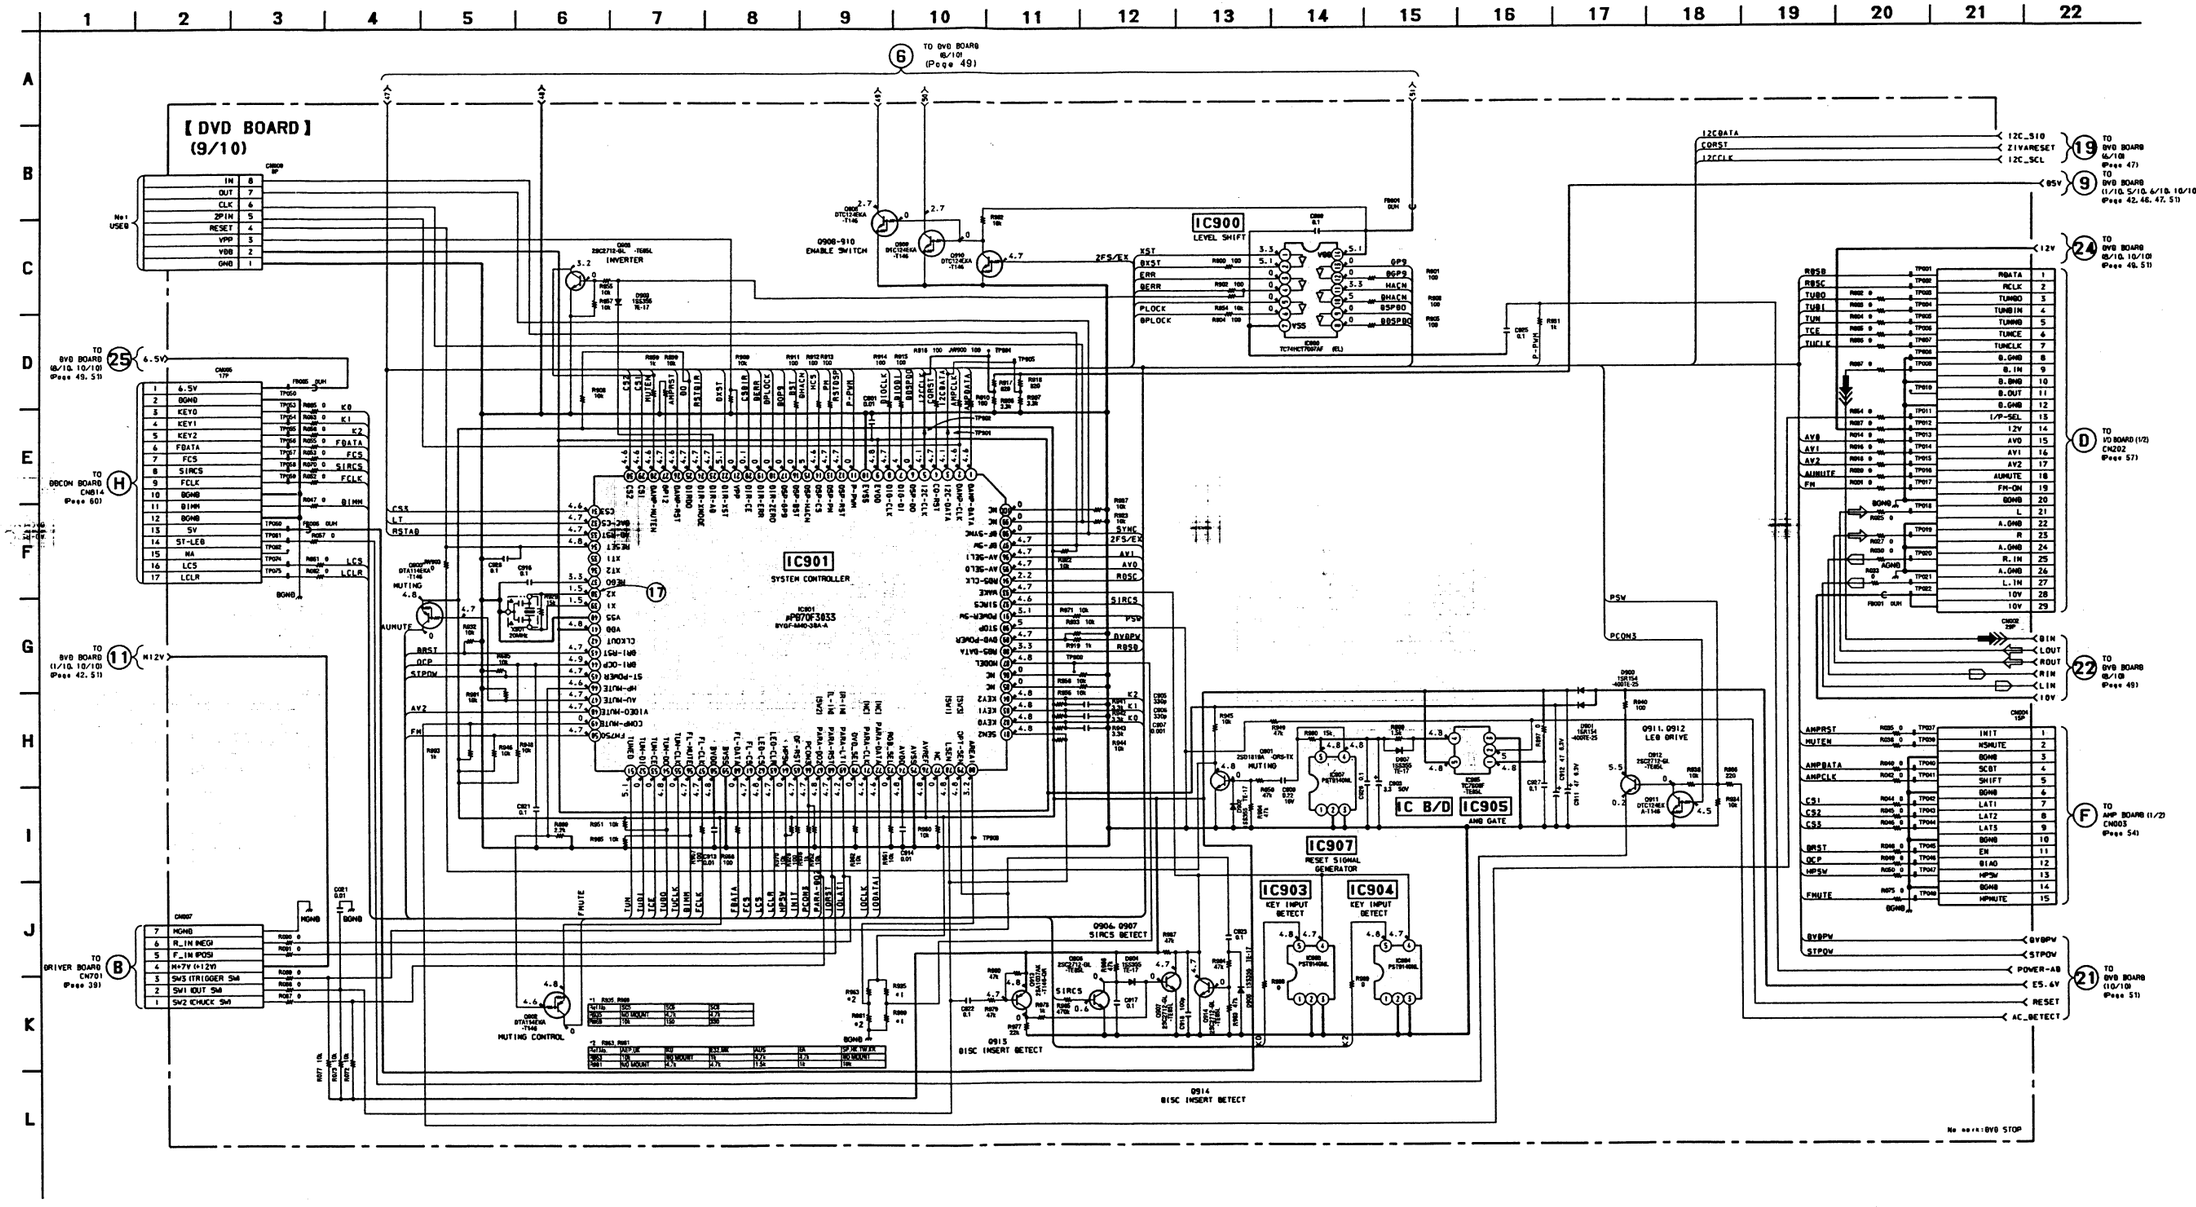

6-18. SCHEMATIC DIAGRAM – DVD SECTION (10/10) –

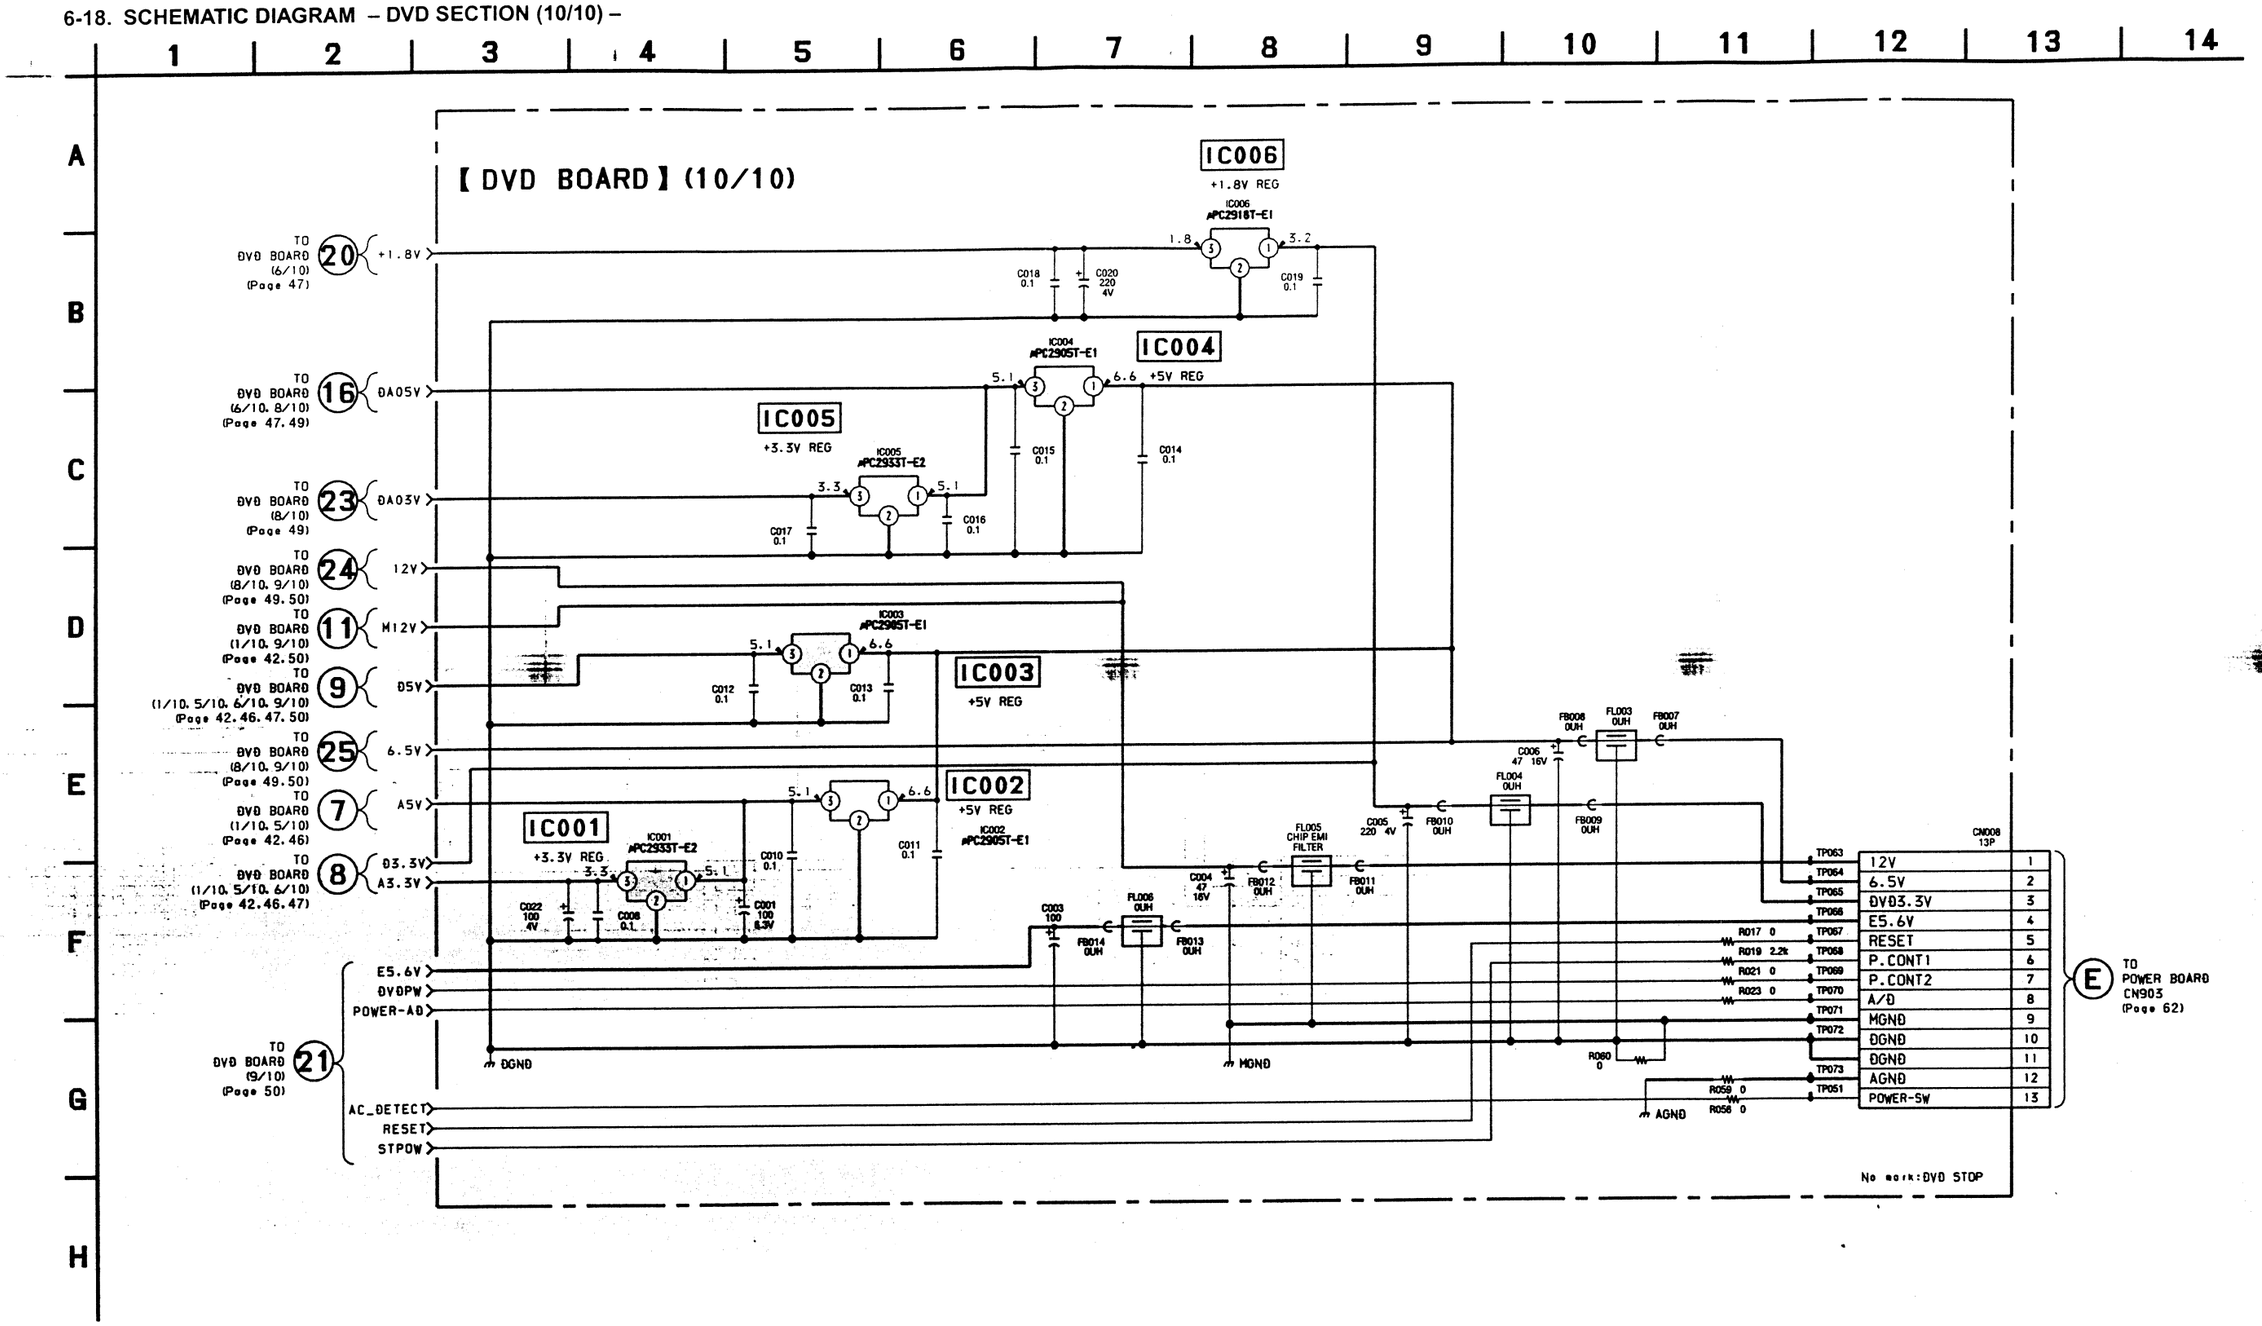

6-19. PRINTED WIRING BOARD – AMP SECTION (SIDE A) –

• See page 30 for Circuit Boards Location.

• : Uses unleaded solder.

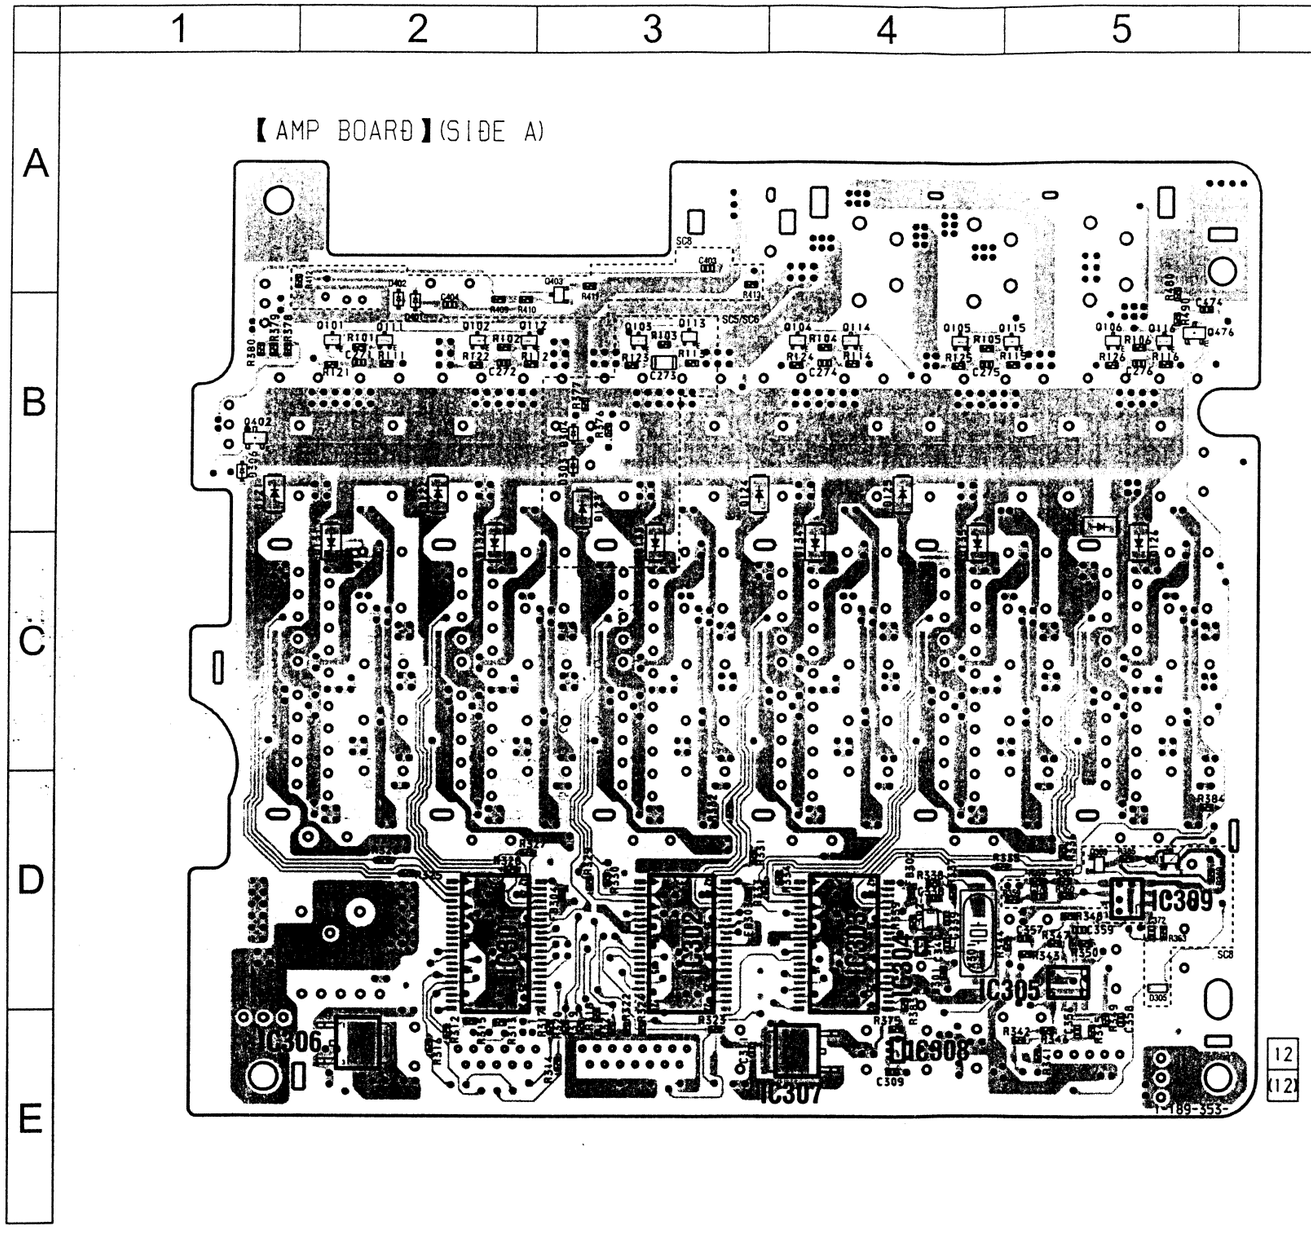

• Semiconductor Location

Ref. No.	Location
D121	B-1
D122	B-2
D123	B-3
D124	B-3
D125	B-4
D126	C-5
D131	C-2
D132	C-2
D133	C-3
D134	C-4
D135	C-4
D303	B-3
D304	B-3
D305	D-5
D306	B-1
D401	B-2
D402	B-2
IC301	D-2
IC302	D-3
IC303	D-4
IC304	D-4
IC305	D-5
IC306	E-2
IC307	E-4
IC308	E-4
IC309	D-5
Q101	B-2
Q102	B-2
Q103	B-3
Q104	B-4
Q105	B-4
Q106	B-5
Q111	B-2
Q112	B-2
Q113	B-3
Q114	B-4
Q115	B-5
Q116	B-5
Q301	D-5
Q309	D-5
Q402	B-1
Q403	B-3
Q476	B-5

6-20. PRINTED WIRING BOARD – AMP SECTION (SIDE B) –

• See page 30 for Circuit Boards Location.

• : Uses unleaded solder.

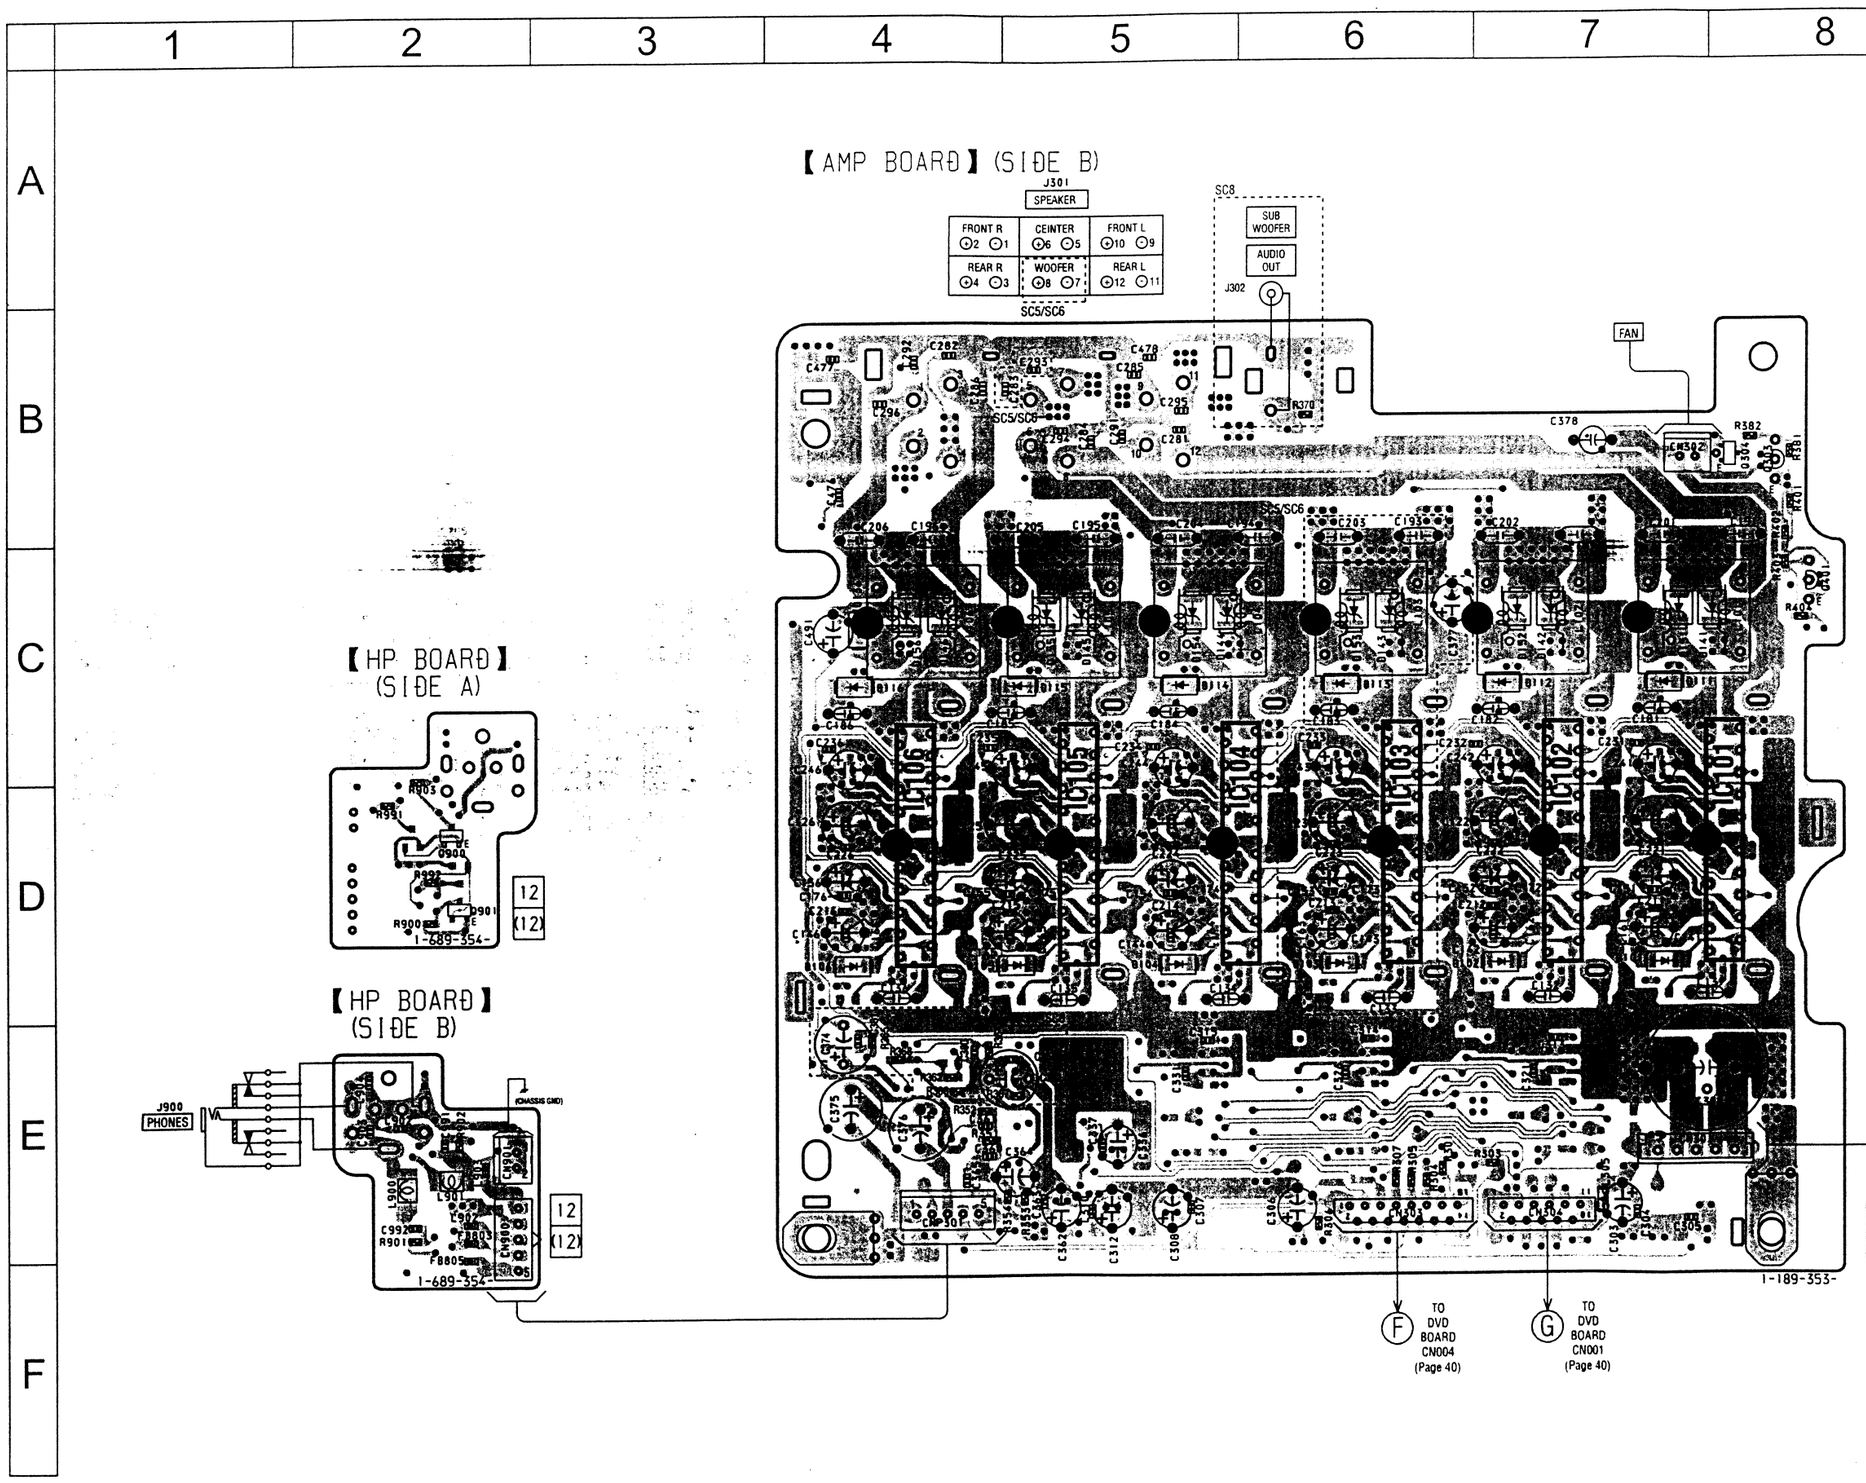

• Semiconductor Location

Ref. No.	Location
D101	D-7
D102	D-6
D103	D-6
D104	D-5
D105	D-4
D106	D-4
D111	C-7
D112	C-7
D113	C-6
D114	C-5
D115	C-5
D116	C-4
D141	C-7
D142	C-7
D143	C-6
D144	C-5
D145	C-5
D146	C-4
D151	C-7
D152	C-7
D153	C-6
D154	C-5
D155	C-5
D156	C-4
IC101	D-8
IC102	D-7
IC103	D-6
IC104	D-5
IC105	D-5
IC106	D-4
Q303	B-8
Q304	B-8
Q401	C-8
Q900	D-2
Q901	D-2

6-21. SCHEMATIC DIAGRAM – AMP SECTION (1/2) –

• See page 64 for Waveforms. • See page 65 for IC Block Diagram.

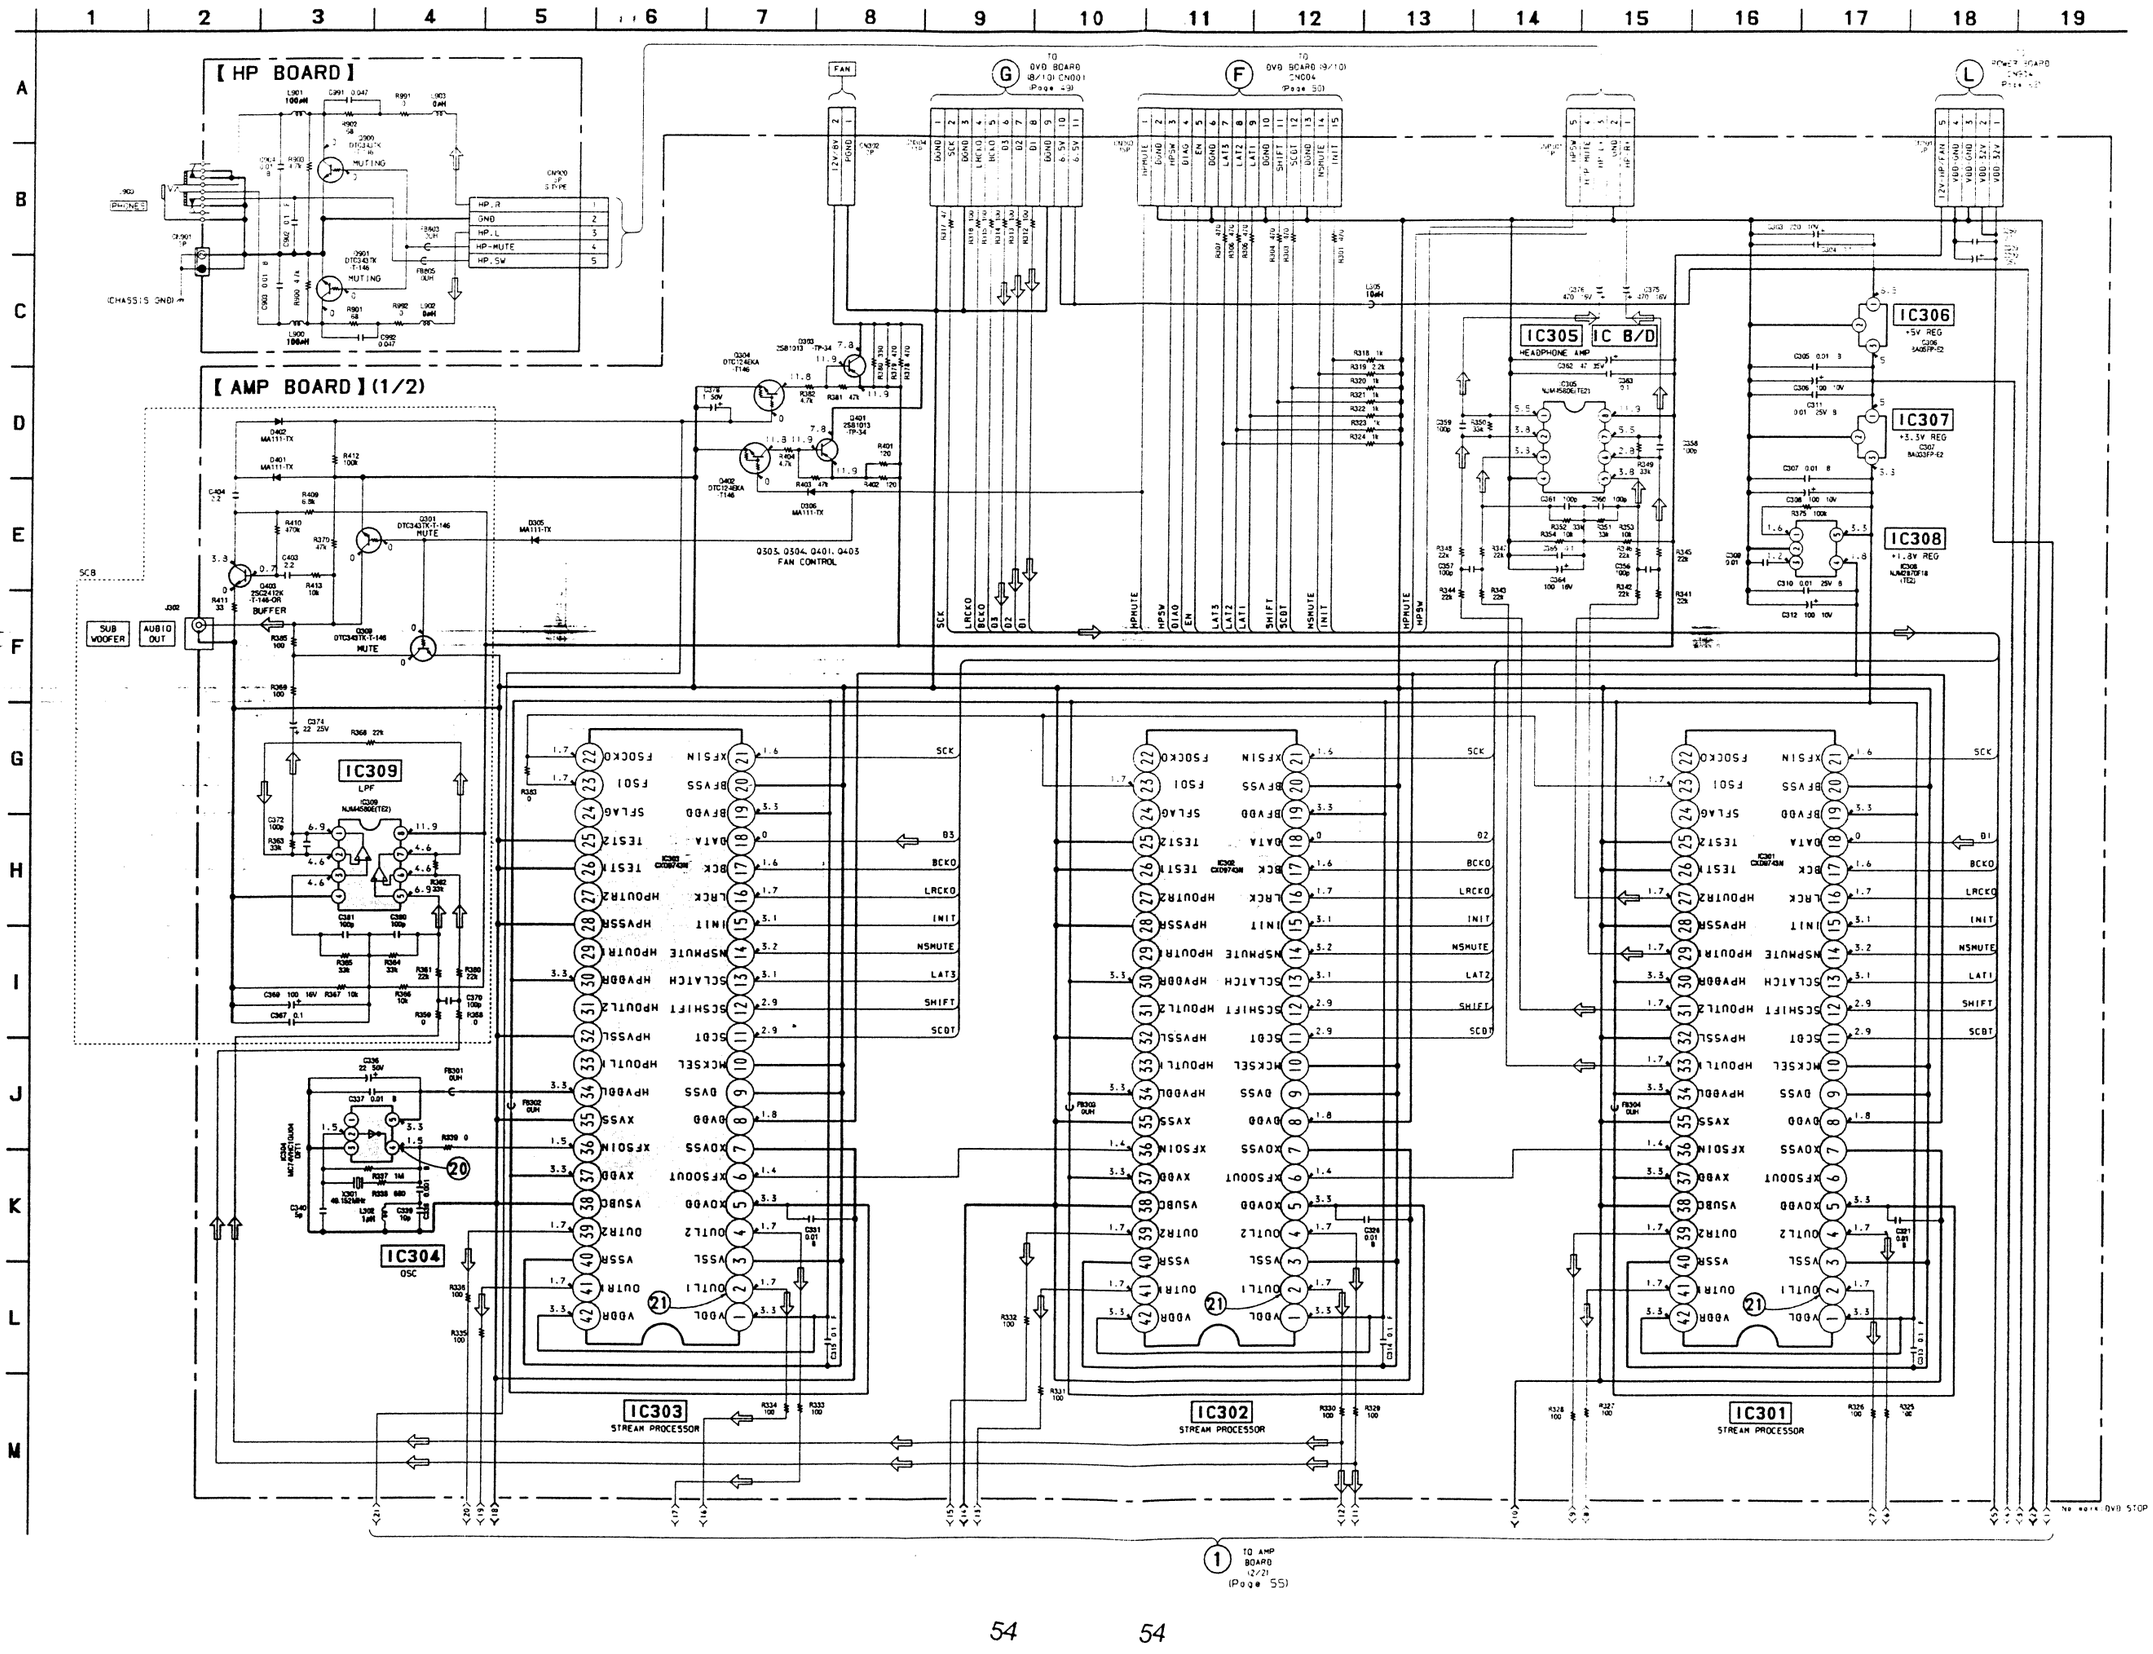

54

6-22. SCHEMATIC DIAGRAM – AMP SECTION (2/2) –

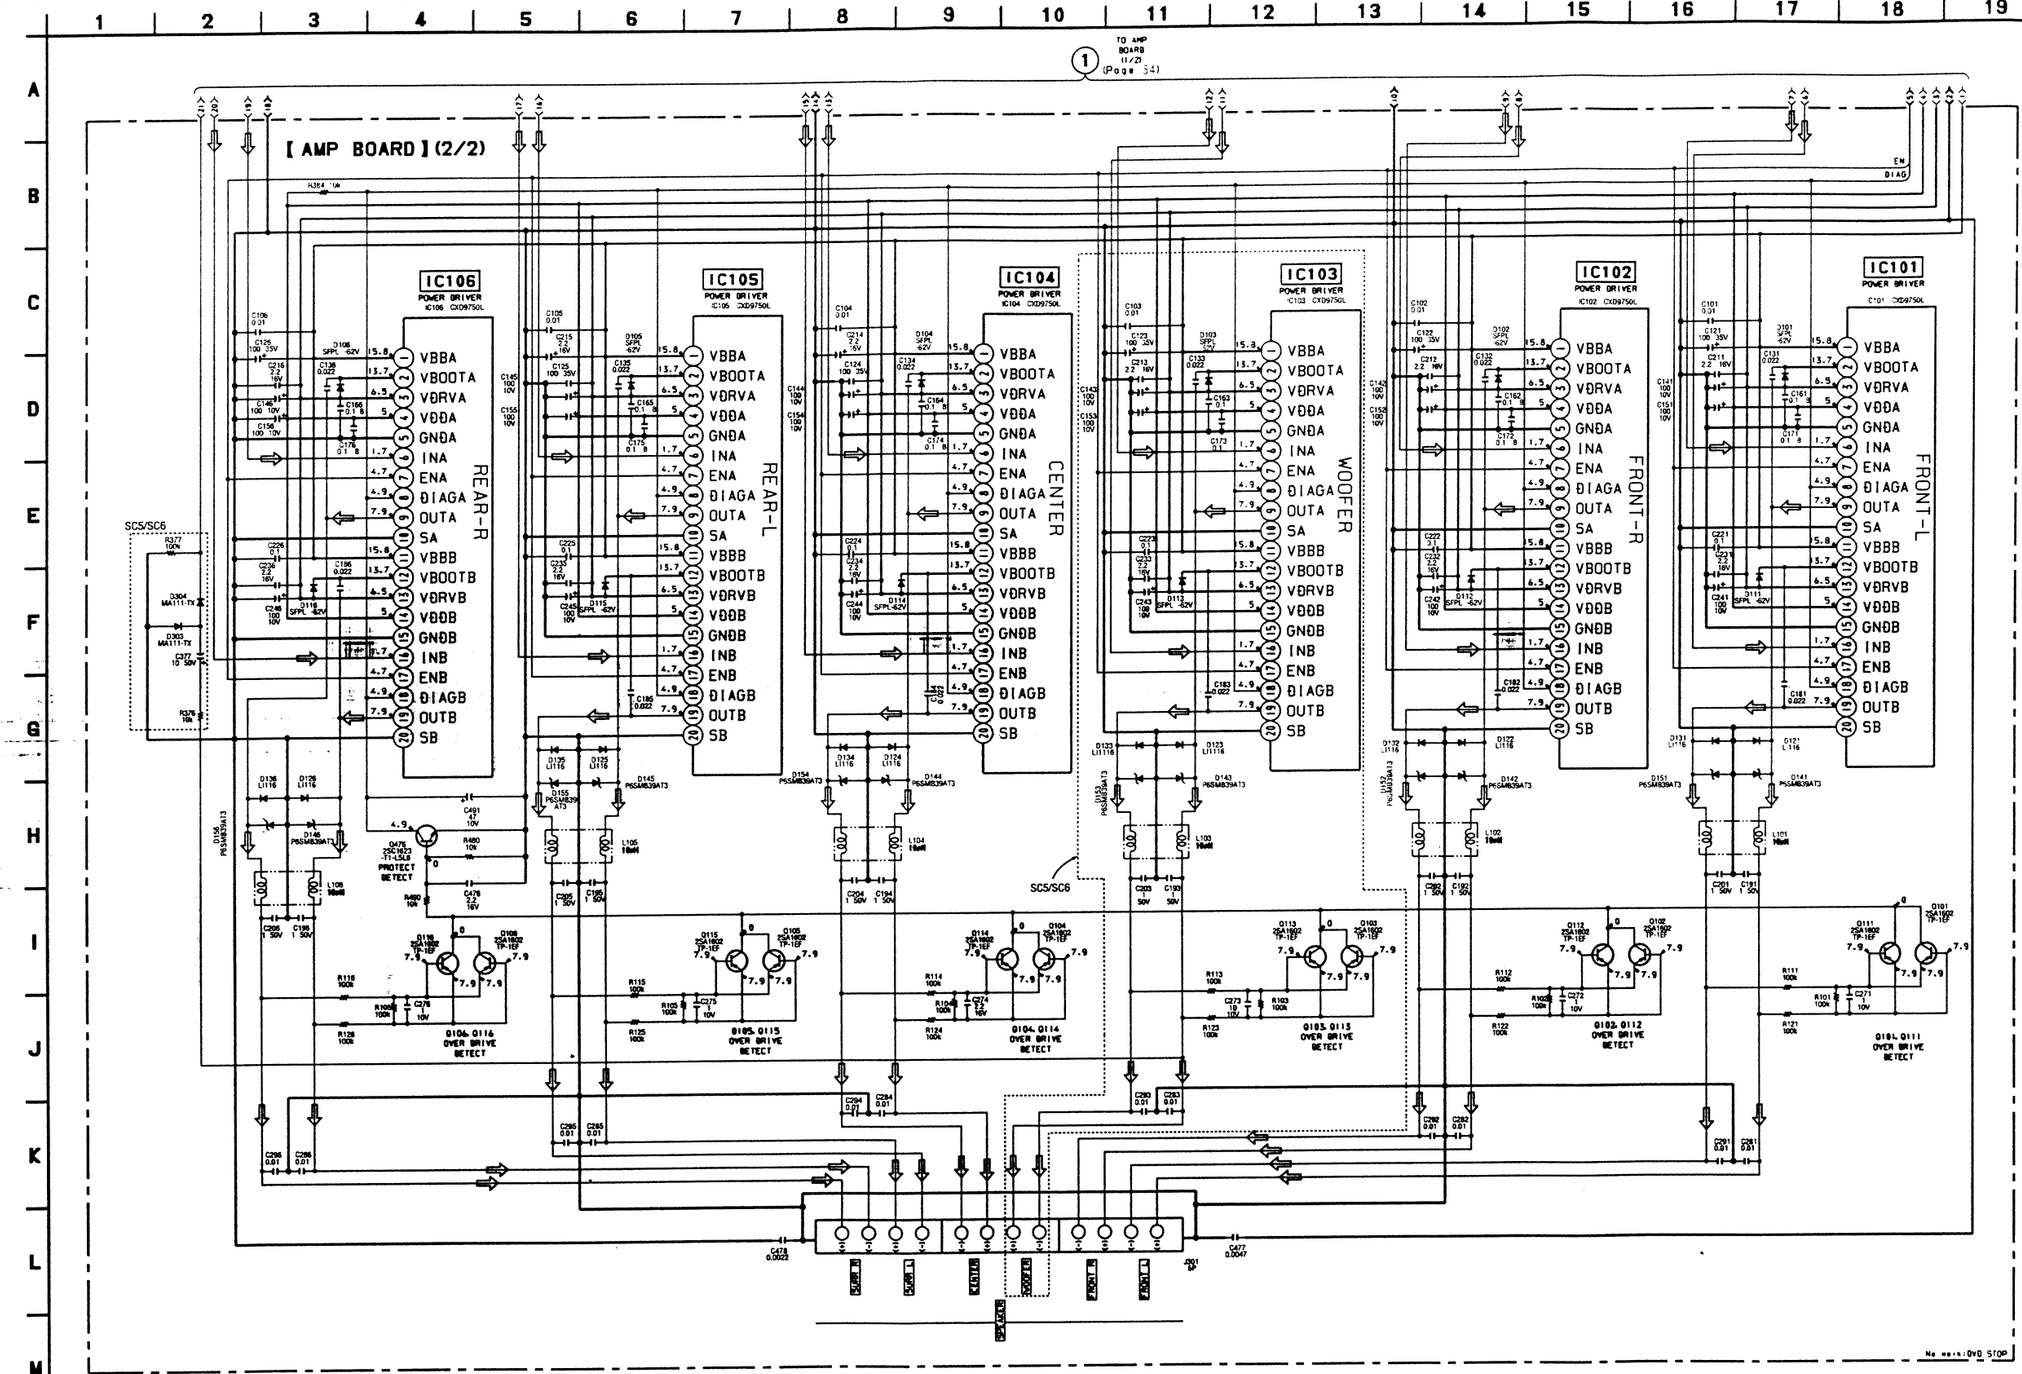

6-23. PRINTED WIRING BOARD – I/O SECTION – • See page 30 for Circuit Boards Location. • 4F : Uses unleaded solder.

【I/O BOARD】(SIDE A)

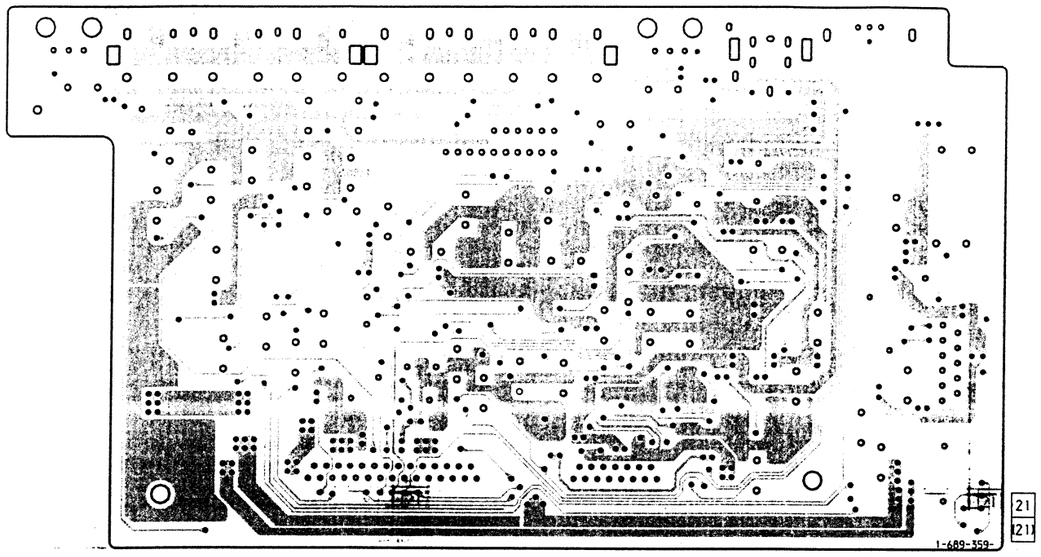

【SCART BOARD】(SIDE A)

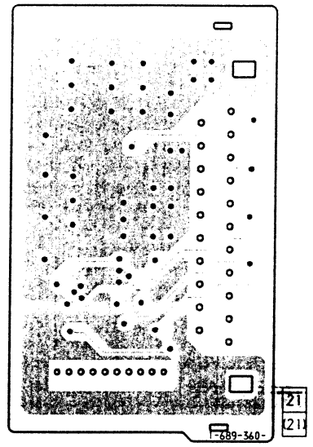

【I/O BOARD】(SIDE B)

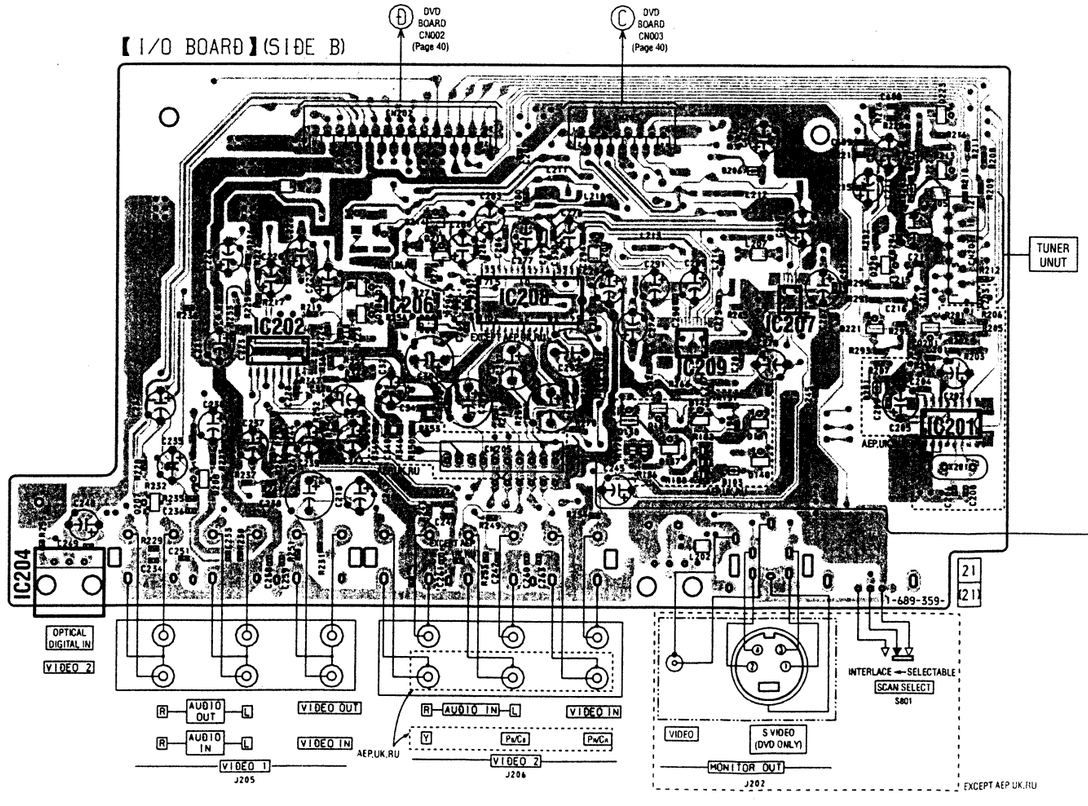

AEP,UK,RU

【SCART BOARD】(SIDE B)

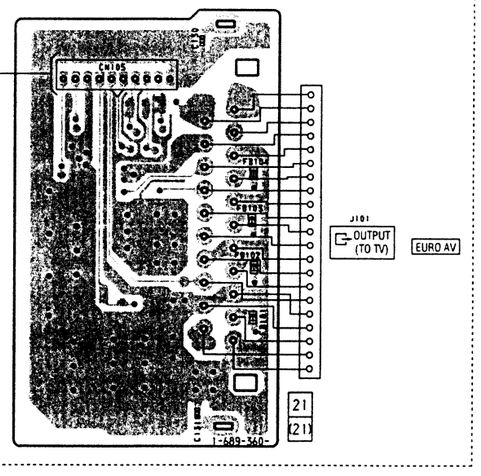

• **Semiconductor Location**

Ref. No.	Location
D103	G-5
D201	F-6
D202	E-6
D203	E-6
D206	E-5
IC201	G-6
IC202	F-3
IC204	H-1
IC206	F-3
IC207	F-5
IC208	F-4
IC209	F-5
Q137	G-5
Q138	G-5
Q139	G-5
Q140	G-5
Q141	G-5
Q142	G-5
Q201	F-6
Q205	F-3
Q206	F-3
Q207	G-2
Q208	G-2
Q210	F-3
Q214	F-3
Q220	F-6
Q221	F-6
Q222	E-6
Q223	E-6

6-24. SCHEMATIC DIAGRAM – I/O SECTION (1/2) –

• See page 64 for Waveforms. • See page 70 for IC Block Diagram.

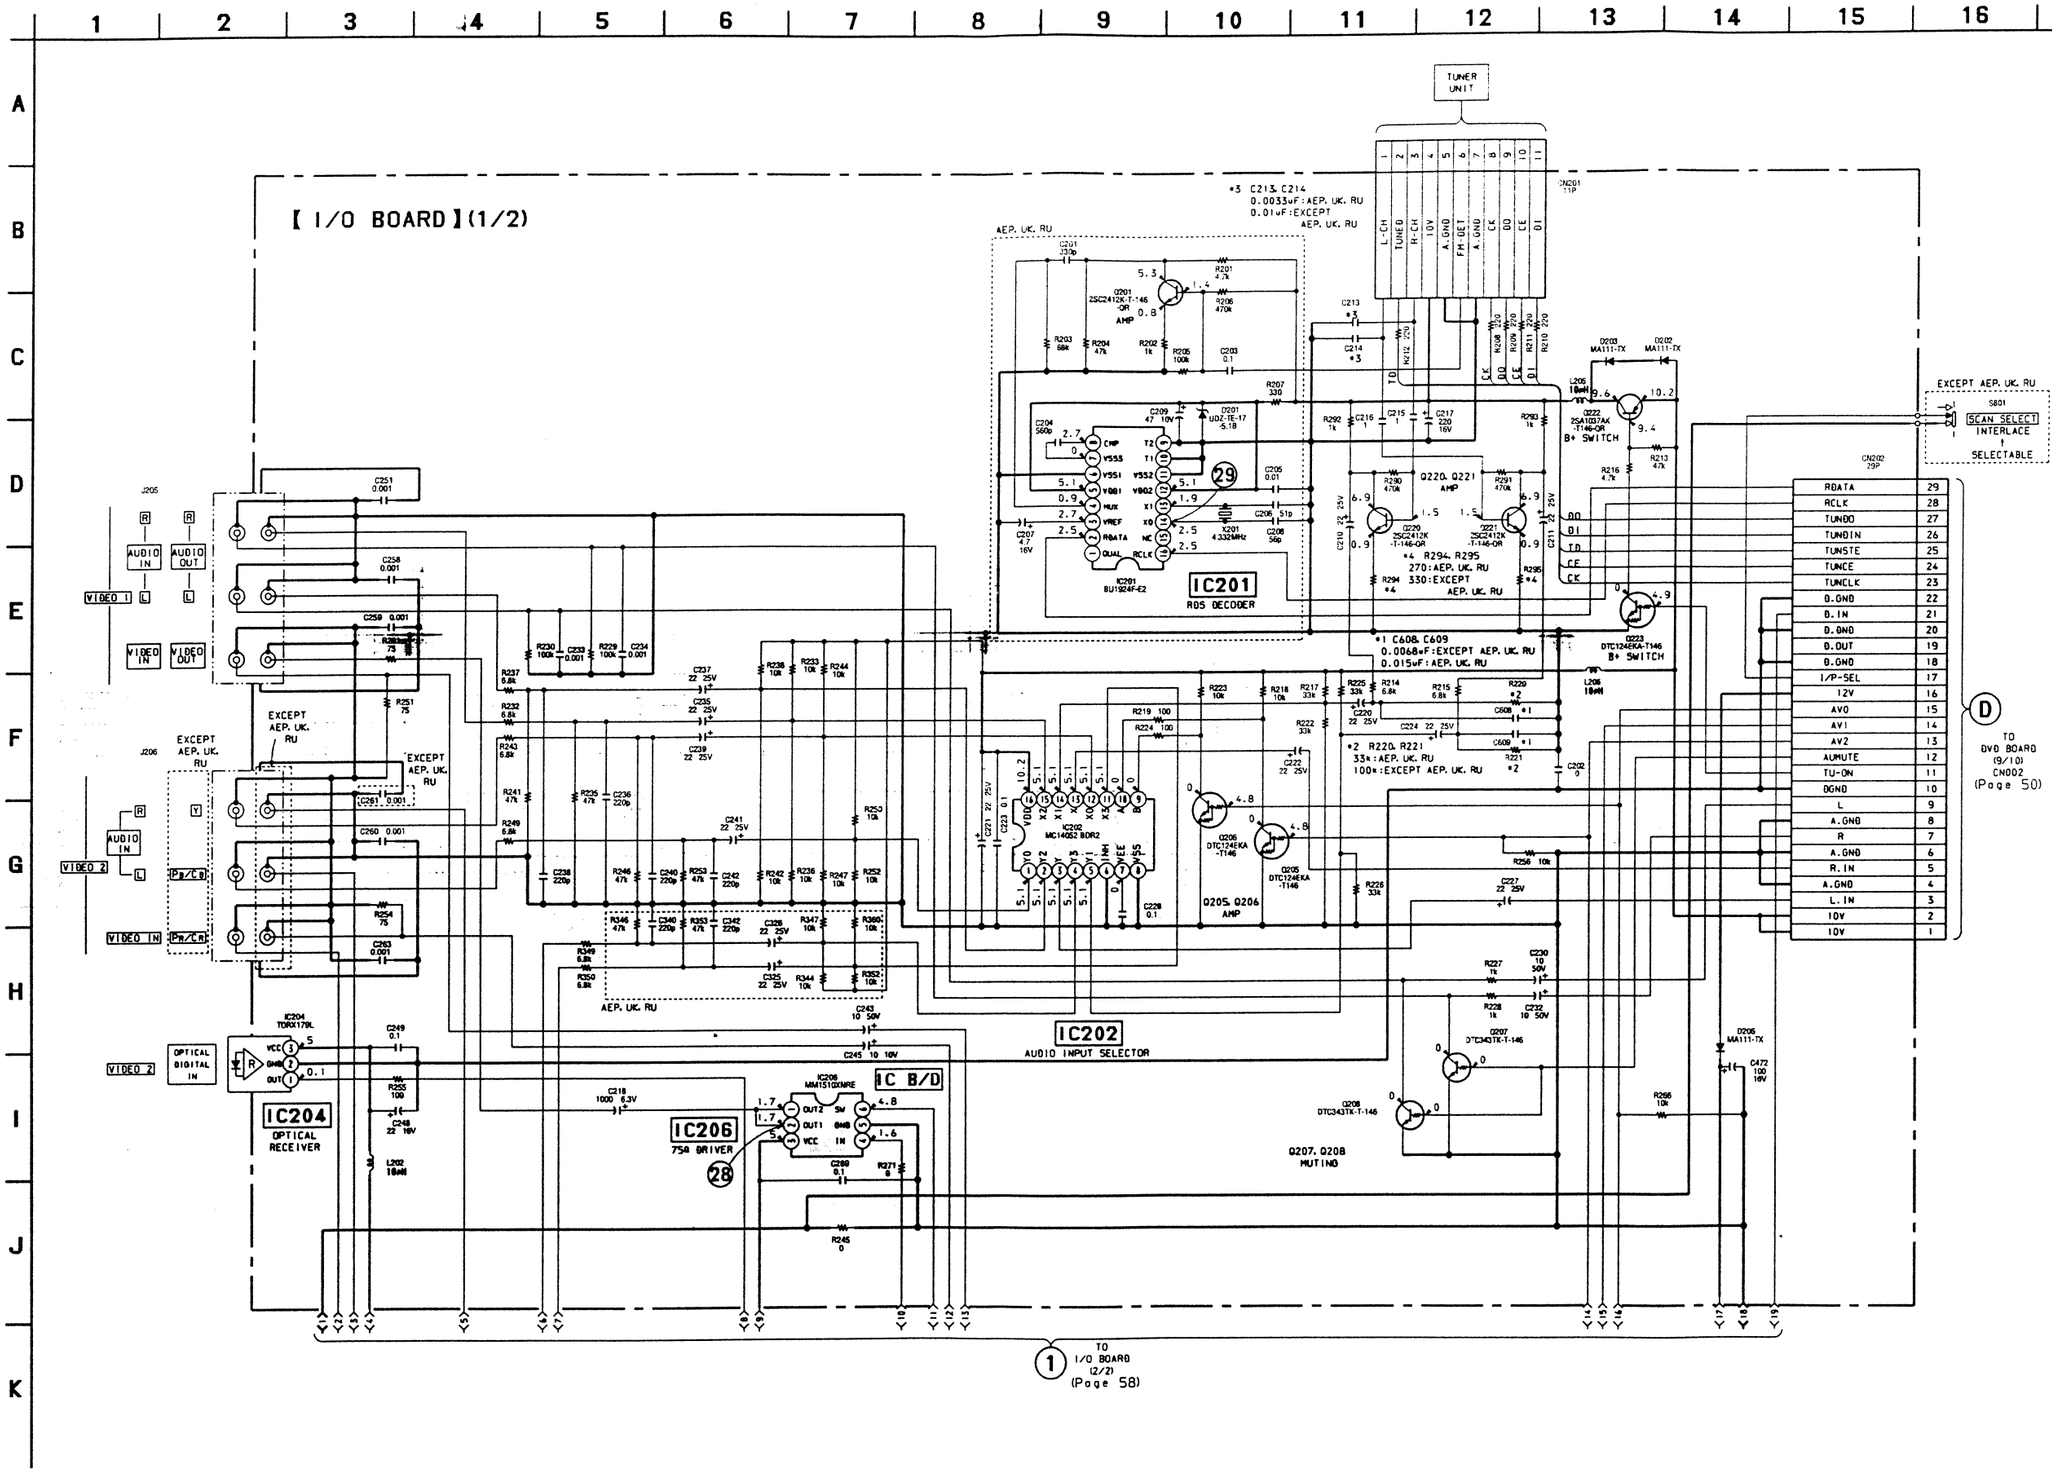

6-25. SCHEMATIC DIAGRAM – I/O SECTION (2/2) – • See page 64 for Waveforms. • See page 70, 71 for IC Block Diagrams.

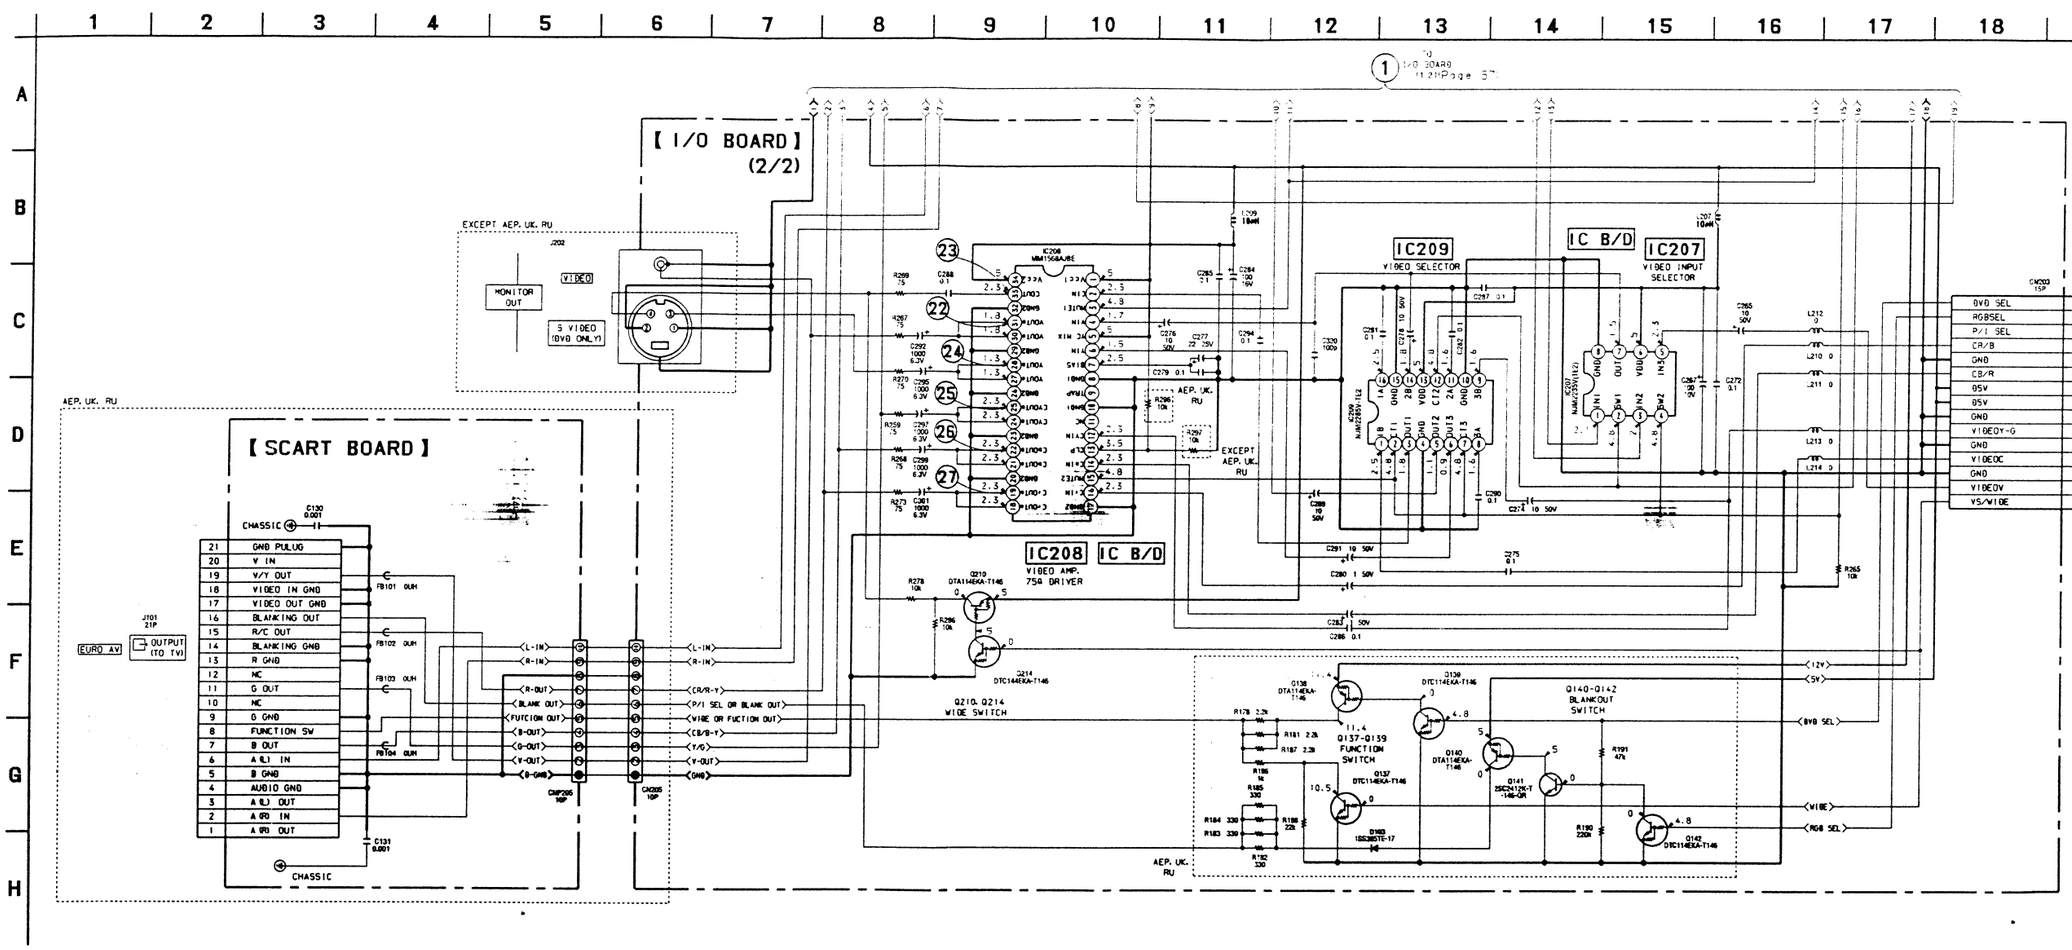

6-26. PRINTED WIRING BOARD – FRONT PANEL SECTION –

• See page 30 for Circuit Boards Location. • 4F : Uses unleaded solder.

【FL BOARD】(SIDE A)

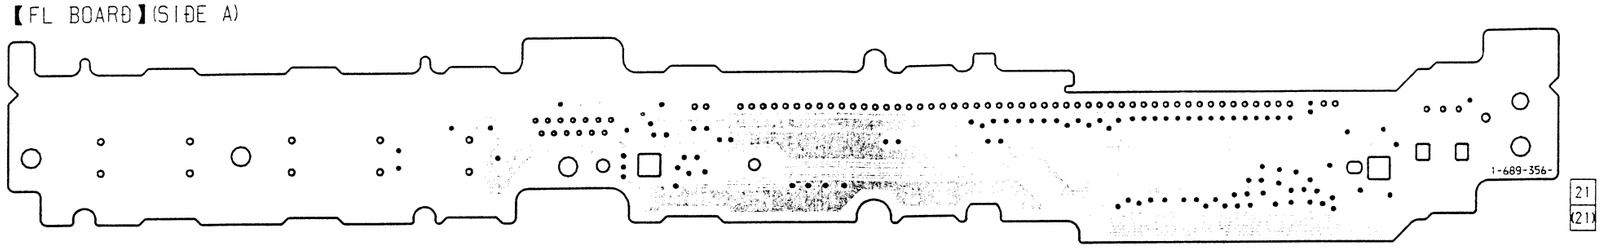

【FL BOARD】(SIDE B)

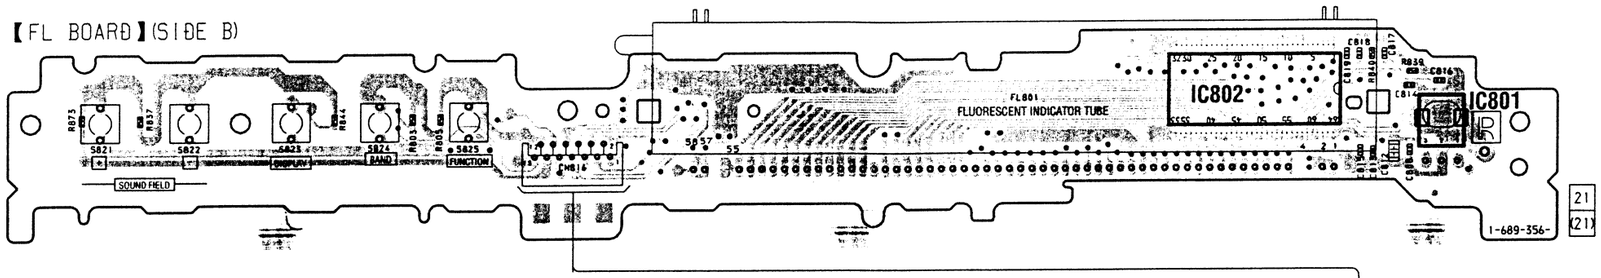

【DDCON BOARD】(SIDE A)

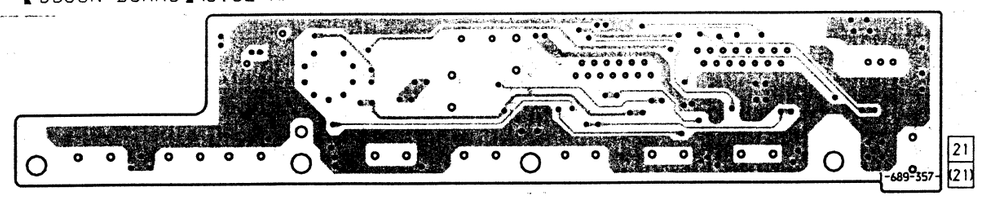

【DDCON BOARD】(SIDE B)

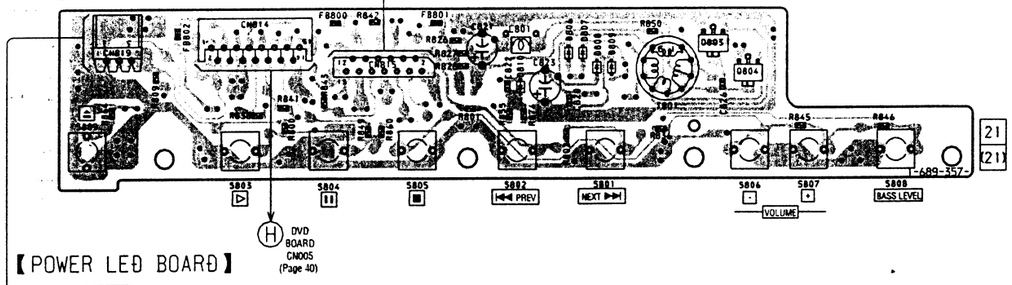

H DVD BOARD CN005 (Page 40)

【POWER LED BOARD】

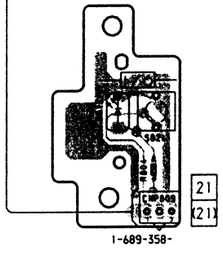

• Semiconductor Location

Ref. No.	Location
D806	D-9
D807	D-9
D808	D-9
D809	D-9
D810	D-9
D812	F-6
IC801	C-9
IC802	C-7
Q803	D-10
Q804	D-10

6-27. SCHEMATIC DIAGRAM – FRONT PANEL SECTION –

• See page 64 for Waveforms. • See page 70 for IC Block Diagram.

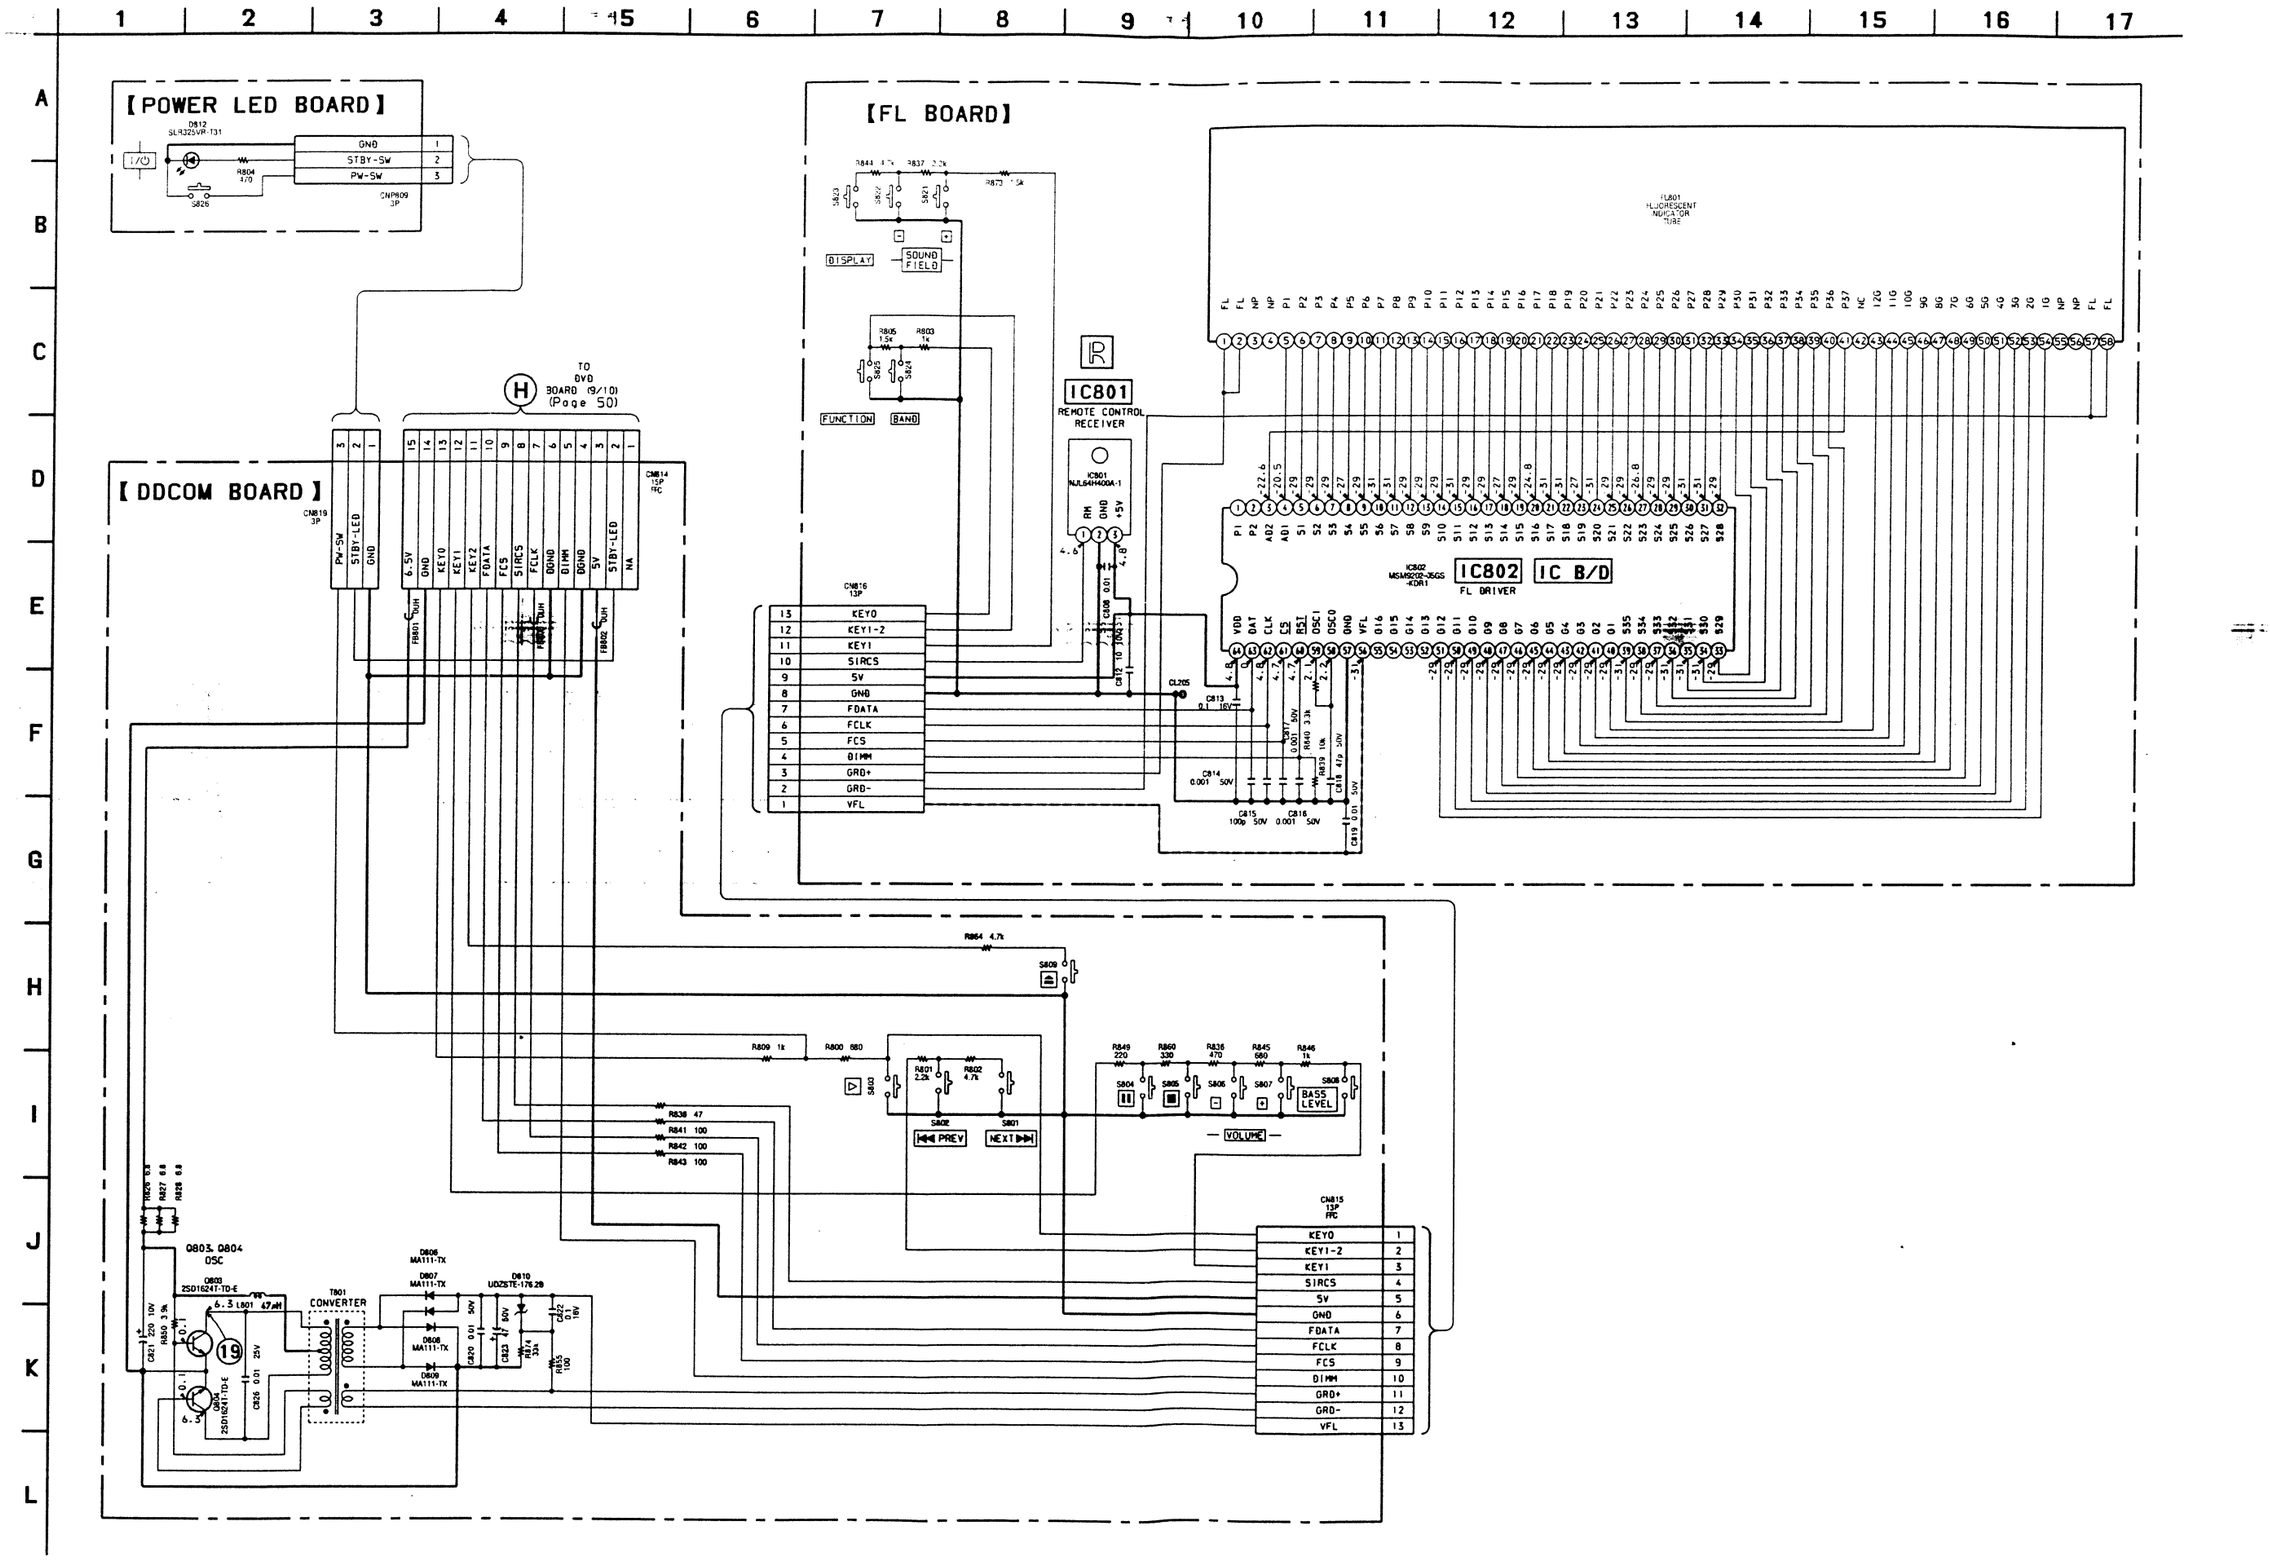

6-28. PRINTED WIRING BOARD – POWER SECTION –

• See page 30 for Circuit Boards Location.

• : Uses unleaded solder.

【POWER BOARD】

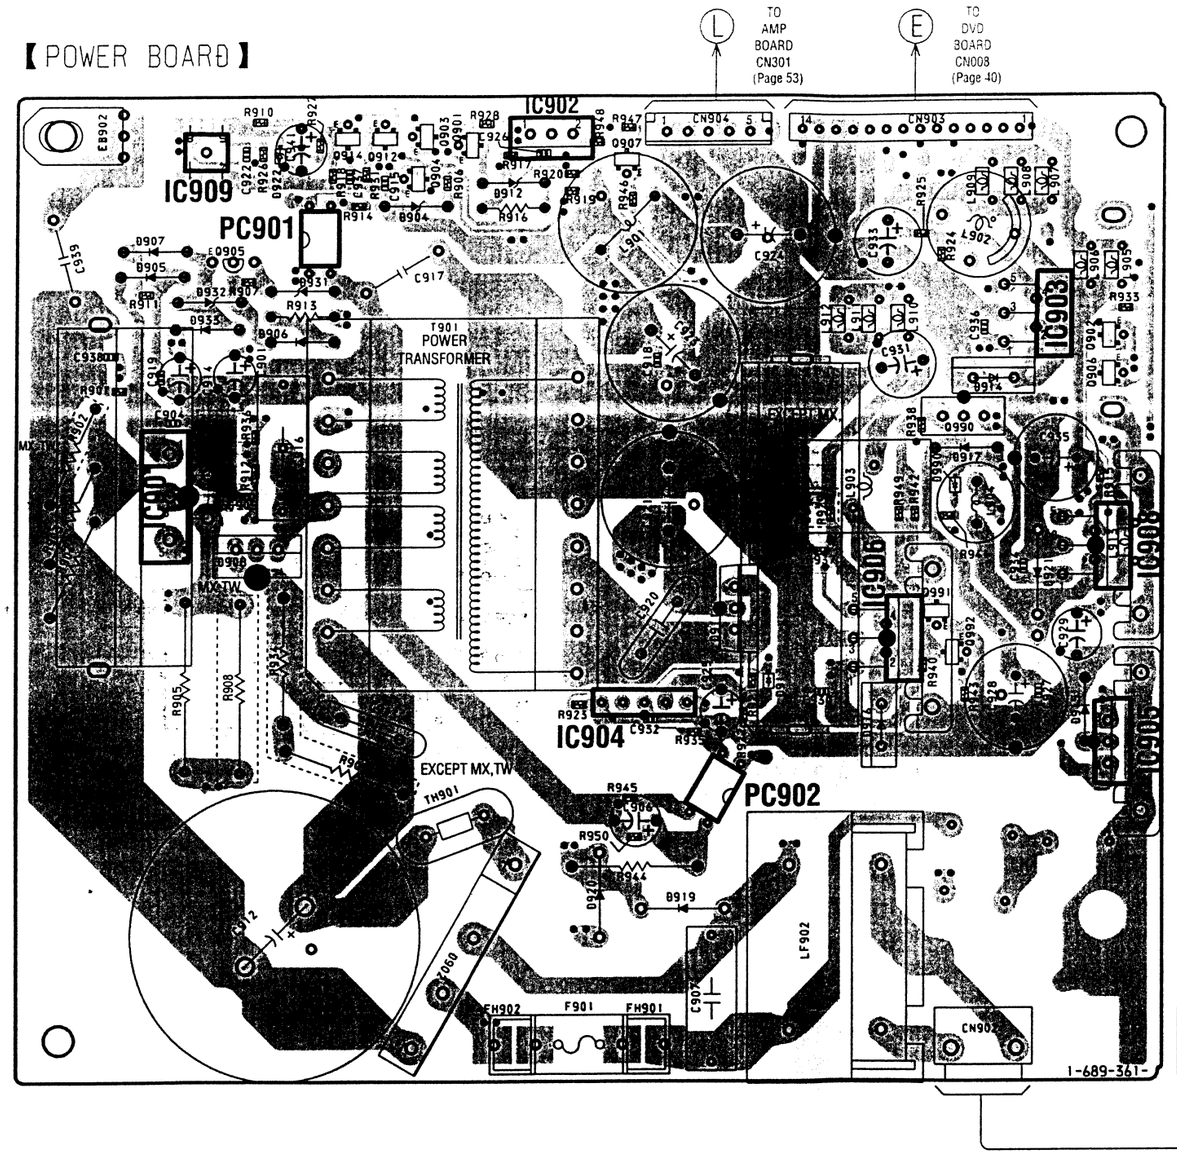

【LF BOARD】

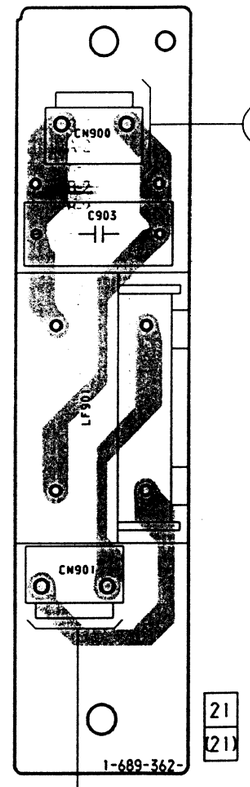

• Semiconductor Location

Ref. No.	Location
D902	E-3
D904	B-2
D905	B-1
D906	B-2
D907	B-1
D908	C-2
D911	C-4
D912	B-3
D913	C-4
D914	B-5
D915	D-5
D916	D-4
D917	C-5
D919	D-4
D920	D-3
D921	C-5
D922	A-2
D931	B-2
D932	B-2
D933	B-2
D990	C-5
IC901	C-2
IC902	A-3
IC903	B-5
IC904	D-3
IC905	D-5
IC906	C-4
IC908	C-5
IC909	A-2
PC901	B-2
PC902	D-4
Q901	A-3
Q902	B-5
Q903	A-3
Q904	A-3
Q905	B-2
Q906	B-5
Q907	A-3
Q912	A-2
Q914	A-2
Q990	B-5
Q991	C-5
Q992	C-5

6-29. SCHEMATIC DIAGRAM – POWER SECTION – • See page 71 for IC Block Diagram.

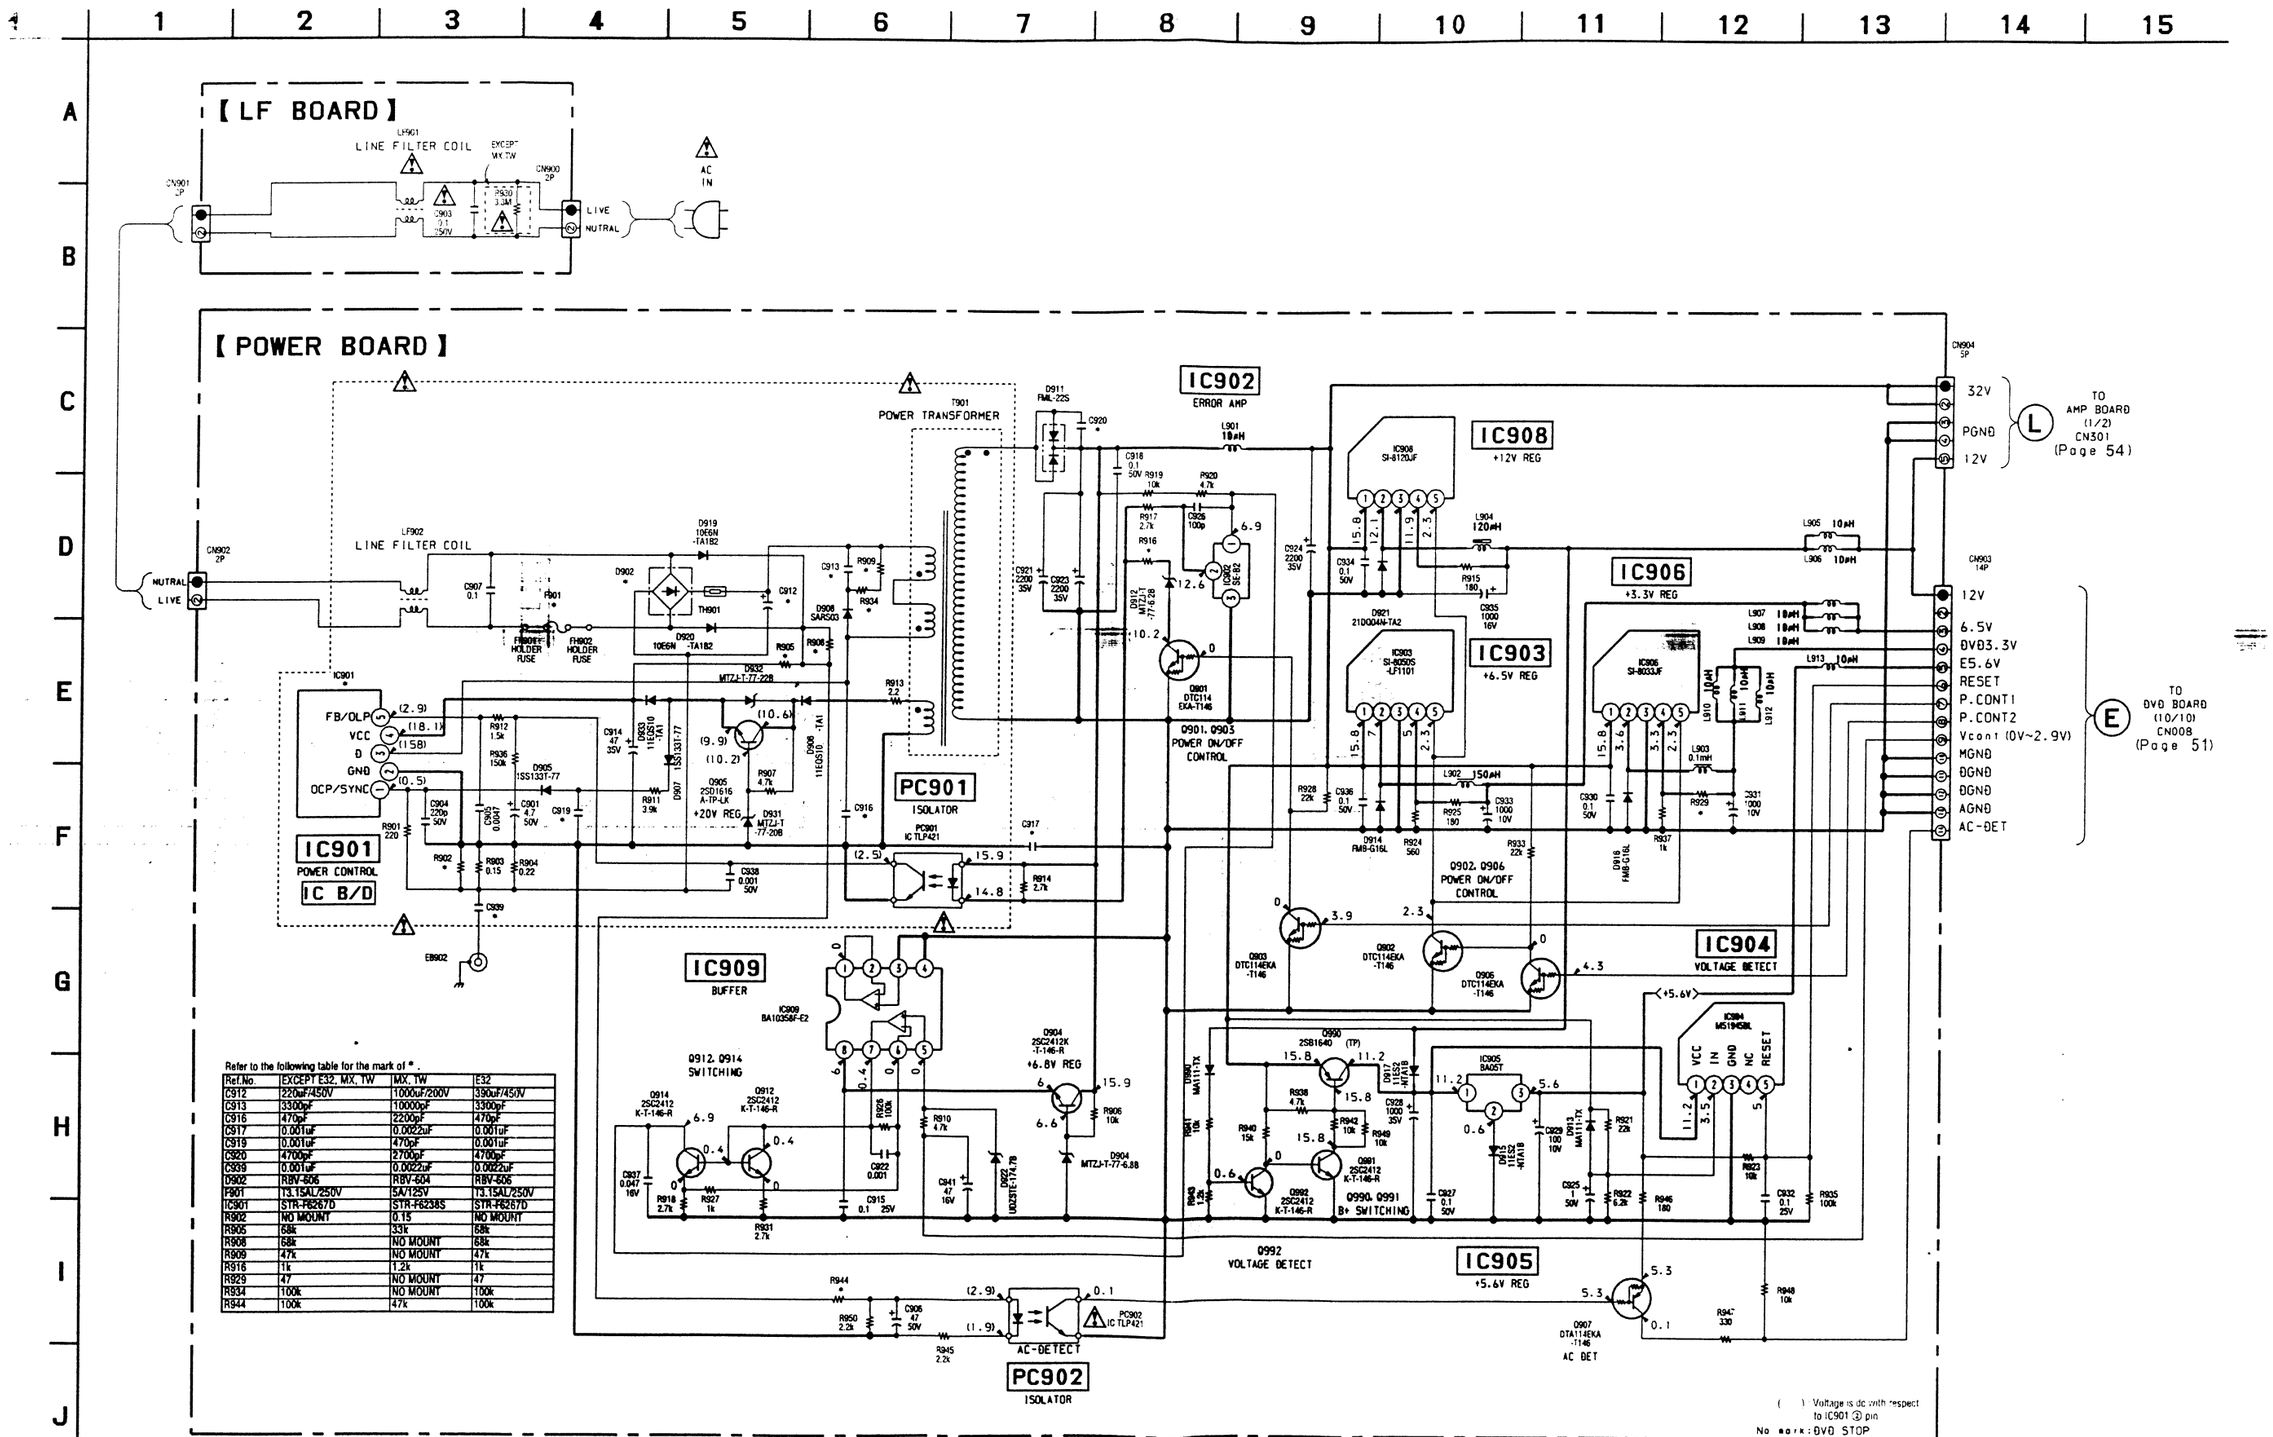

Refer to the following table for the mark of * .

Ref.No.	EXCEPT E32, MX, TW	MX, TW	E32
C912	220uF/450V	1000uF/200V	390uF/450V
C913	3300pF	10000pF	3300pF
C916	470pF	2200pF	470pF
C917	0.001uF	0.0022uF	0.001uF
C919	0.001uF	470pF	0.001uF
C920	4700pF	2700pF	4700pF
C939	0.001uF	0.0022uF	0.0022uF
D902	RBV-606	RBV-604	RBV-606
F901	T3.15AL/250V	5A/125V	T3.15AL/250V
IC901	STR-F6267D	STR-F6238S	STR-F6267D
R902	NO MOUNT	0.15	NO MOUNT
R905	68k	33k	68k
R908	68k	NO MOUNT	68k
R909	47k	NO MOUNT	47k
R916	1k	1.2k	1k
R929	47	NO MOUNT	47
R934	100k	NO MOUNT	100k
R944	100k	47k	100k

( ) Voltage is dc with respect to IC901 ③ pin

No mark : DVD STOP

• Waveforms

– RF BOARD –

① IC001 ① (DVDRFP)

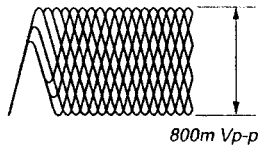

200m V/DIV, 100 ns/DIV

② IC001 ㊴ (TE)

500m V/DIV, 1 ms/DIV

③ IC001 ㊵ (FE)

100m V/DIV, 1 ms/DIV

④ IC001 ㊼ (RFAC)

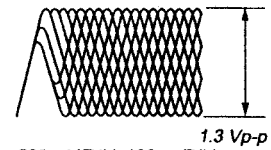

500m V/DIV, 100 ns/DIV

– DVD BOARD –

⑪ to ⑮ : color bars video signal

⑤ IC303 ⑧ (XTO)

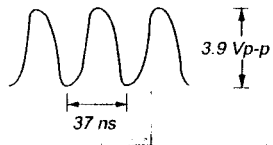

1 V/DIV, 10 ns/DIV

⑥ IC303 ⑨ (SO1)

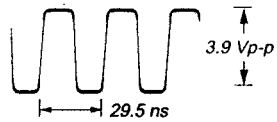

1 V/DIV, 10 ns/DIV

⑦ IC303 ⑩ (SO2)

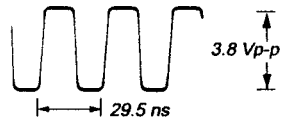

1 V/DIV, 10 ns/DIV

⑧ IC303 ⑬ (SO3)

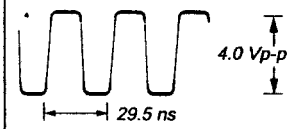

1 V/DIV, 10 ns/DIV

⑨ IC303 ③ (MO1)

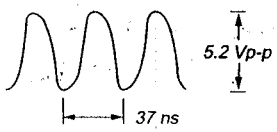

1 V/DIV, 10 ns/DIV

⑩ IC301 ㊵ (XTAL)

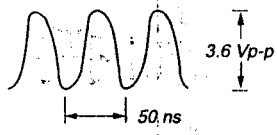

1 V/DIV, 20 ns/DIV

⑪ IC206 ⑪ (VDAC_0)

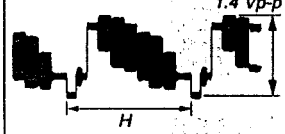

500 mV/DIV, 20 µs/DIV

⑫ IC206 ⑫ (VDAC_1)

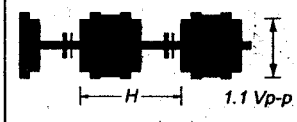

500 mV/DIV, 20 µs/DIV

⑬ IC206 ⑭ (VDAC_2)
(AEP,UK,RU)

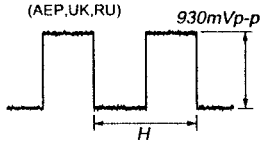

500m V/DIV, 20 µs/DIV

⑬ IC206 ⑮ (VDAC_2)
(EXCEPT AEP,UK,RU)

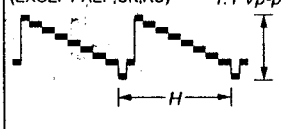

500 mV/DIV, 20 µs/DIV

⑭ IC206 ⑫ (VDAC_3)
(AEP,UK,RU)

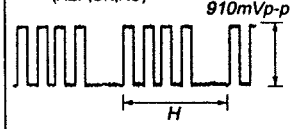

500m V/DIV, 20 µs/DIV

⑭ IC206 ⑫ (VDAC_3)
(EXCEPT AEP,UK,RU)

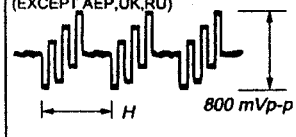

200 mV/DIV, 20 µs/DIV

⑮ IC206 ⑩ (VDAC_4)
(AEP,UK,RU)

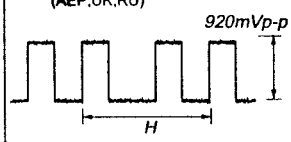

500m V/DIV, 20 µs/DIV

⑮ IC206 ⑩ (VDAC_4)
(EXCEPT AEP,UK,RU)

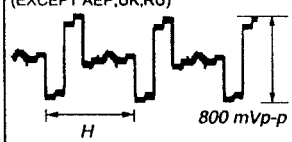

200 mV/DIV, 20 µs/DIV

⑯ IC606 ㉑ (XOUT)

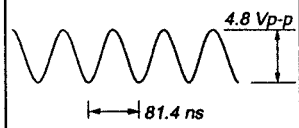

1 V/DIV, 40 ns/DIV

⑰ IC901 ㊳ (X2)

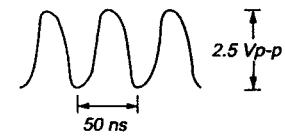

1 V/DIV, 20 ns/DIV

⑱ IC607 ⑲ (MCLK2)

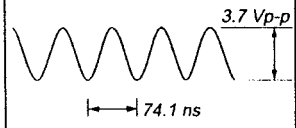

1 V/DIV, 40 ns/DIV

– DDCOM BOARD –

⑲ Q803 collector

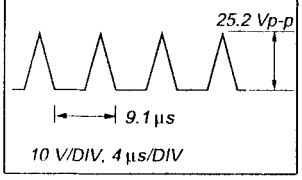

10 V/DIV, 4 µs/DIV

– AMP BOARD –

⑳ IC304 ④

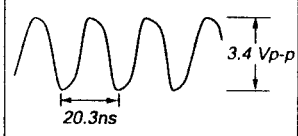

1 V/DIV, 10 ns/DIV

㉑ IC301, 302, 303 ② (OUTL1)

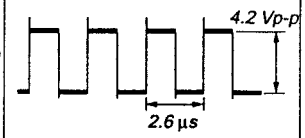

1 V/DIV, 1 µs/DIV

– I/O BOARD –

㉒ to ㉘ : color bars video signal

㉒ IC208 ㉛ (VOUTb)

1 V/DIV, 20 µs/DIV

㉓ IC208 ㉝ (COUT)



1 V/DIV, 20 µs/DIV

㉔ IC208 ㉘ (YOUTb)
(AEP,UK,RU)

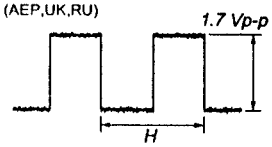

500 mV/DIV, 20 µs/DIV

㉔ IC208 ㉘ (YOUTb)
(EXCEPT AEP,UK,RU)

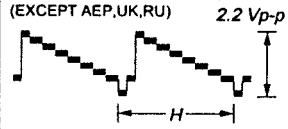

1 V/DIV, 20 µs/DIV

㉕ IC208 ㉕ (CYOUTb)
(AEP,UK,RU)

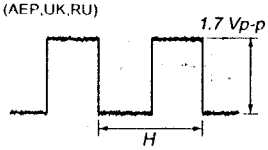

500 mV/DIV, 20 µs/DIV

㉕ IC208 ㉕ (CYOUTb)
(EXCEPT AEP,UK,RU)

1 V/DIV, 20 µs/DIV

㉖ IC208 ㉒ (CbOUTb)
(AEP,UK,RU)

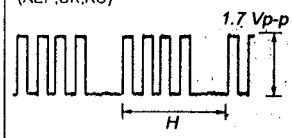

500 mV/DIV, 20 µs/DIV

㉖ IC208 ㉒ (CbOUTb)
(EXCEPT AEP,UK,RU)

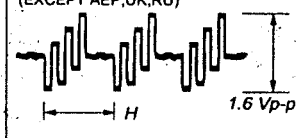

500 mV/DIV, 20 µs/DIV

㉗ IC208 ⑲ (CrOUTb)
(AEP,UK,RU)

500 mV/DIV, 20 µs/DIV

㉗ IC208 ⑲ (CrOUTb)
(EXCEPT AEP,UK,RU)

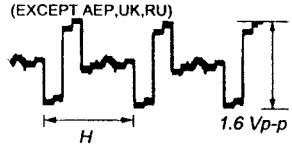

500 mV/DIV, 20 µs/DIV

㉘ IC206 ② (OUT1)



1 V/DIV, 20 µs/DIV

㉙ IC201 ⑭ (XO)
(AEP,UK,RU)

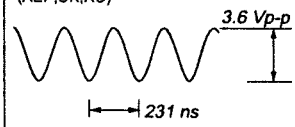

1 V/DIV, 100 ns/DIV

6-30. IC BLOCK DIAGRAMS

– AMP BOARD –

IC305 NJM4580E (TE2)

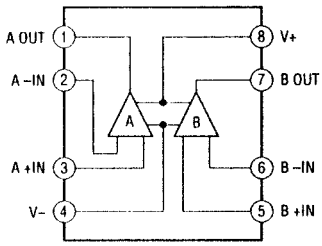

– DRIVER BOARD –

IC701 BA6956AN

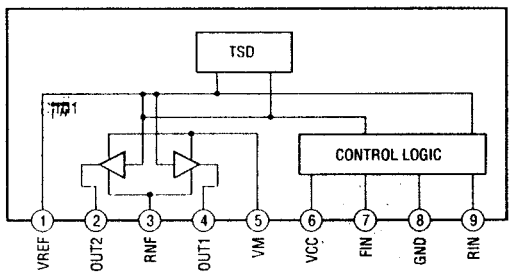

IC215 SN74ALVCH16841DGGR

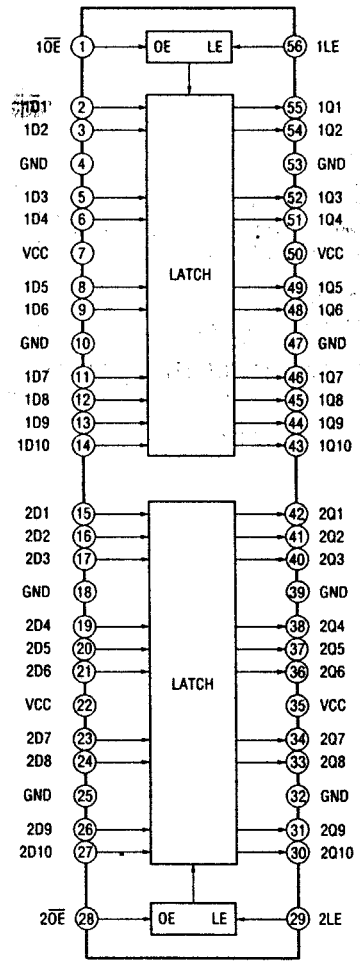

– DVD BOARD –

IC203 BR9040F-WE2

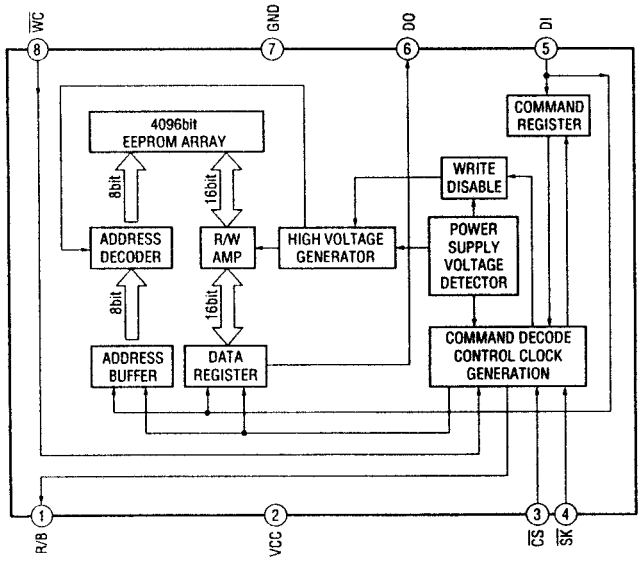

IC401 CXD3068Q

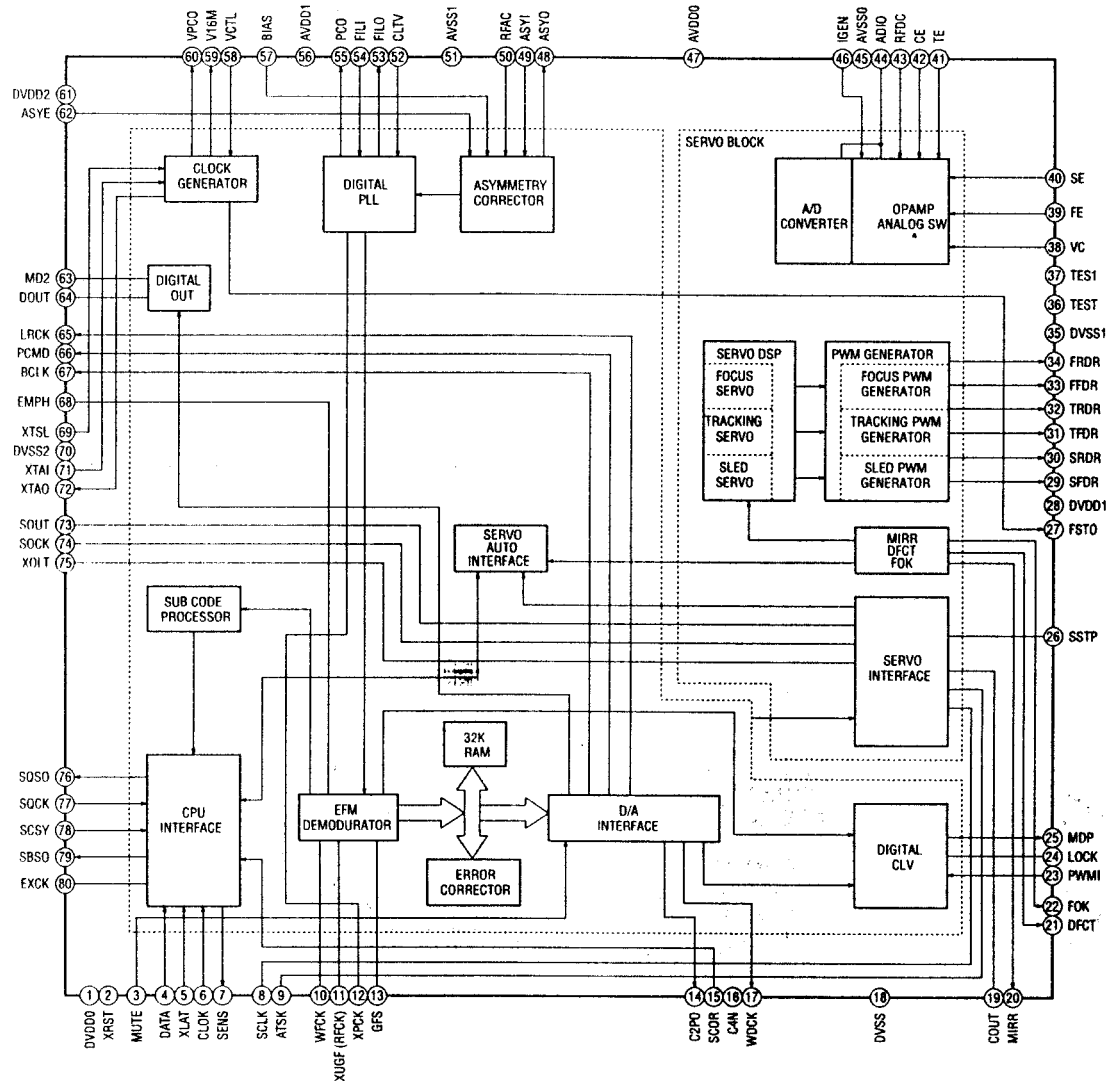

IC602 PCM1800E/2K

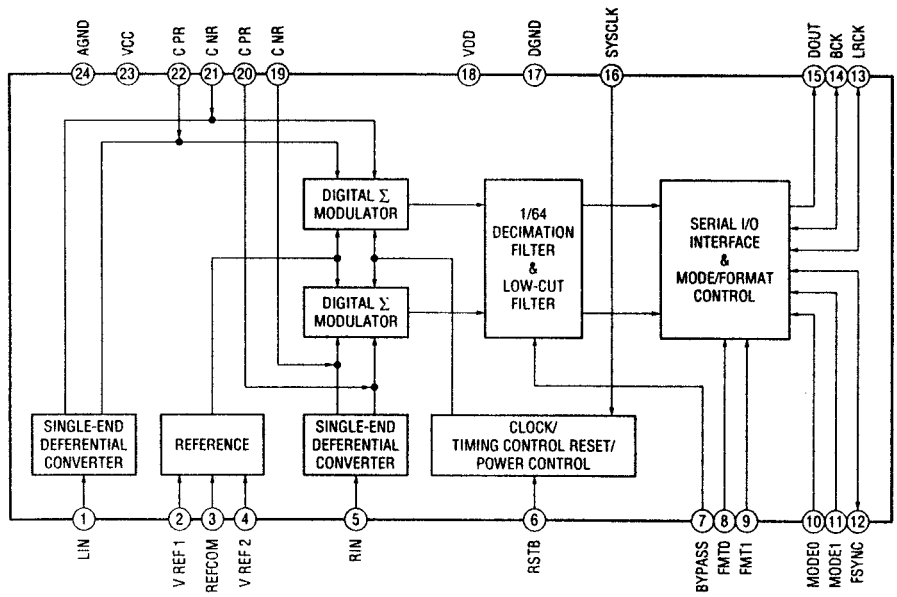

IC604 IS61LV6416-10TLT

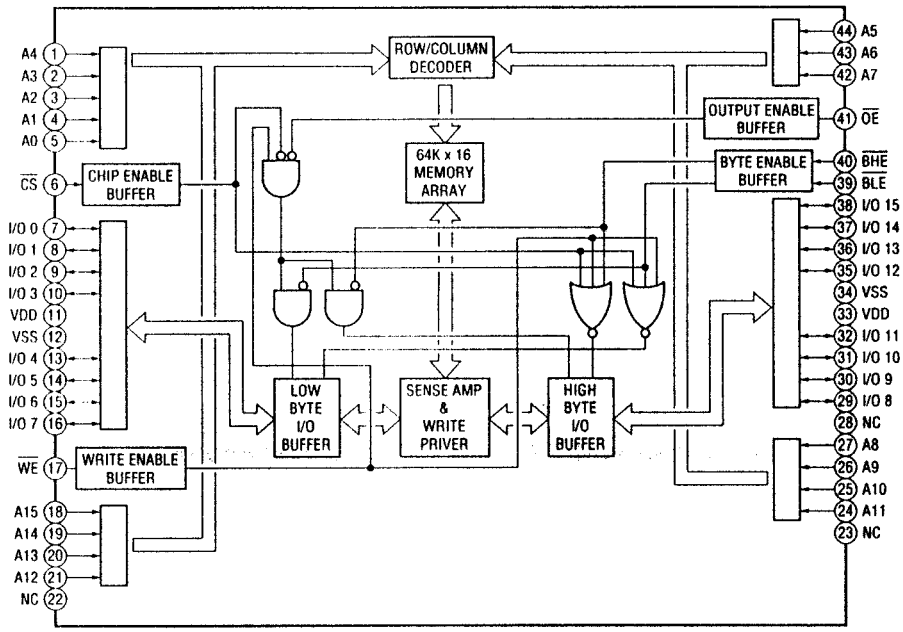

IC606 LC89056W-E

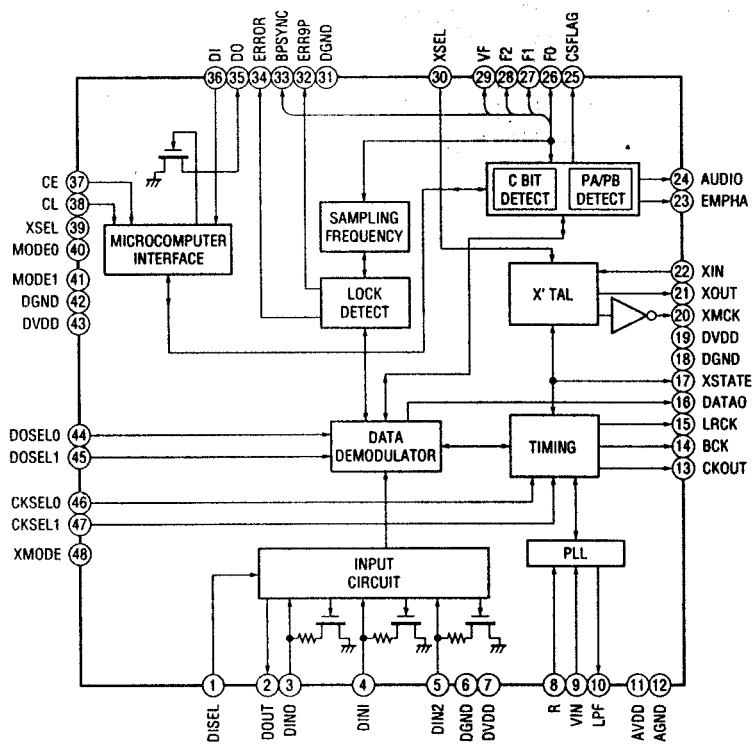

IC608 AK4382AVT-E2

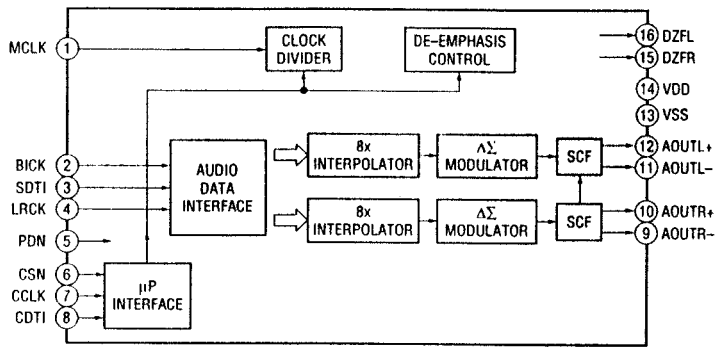

IC706 MSM51V18165F-60TSKR1

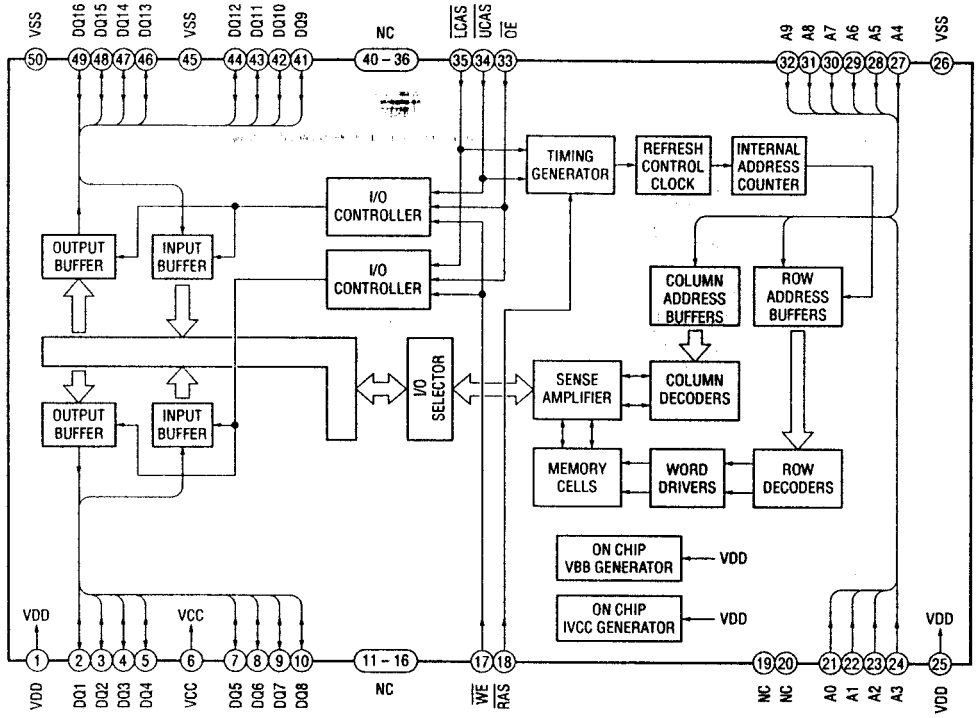

IC803 TC7W74FK-TE85L

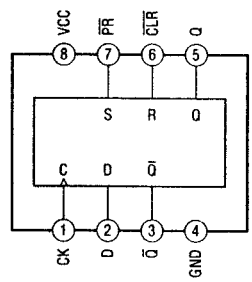

IC808 MSM56V16160F-8TK7R1

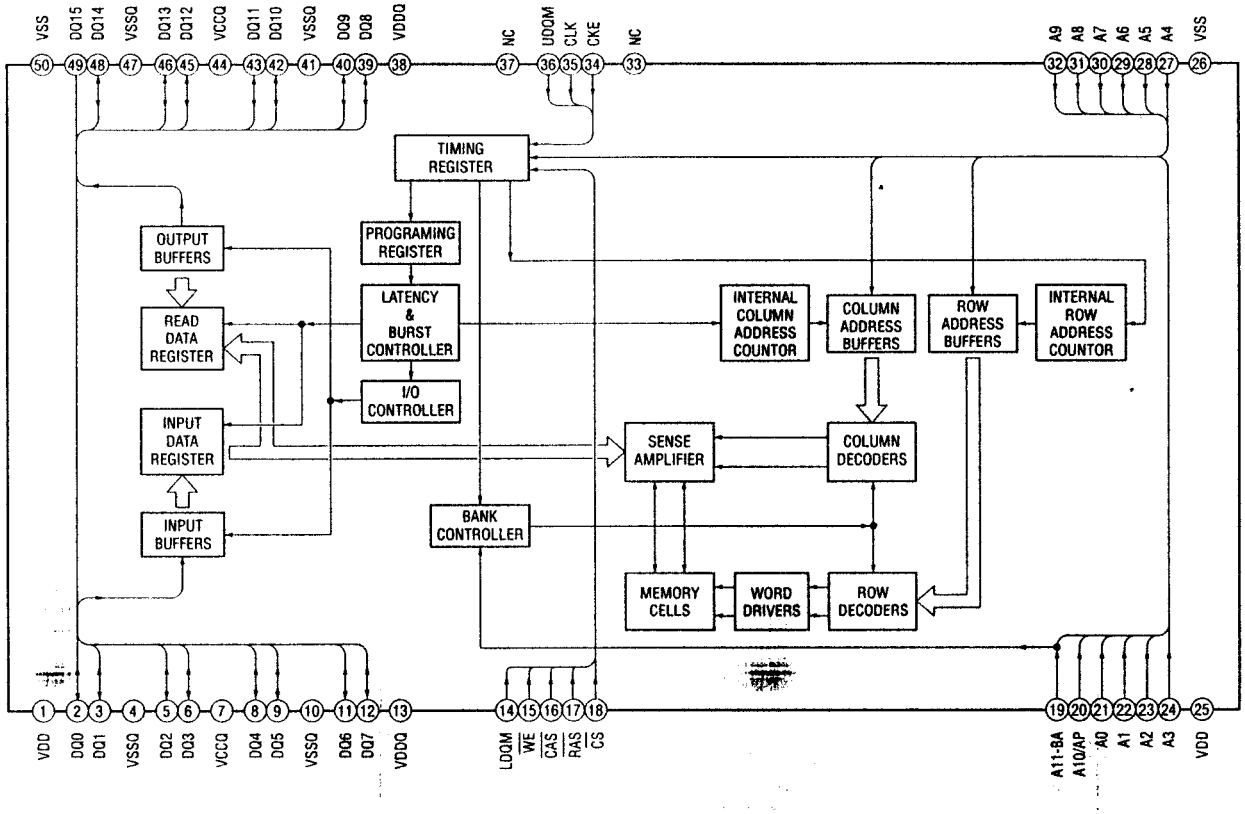
VSS DQ15 DQ14 VSSQ DQ13 DQ12 VCCQ DQ11 DQ10 VSSQ DQ9 DQ8 VDDQ
NC UDQM CLK CKE NC
A9 A8 A7 A6 A5 A4 VSS
TIMING REGISTER
OUTPUT BUFFERS
PROGRAMING REGISTER
LATENCY & BURST CONTROLLER
I/O CONTROLLER
READ DATA REGISTER
INPUT DATA REGISTER
INPUT BUFFERS
BANK CONTROLLER
SENSE AMPLIFIER
INTERNAL COLUMN ADDRESS COUNTOR
COLUMN ADDRESS BUFFERS
ROW ADDRESS BUFFERS
INTERNAL ROW ADDRESS COUNTOR
COLUMN DECODERS
MEMORY CELLS
WORD DRIVERS
ROW DECODERS
VDD DQ0 DQ1 VSSQ DQ2 DQ3 VCCQ DQ4 DQ5 VSSQ DQ6 DQ7 VDDQ
LDQM WE CAS RAS CS
A11-BA A10/AP A0 A1 A2 A3 VDD

IC812, IC813 SN74LV245APWR

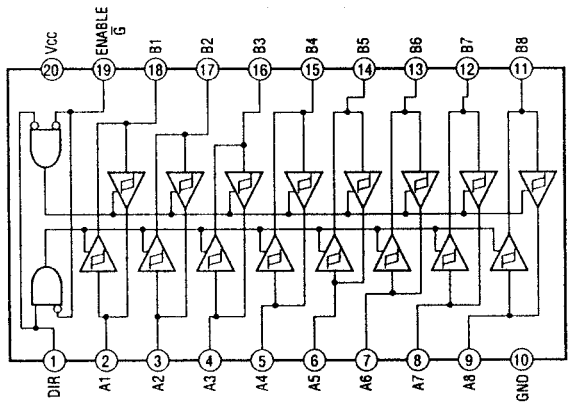

IC814 TC7WH157FK (TE85R)

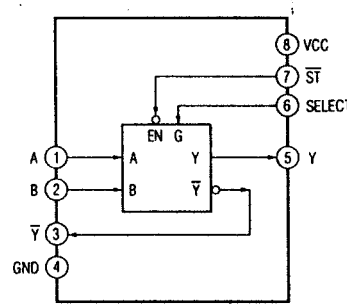

IC905 TC7S08F-TE85L

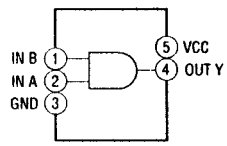

– FL BOARD –

IC802 MSM9202-05GS-KDR1

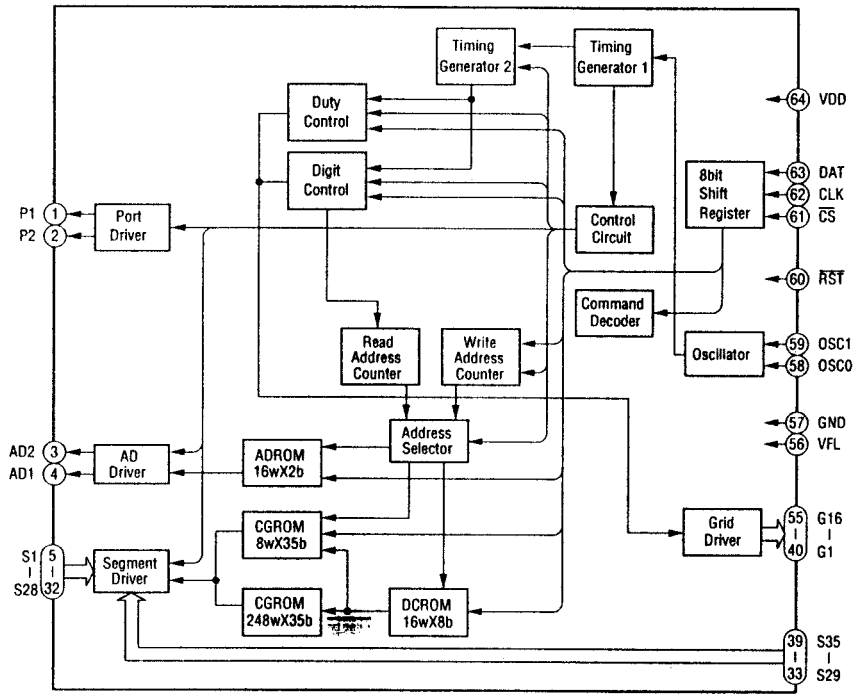

– I/O BOARD –

IC206 MM1510XNRE

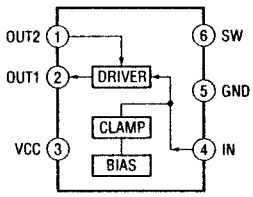

IC207 NJM2235V (TE2)

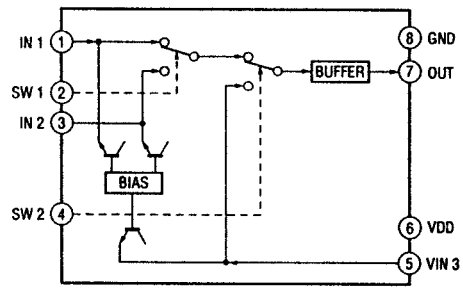

IC208 MM1568AJBE

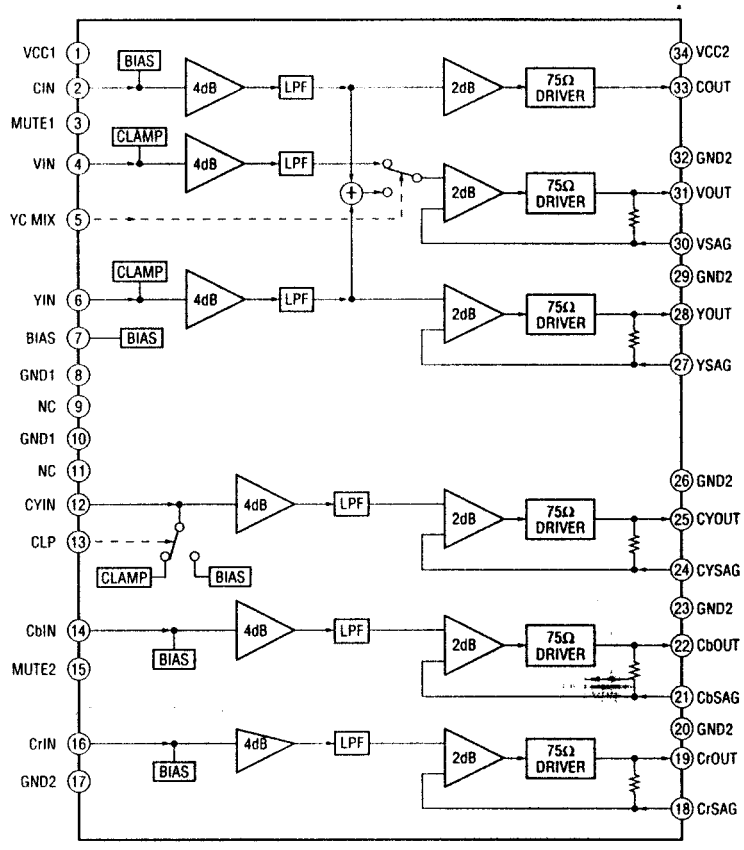

– POWER BOARD –

IC901 STR-F6267D (EXCEPT MX, TW)
STR-F6238S (MX, TW)

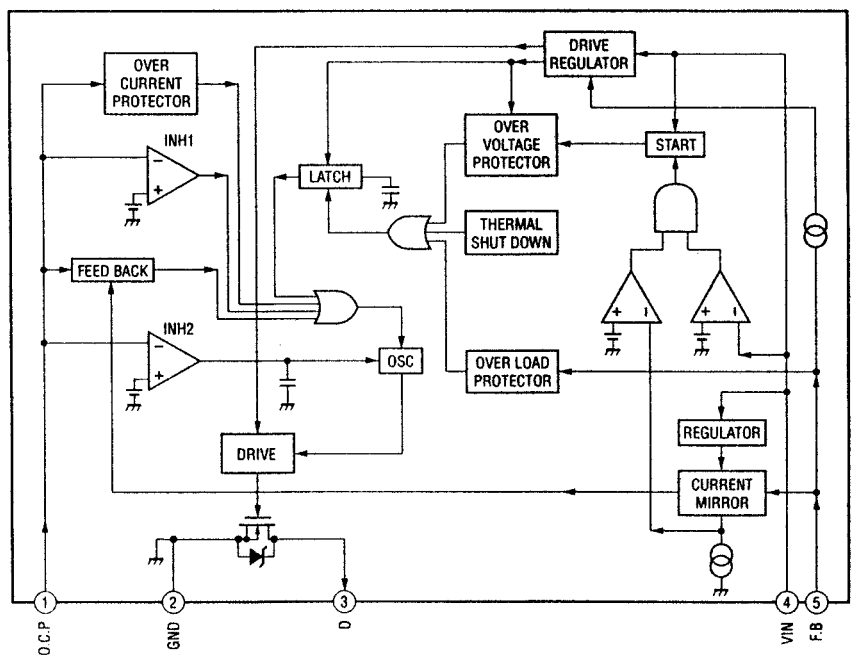

– RF BOARD –

IC001 CXD1881AR

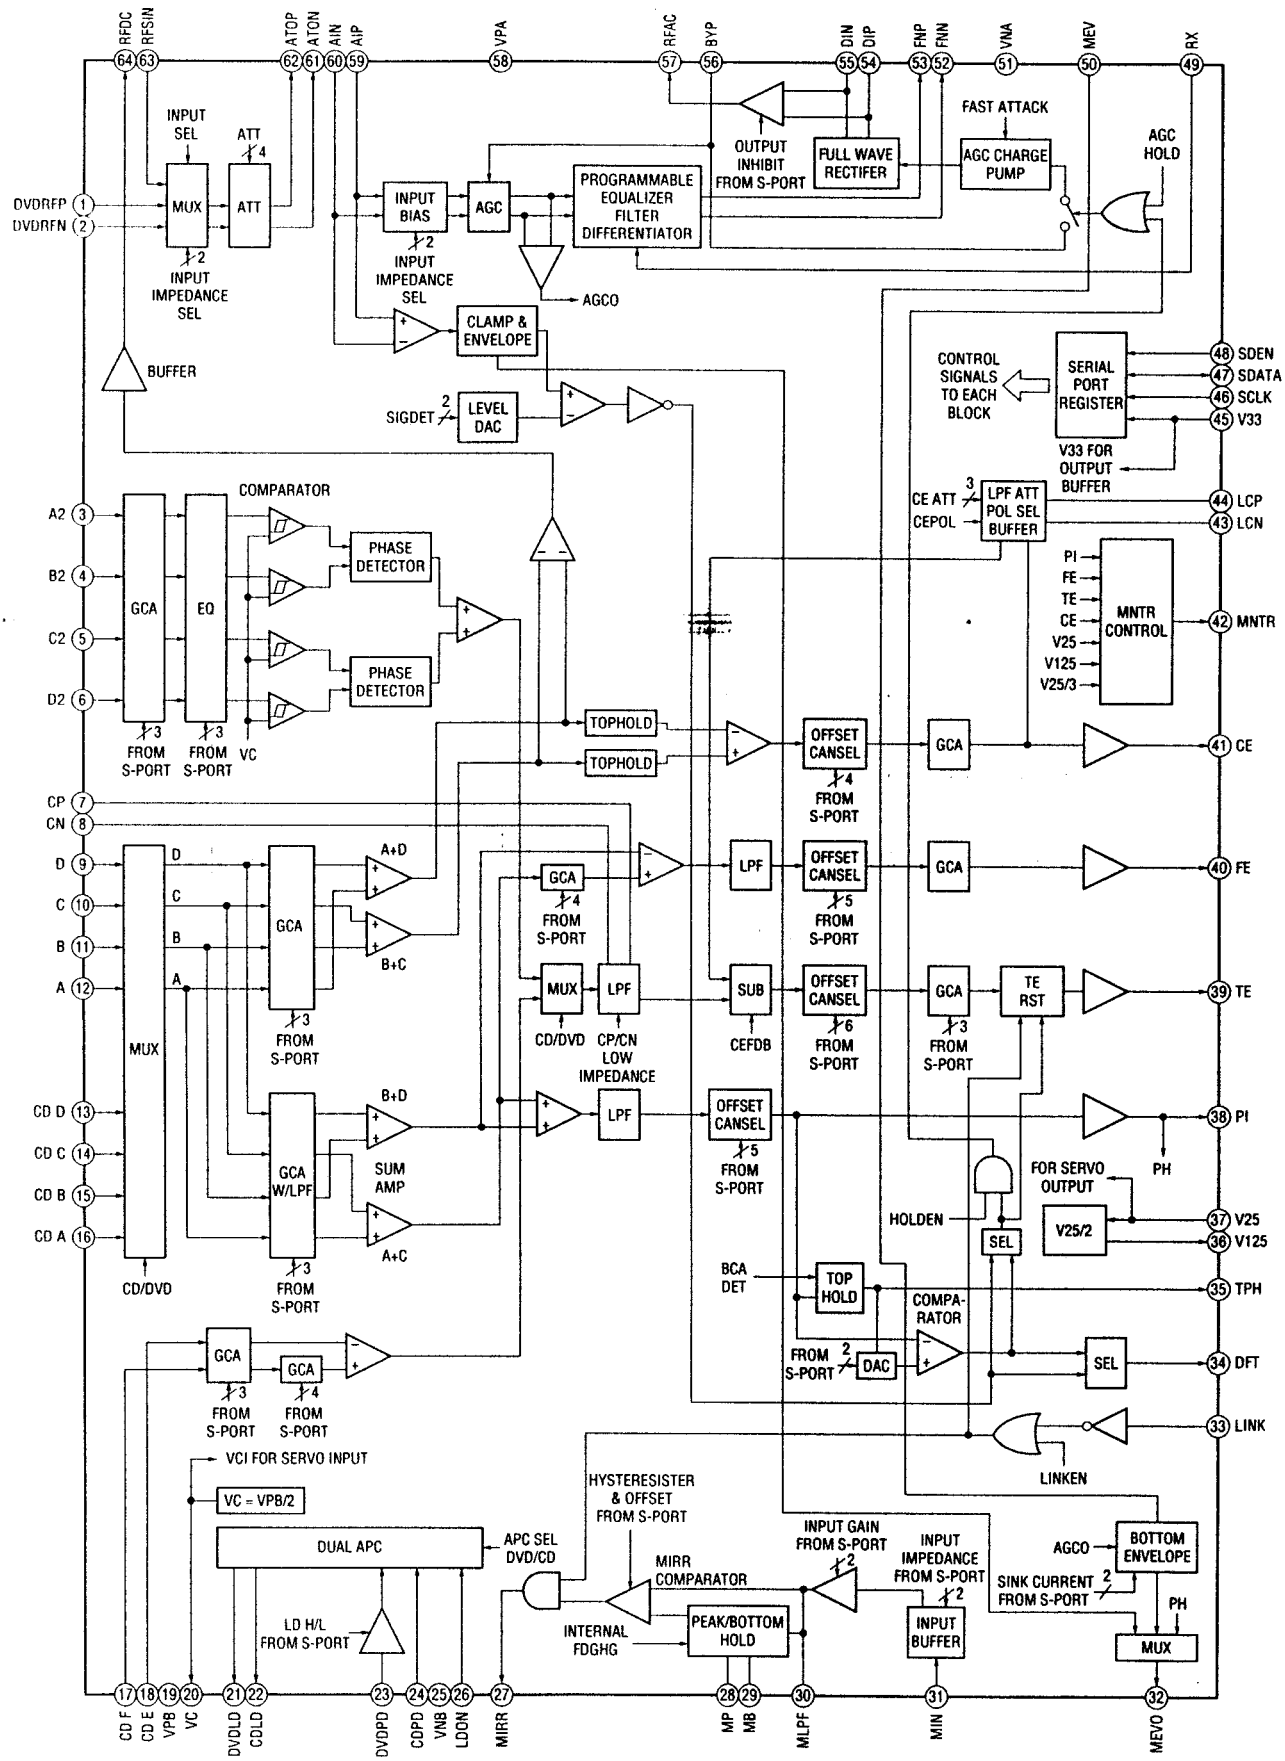

6-31. IC PIN FUNCTION DESCRIPTION

• DVD BOARD IC206 ZIVA5X-C1F (DVD SYSTEM PROCESSOR)

Pin No.	Pin Name	I/O	Description
1	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
2	HA1	I/O	Address bus
3	HD15	I/O	Data bus (address signal multiplexed)
4	HD14	I/O	Data bus (address signal multiplexed)
5	HD13	I/O	Data bus (address signal multiplexed)
6	HD12	I/O	Data bus (address signal multiplexed)
7	HD11	I/O	Data bus (address signal multiplexed)
8	HD10	I/O	Data bus (address signal multiplexed)
9	HD9	I/O	Data bus (address signal multiplexed)
10	HD8	I/O	Data bus (address signal multiplexed)
11	HD7	I/O	Data bus (address signal multiplexed)
12	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
13	GNDP	—	Ground terminal (I/O signal)
14	HD6	I/O	Data bus (address signal multiplexed)
15	HD5	I/O	Data bus (address signal multiplexed)
16	HD4	I/O	Data bus (address signal multiplexed)
17	HD3	I/O	Data bus (address signal multiplexed)
18	HD2	I/O	Data bus (address signal multiplexed)
19	HD1	I/O	Data bus (address signal multiplexed)
20	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
21	GNDP	—	Ground terminal (I/O signal)
22	HD0	I/O	Data bus (address signal multiplexed)
23	HDTACK	I/O	Acknowledge signal input/output for host data transfer (not used)
24	HIRQ0	I	Interrupt signal input for Medusa (not used)
25	WEH.UDS	I/O	Host upper data strobe signal output
26	WEL.LDS	I/O	Host lower data strobe signal output (not used)
27	HREAD	I/O	Read/write strobe signal output
28	GPIO0	I/O	Jig detection port (pull-up)
29	GND	—	Ground terminal (inside core)
30	VDD	—	Power supply terminal (+1.8V) (inside core)
31	GND25	—	Ground terminal (SDRAM I/O signal)
32	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
33	MA9	O	SDRAM address bus
34	MA8	O	SDRAM address bus
35	MA7	O	SDRAM address bus
36	MA6	O	SDRAM address bus
37	MA5	O	SDRAM address bus
38	MA4	O	SDRAM address bus
39	MA3	O	SDRAM address bus
40	MA2	O	SDRAM address bus
41	MA1	O	SDRAM address bus
42	MA0	O	SDRAM address bus
43	GND25	—	Ground terminal (SDRAM I/O signal)
44	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
45	MA10	O	SDRAM address bus
46	MA11	O	SDRAM address bus
47	BA1	O	SDRAM bank select 1 signal output
48	BA0	O	SDRAM bank select 0 signal output
49	MCS0	O	SDRAM chip select 0 signal output
50	MCS1	O	Not used

HCD-SC5/SC6/SC8

Pin No.	Pin Name	I/O	Description
51	MRAS	O	SDRAM row address strobe signal output
52	MCAS	O	SDRAM column address strobe signal output
53	MWE	O	SDRAM write enable signal output ("H" : read, "L" : write)
54	GND25	—	Ground terminal (SDRAM I/O signal)
55	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
56	MCLK	O	SDRAM Clock output
57	MD0	I/O	SDRAM data
58	MD1	I/O	SDRAM data
59	MD2	I/O	SDRAM data
60	MD3	I/O	SDRAM data
61	GND25	—	Ground terminal (SDRAM I/O signal)
62	MDQM0	O	Byte read /write mask signal 0 output
63	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
64	MD4	I/O	SDRAM data
65	MD5	I/O	SDRAM data
66	MD6	I/O	SDRAM data
67	MD7	I/O	SDRAM data
68	MD8	I/O	SDRAM data
69	MD9	I/O	SDRAM data
70	MD10	I/O	SDRAM data
71	MD11	I/O	SDRAM data
72	GND25	—	Ground terminal (SDRAM I/O signal)
73	MDQM1	O	Byte read /write mask signal 1 output
74	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
75	MD12	I/O	SDRAM data
76	MD13	I/O	SDRAM data
77	MD14	I/O	SDRAM data
78	MD15	I/O	SDRAM data
79	GND	—	Ground terminal (inside core)
80	VDD	—	Power supply terminal (+1.8V) (inside core)
81	MD16	I/O	SDRAM data
82	MD17	I/O	SDRAM data
83	MD18	I/O	SDRAM data
84	MD19	I/O	SDRAM data
85	GND25	—	Ground terminal (SDRAM I/O signal)
86	MDQM2	O	Byte read /write mask signal 2 output
87	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
88	MD20	I/O	SDRAM data
89	MD21	I/O	SDRAM data
90	MD22	I/O	SDRAM data
91	MD23	I/O	SDRAM data
92	MD24	I/O	SDRAM data
93	MD25	I/O	SDRAM data
94	MD26	I/O	SDRAM data
95	MD27	I/O	SDRAM data
96	GND25	—	Ground terminal (SDRAM I/O signal)
97	MDQM3	O	Byte read /write mask signal 3 output
98	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
99	MD28	I/O	SDRAM data
100	MD29	I/O	SDRAM data

Pin No.	Pin Name	I/O	Description
101	MD30	I/O	SDRAM data
102	MD31	I/O	SDRAM data
103	GND25	—	Ground terminal (SDRAM I/O signal)
104	VDD25	—	Power supply terminal (+3.3V) (SDRAM I/O signal)
105	VCLK	I/O	System clock (not used)
106	I2C_CTRL	—	Not used
107	VS	O	S1 signal output
108	I/P SW	O	Progressive/interlace switch signal output (not used)
109	GPIO1 (5)	—	Not used
110	GPIO1 (4)	—	Not used
111	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
112	GNDP	—	Ground terminal (I/O signal)
113	GPIO1 (3)	—	Not used
114	GPIO1 (2)	—	Not used
115	GPIO1 (1)	—	Not used
116	HIRQ2_	I	Busy signal input from the EEPROM (IC203)
117	VDAC_4B	—	Video DAC bias bit 4 (connected to the ground)
118	VDAC_VDD4	—	Power supply terminal (+3.3V) (Video DAC 4)
119	VDAC_4	O	VDAC output 4
120	VDAC_3B	—	Video DAC bias bit 3 (connected to the ground)
121	VDAC_VDD3	—	Power supply terminal (+3.3V) (Video DAC 3)
122	VDAC_3	O	VDAC output 3
123	VDAC_2B	—	Video DAC bias bit 2 (connected to the ground)
124	VDAC_VDD2	—	Power supply terminal (+3.3V) (Video DAC 2)
125	VDAC_2	O	VDAC output 2
126	VDAC_1B	—	Video DAC bias bit 1 (connected to the ground)
127	VDAC_VDD1	—	Power supply terminal (+3.3V) (Video DAC 1)
128	VDAC_1	O	VDAC output 1
129	VDAC_0B	—	Video DAC bias bit 0 (connected to the ground)
130	VDAC_VDD0	—	Power supply terminal (+3.3V) (Video DAC 0)
131	VDAC_0	O	VDAC output 0
132	VDAC_DVSS	—	Ground terminal (Video DAC digital system)
133	VDAC_DVDD	—	Power supply terminal (+3.3V) (Video DAC digital system)
134	VDAC_REFVDD	—	Power supply terminal (Video DAC reference)
135	VDAC_REF	I	Reference voltage input terminal(for Video DAC)
136	VDAC_REFVSS	—	Ground terminal (Video DAC reference)
137	XVSS	—	Ground terminal (crystal oscillator)
138	XOUT	O	Crystal oscillation signal output
139	XIN	I	Crystal oscillation signal input
140	XVDD	—	Power supply terminal (crystal oscillator)
141	AVSS2	—	Ground terminal (analog PLL)
142	AVDD2	—	Power supply terminal (+3.3V) (analog PLL)
143	AVDD1	—	Power supply terminal (+3.3V) (analog PLL)
144	AVSS1	—	Ground terminal (analog PLL)
145	VDD	—	Power supply terminal (+1.8V) (inside core)
146	GND	—	Ground terminal (inside core)
147	XCK	O	Audio system clock output (not used)
148	LRCK	O	LRCK signal output for audio (not used)
149	BCK	O	BCK signal output for audio (not used)
150	GPIO4 (1)	—	Not used (pull-up)

Pin No.	Pin Name	I/O	Description
151	GPIO4 (2)	—	Not used (pull-up)
152	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
153	GNDP	—	Ground terminal (I/O signal)
154	GPIO4 (3)	—	Not used (pull-down)
155	GPIO4 (4)	—	Not used (pull-down)
156	IEC958	O	S/PDIF signal
157	DAI_DATA	I	Data input from ADC (not used)
158	DAI_BCK	I	BCK signal input from ADC (not used)
159	DAI_LRCK	I	LRCK signal input from ADC (not used)
160	I2C_CL	I/O	I2C clock bus
161	I2C_DA	I/O	I2C data bus
162	CS(ZIVA_E2P)	O	Chip select signal output to the EEPROM (IC203)
163	RXD1	I	Serial data input for check jig
164	TXD1	O	Serial data output for check jig
165	WRITE_CTRL(ZIVA_E2P)	O	Write control signal output to the EEPROM (IC203)
166	GNDP	—	Ground terminal (I/O signal)
167	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
168	SDDATA7	I	SDBus data7 input
169	SDDATA6	I	SDBus data6 input
170	SDDATA5	I	SDBus data5 input
171	SDDATA4	I	SDBus data4 input
172	GND	—	Ground terminal (inside core)
173	VDD	—	Power supply terminal (+1.8V) (inside core)
174	SDDATA3	I	SDBus data3 input
175	SDDATA2	I	SDBus data2 input
176	SDDATA1	I	SDBus data1 input
177	SDDATA0	I	SDBus data0 input
178	SDREQ	O	SDBus data request signal output
179	SDEN	I	SDBus data enable signal input
180	GNDP	—	Ground terminal (I/O signal)
181	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
182	SDERROR	I	SDBus data error signal input
183	SDCLK	I	SDBus data clock input
184	HIRQ1	I	Interrupt signal input from the mechanism controller (IC301)
185	DRVCLK	I	Serial data clock input from the mechanism controller (IC301)
186	DRVTX	I	Serial data input from the mechanism controller (IC301) and the EEPROM (IC203)
187	DRVRX	O	Serial data output to the mechanism controller (IC301) and the EEPROM (IC203)
188	DRVRDY	I	Ready signal input from the mechanism controller (IC301)
189	VNW	—	Power supply for 5V tolerance voltage input
190	$\overline{ALE}$	O	Latch enable signal output for address data demux
191	RST_SPC	O	Reset signal output to the mechanism controller (IC301)
192	$\overline{HCS3}$	O	Not used
193	$\overline{HCS2}$	O	Chip select signal output for Medusa (not used)
194	$\overline{HCS1}$	I/O	Not used
195	$\overline{HCS0}$	O	Chip select signal output to the external ROM (IC205)
196	VDDP	—	Power supply terminal (+3.3V) (I/O signal)
197	$\overline{TRST}$	I	Reset signal input
198	TDO	O	Data output
199	TDI	I	Data input
200	TMS	I	TMS signal input

Pin No.	Pin Name	I/O	Description
201	TCK	I	TCK signal input
202	RESET	I	ZIVA reset input
203	BUS CLK	I/O	Not used
204	GND	—	Ground terminal (inside core)
205	VDD	—	Power supply terminal (+1.8V) (inside core)
206	HA3	I/O	Address bus 3
207	HA2	I/O	Address bus 2
208	GNDP	—	Ground terminal (I/O signal)

• DVD BOARD IC301 CXP973064-228R (MACHANISH CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	EEP SO	O	Not used
2	SDEN	O	Serial data enable signal output to DVD/CD RF amplifier
3	DOCTRL/ ISBTEST	O	Digital out on/off control signal output to the digital signal processor "L": digital out off, "H": digital out on
4	XRST DSD	O	Reset signal output to the DSD decoder "L": reset
5	EEP SI	I/O	Two-way data bus with the EEPROM
6	EEP RDY	I	EEPROM ready signal input from the DVD decoder
7	FCS JMP 1	O	Focus jump 1 signal output to the motor/coil driver
8	FCS JMP 2	O	Focus jump 2 signal output to the motor/coil driver
9	SENS CD	I	Internal status (SENSE) signal input from the digital signal processor
10	CDSP2	O	Clock selection signal output to the digital signal processor
11	CDSP4	—	Not used
12	XCS DVD	O	Chip select signal output to the DVD decoder
13	VSS	—	Ground terminal (digital system)
14 to 21	D0 to D7	I/O	Two-way data bus with the DVD decoder
22	INIT0 DVD	I	Interrupt signal input from the DVD decoder
23	INIT1 DVD	I	Interrupt signal input from the DVD decoder
24	SCK DSD	O	Serial data transfer clock signal output to the DSD decoder
25	XRST DVD	O	Reset signal output to the DVD decoder "L": reset
26	SCOR	I	Subcode sync (S0+S1) detection signal input from the digital signal processor
27	LAT CD	O	Serial data latch pulse signal output to the digital signal processor
28	LD ON	O	Laser diode on/off control signal output to the DVD/CD RF amplifier "L": laser diode off, "H": laser diode on
29	MIRR	I	Mirror signal input from the digital signal processor
30	COUT CD	I	Numbers of track counted signal input from the digital signal processor
31	INLIM	I	Detection signal input from limit in switch The optical pick-up is inner position when "H"
32	CS ZIVA	O	Chip select signal output to the DVD system processor
33	SI ZIVA	I	Serial data input from the DVD system processor
34	SO ZIVA	O	Serial data output to the DVD system processor
35	SCK ZIVA	O	Serial data transfer clock signal output to the DVD system processor
36	DRVIRQ	O	Interrupt request signal output to the DVD system processor
37	DRVRDY	O	Ready signal output to the DVD system processor
38	RST	I	System reset signal input from the DVD system processor "L": reset
39	VSS	—	Ground terminal (digital system)
40	XTAL	I	System clock input terminal (20 MHz)
41	EXTAL	O	System clock output terminal (20 MHz)
42	VDD	—	Power supply terminal (+3.3V) (digital system)
43, 44	SLED A, SLED B	O	Sled motor drive signal output
45	JIT OFFSET	O	Output terminal for offset adjustment of APEO (⑯pin of DVD decoder)
46	SDOUT DSD	O	Serial data output to the DSD decoder
47	SDIN DSD	I	Serial data input from the DSD decoder
48	READY DSD	I	Ready signal input from the DSD decoder "L": ready
49	DATA CD	O	Serial data output to the digital signal processor
50	CLOK CD	O	Serial data transfer clock signal output to the digital signal processor
51	XMSLAT	O	Serial data latch pulse signal output to the DSD decoder

Pin No.	Pin Name	I/O	Description
52	SQSO	I	Subcode Q data input from the digital signal processor
53	MUTE DSD	O	Muting on/off control signal output to the DSD decoder "H": muting on
54	SQCK	O	Subcode Q data reading clock signal output to the digital signal processor
55	VSS	—	Ground terminal (digital system)
56	TRAY IN	I	Disc tray in detection signal input terminal Not used
57	TRAY OUT	I	Disc tray out detection signal input terminal Not used
58	GFS DVD	I	Guard frame sync signal input from the DVD decoder
59	MUTE CD	O	Muting on/off control signal output to the digital signal processor "H": muting on
60	MUTE 2D	O	Muting on/off control signal output to the motor/coil driver "H": muting on
61	SLED	I	Sled motor servo drive PWM signal input terminal
62	FG	I	Spindle motor control signal input
63	SP ON	O	Muting on/off control signal output to the motor/coil driver "H": muting on
64	JIT	I	Jitter signal input
65	TE	I	Tracking error signal input from the DVD/CD RF amplifier
66	PI	I	Pull in signal input from the DVD/CD RF amplifier
67	FE	I	Focus error signal input from the DVD/CD RF amplifier
68	AVSS	—	Ground terminal (for A/D converter)
69	AVREF	I	Reference voltage input terminal (for A/D converter)
70	AVDD	—	Power supply terminal (+3.3V) (for A/D converter)
71	GFS CD	I	Guard frame sync signal input from the digital signal processor
72	SCLK CD	O	SENSE serial data reading clock signal output to the digital signal processor
73	TSD-M	O	Thermal shut down signal output to the motor/coil driver
74	FOK CD	I	Focus OK signal input from the digital signal processor
75	LOCK CD	I	GFS is sampled by 460 Hz "H" input when GFS is "H"
76	LDSEL	O	Laser diode selection signal output
77	SACD/$\overline{\text{DVD}}$	O	SACD/DVD selection signal output "L": DVD, "H": SACD
78	I2C SIO	I/O	Communication data bus with the DVD system processor and system controller
79	IIC-CLK	I/O	Communication data reading clock signal input or transfer clock signal output with the DVD system processor and system controller
80	RXD	I	Serial data input from the RS-232C (for check)
81	TXD	O	Serial data output to the RS-232C (for check)
82	SDCLK RF	O	Serial data transfer clock signal output to the DVD/CD RF amplifier
83	SDATA RF	I/O	Two-way data bus with the DVD/CD RF amplifier
84	XWR	O	Write strobe signal output to the DVD decoder
85	XRD	O	Read strobe signal output to the DVD decoder
86	(PWE)	—	Not used
87	VDD	—	Power supply terminal (+3.3V) (digital system)
88	VSS	—	Ground terminal (digital system)
89 to 96	A0 to A7	O	Address signal output to the DVD decoder
97	A8	O	Motor/coil driver power save control signal output terminal Not used
98	XDRST	O	Reset signal output to the digital signal processor "L": reset
99	EEP WP	O	Write protect signal output to the EEPROM
100	EEP CLK	O	Clock signal output to the EEPROM

• DVD BOARD IC401 CXD3068Q (DIGITAL SIGNAL PROCESSOR, DIGITAL SERVO PROCESSOR)

Pin No.	Pin Name	I/O	Description
1	DVDD0	—	Power supply terminal (+3.3V) (digital system)
2	XRST	I	Reset signal input from the mechanism controller "L": reset
3	MUTE	I	Muting on/off control signal input from the mechanism controller "H": muting on
4	DATA	I	Serial data input from the mechanism controller
5	XLAT	I	Serial data latch pulse signal input from the mechanism controller
6	CLOK	I	Serial data transfer clock signal input from the mechanism controller
7	SENS	O	Internal status (SENSE) signal output to the mechanism controller
8	SCLK	I	SENSE serial data reading clock signal input from the mechanism controller
9	ATSK	I/O	Input/output terminal for anti-shock Not used
10	WFCK	O	Write frame clock signal output to the DVD decoder
11	RFCK	O	RFCK signal output terminal Not used
12	XPCK	O	XPCK signal output terminal Not used
13	GFS	O	Guard frame sync signal output to the mechanism controller
14	C2PO	O	C2 pointer signal output to the DVD decoder
15	SCOR	O	Subcode sync (S0+S1) detection signal output to the DVD decoder and mechanism controller
16	C4M	O	4.2336 MHz clock signal output terminal Not used
17	WDCK	O	Guard subcode sync (S0+S1) detection signal output to the DVD decoder
18	DVSS0	—	Ground terminal (digital system)
19	COUT	O	Numbers of track counted signal output to the mechanism controller
20	MIRR	O	Mirror signal output to the mechanism controller
21	DFCT	I/O	Defect signal input/output terminal Not used
22	FOK	O	Focus OK signal output to the mechanism controller
23	PWMI	I	Spindle motor external control signal input terminal Not used
24	LOCK	O	GFS is sampled by 460 Hz "H" output when GFS is "H"
25	MDP	O	Spindle motor servo drive signal output to the DVD decoder
26	SSTP	I	Detection signal input from limit in switch The optical pick-up is inner position when "H"
27	FSTO	O	2/3 divider output terminal Not used
28	DVDD1	—	Power supply terminal (+3.3V) (digital system)
29	SFDR	O	Sled servo drive PWM signal (+) output
30	SRDR	O	Sled servo drive PWM signal (–) output
31	TFDR	O	Tracking servo drive PWM signal (+) output
32	TRDR	O	Tracking servo drive PWM signal (–) output
33	FFDR	O	Focus servo drive PWM signal (+) output
34	FRDR	O	Focus servo drive PWM signal (–) output
35	DVSS1	—	Ground terminal (digital system)
36	TEST	I	Input terminal for the test
37	TES1	I	Input terminal for the test
38	VC	I	Middle point voltage (+1.65V) input terminal
39	FE	I	Focus error signal input from the DVD/CD RF amplifier
40	SE	I	Sled error signal input from the DVD/CD RF amplifier
41	TE	I	Tracking error signal input from the DVD/CD RF amplifier
42	CE	I	Middle point servo analog signal input
43	RFDC	I	RF signal input from the DVD/CD RF amplifier
44	ADIO	O	Output terminal for the test Not used
45	AVSS0	—	Ground terminal (analog system)
46	IGEN	I	Stabilized current input for operational amplifiers

Pin No.	Pin Name	I/O	Description
47	AVDD0	—	Power supply terminal (+3.3V) (analog system)
48	ASYO	O	EFM full-swing output terminal
49	ASYI	I	Asymmetry comparator voltage input terminal
50	RFAC	I	EFM signal input from the DVD/CD RF amplifier
51	AVSS1	—	Ground terminal (analog system)
52	CLTV	I	Internal VCO control voltage input terminal
53	FILO	O	Filter output for master PLL
54	FILI	I	Filter input for master PLL
55	PCO	O	Charge pump output for master PLL
56	AVDD1	—	Power supply terminal (+3.3V) (analog system)
57	BIAS	I	Asymmetry circuit constant current input terminal
58	VCTL	I	VCO control voltage input terminal for the wideband EFM PLL Not used
59	V16M	O	VCO oscillation output terminal for the wideband EFM PLL Not used
60	VPCO	O	Charge pump output terminal for the wideband EFM PLL Not used
61	DVDD2	—	Power supply terminal (+3.3V) (digital system)
62	ASYE	I	Asymmetry circuit on/off control signal input terminal "L": off, "H": on Not used
63	MD2	I	Digital out on/off control signal input from the mechanism controller "L": digital out off, "H": digital out on
64	DOUT	O	Digital audio signal output to the digital audio interface IC
65	LRCK	O	L/R sampling clock signal (44.1 kHz) output to the DVD decoder
66	PCMD	O	Serial data output to the DVD decoder
67	BCLK	O	Bit clock signal (2.8224 MHz) output to the DVD decoder
68	EMPH	O	"L" is output when playback disc is emphasis off "H" is output when playback disc is emphasis on Not used
69	XTSL	I	Input terminal for the system clock frequency setting "L": 16.9344 MHz, "H": 33.8688MHz
70	DVSS2	—	Ground terminal (digital system)
71	XTAI	I	System clock input terminal (33.8688 MHz)
72	XTAO	O	System clock output terminal (33.8688 MHz) Not used
73	SOUT	O	Serial data output terminal Not used
74	SOCK	O	Serial data reading clock signal output terminal Not used
75	XOLT	O	Serial data latch pulse signal output terminal Not used
76	SQSO	O	Subcode Q data output to the mechanism controller
77	SQCK	I	Subcode Q data reading clock signal input from the mechanism controller
78	SCSY	I	Input terminal for resynchronism of guard subcode sync (S0+S1) Not used
79	SBSO	O	Subcode serial data output to the DVD decoder
80	EXCK	I	Subcode serial data reading clock signal input to the DVD decoder

• DVD BOARD IC607 CXD9617R (AUDIO DIGITAL SIGNAL PROCESSOR)

Pin No.	Pin Name	I/O	Description
1	VSS	—	Ground terminal
2	XRST	I	Reset signal input from the system controller "L": reset
3	EXTIN	I	Master clock signal input terminal Not used
4	FS2	I	Sampling frequency selection signal input terminal Not used
5	VDDI	—	Power supply terminal (+2.6V)
6	FS1	I	Sampling frequency selection signal input terminal Not used
7	PLOCK	O	Internal PLL lock signal output terminal Not used
8	VSS	—	Ground terminal
9	MCLK1	I	System clock signal input terminal (13.5 MHz)
10	VDDI	—	Power supply terminal (+2.6V)
11	VSS	—	Ground terminal
12	MCLK2	O	System clock signal output terminal (13.5 MHz)
13	MS	I	Master/slave selection signal input terminal "L": slave, "H": master (fixed at "L" in this set)
14	SCKOUT	O	Internal system clock signal output to the D/A converter and stream processor
15	LRCKI1	I	L/R sampling clock signal (44.1 kHz) input from the digital audio processor
16	VDDE	—	Power supply terminal (+3.3V)
17	BCKI1	I	Bit clock signal (2.8224 MHz) input from the digital audio processor
18	SDI1	I	Front L-ch and R-ch audio serial data input from the digital audio processor
19	LRCKO	O	L/R sampling clock signal (44.1 kHz) output to the D/A converter and stream processor
20	BCKO	O	Bit clock signal (2.8224 MHz) output to the D/A converter and stream processor
21	VSS	—	Ground terminal
22	KFSIO	I	Audio clock signal (11.2896 MHz) input from the digital audio processor
23	SDO1	O	Front L-ch and R-ch audio serial data output to the stream processor
24	SDO2	O	Center and woofer audio serial data output to the stream processor
25	SDO3	O	Rear L-ch and R-ch audio serial data output to the stream processor
26	SDO4	O	Audio serial data output to the D/A converter
27	SPDIF	O	S/PDIF signal output terminal Not used
28	LRCKI2	I	L/R sampling clock signal (44.1 kHz) input from the A/D converter
29	BCKI2	I	Bit clock signal (2.8224 MHz) input from the A/D converter
30	SDI2	I	Center and woofer audio serial data input from the digital audio processor
31	VSS	—	Ground terminal
32	HACN	O	Acknowledge signal output to the system controller
33	HDIN	I	Write data input from the system controller
34	HCLK	I	Clock signal input from the system controller
35	HDOUT	O	Read data output to the system controller
36	HCS	I	Chip select signal input from the system controller
37	SDCLK	O	Clock signal output terminal Not used
38	CLKEN	O	Clock enable signal output terminal Not used
39	RAS	O	Row address strobe signal output terminal Not used
40	VDDI	—	Power supply terminal (+2.6V)
41	VSS	—	Ground terminal
42	CAS	O	Column address strobe signal output terminal Not used
43	DQM/OE0	O	Output terminal of data input/output mask Not used
44	CS0	O	Chip select signal output to the S-RAM
45	WE0	O	Write enable signal output to the S-RAM

Pin No.	Pin Name	I/O	Description
46	VDDE	—	Power supply terminal (+3.3V)
47	WMD1	I	S-RAM wait mode setting terminal Fixed at "H" in this set
48	VSS	—	Ground terminal
49	WMD0	I	S-RAM wait mode setting terminal Fixed at "H" in this set
50	PAGE2	O	Page selection signal output terminal Not used
51	VSS	—	Ground terminal
52, 53	PAGE1, PAGE0	O	Page selection signal output terminal Not used
54	BOOT	I	Boot mode control signal input terminal Not used
55	BTACT	O	Boot mode state display signal output terminal Not used
56	BST	I	Boot strap signal input from the system controlle
57	MOD1	I	PLL input frequency selection signal input terminal "L": 384fs, "H": 256fs (fixed at "H" in this set)
58	MOD0	I	Mode setting terminal "L": single chip mode, "H": use prohibition (fixed at "L" in this set)
59	EXLOCK	I	PLL lock error and data error flag input from the digital audio interface IC
60	VDDI	—	Power supply terminal (+2.6V)
61	VSS	—	Ground terminal
62, 63	A17, A16	O	Address signal output terminal Not used
64 to 66	A15 to A13	O	Address signal output to the S-RAM
67	GP10	O	L/R sampling clock signal (44.1 kHz) output to the D/A converter and stream processor
68	GP9	O	Decode signal output to the system controller
69	GP8	I	Bit 1 input terminal of channel status from the digital audio interface IC
70	VDDI	—	Power supply terminal (+2.6V)
71	VSS	—	Ground terminal
72 to 75	D15 to D12	I/O	Two-way data bus with the S-RAM
76	VDDE	—	Power supply terminal (+3.3V)
77 to 80	D11 to D8	I/O	Two-way data bus with the S-RAM
81	VSS	—	Ground terminal
82 to 85	A9, A12 to A10	O	Address signal output to the S-RAM
86	TDO	O	Simple emulation data output terminal Not used
87	TMS	I	Simple emulation data input start/end detection signal input terminal Not used
88	XTRST	I	Simple emulation asychronous break input terminal Not used
89	TCK	I	Simple emulation clock signal input terminal Not used
90	TDI	I	Simple emulation data input terminal Not used
91	VSS	—	Ground terminal
92 to 97	A8 to A3	O	Address signal output to the S-RAM
98, 99	D7, D6	I/O	Two-way data bus with the S-RAM
100	VDDI	—	Power supply terminal (+2.6V)
101	VSS	—	Ground terminal
102 to 105	D5 to D2	I/O	Two-way data bus with the S-RAM
106	VDDE	—	Power supply terminal (+3.3V)
107, 108	D1, D0	I/O	Two-way data bus with the S-RAM
109, 110	A2, A1	O	Address signal output to the S-RAM
111	VSS	—	Ground terminal
112	A0	O	Address signal output to the S-RAM
113	PM	I	PLL reset signal input from the system controller "L": reset

HCD-SC5/SC6/SC8

Pin No.	Pin Name	I/O	Description
114	SDI3	I	Rear L-ch and R-ch audio serial data input from the digital audio processor
115	SDI4	I	Audio serial data input terminal Not used
116	SYNC	I	Synchronous/asychronous selection signal input terminal "L": Synchronous, "H": asynchronous (fixed at "H" in this set)
117 to 119	VSS	—	Ground terminal
120	VDDI	—	Power supply terminal (+2.6V)

HCD-SC5/SC6/SC8

• DVD BOARD IC701 TMC57929PGF-RDP (DVD DECODER)

Pin No.	Pin Name	I/O	Description
1, 2	D5, D6	I/O	Two-way data bus with the mechanism controller
3	VSS	—	Ground terminal (digital system)
4	D7	I/O	Two-way data bus with the mechanism controller
5	A0	I	Address signal input from the mechanism controller
6	VDD	—	Power supply terminal (+3.3V) (digital system)
7	A1	I	Address signal input from the mechanism controller
8	VDD5V	—	Power supply terminal (+5V)
9 to 14	A2 to A7	I	Address signal input from the mechanism controller
15	VSS	—	Ground terminal (digital system)
16	XWAIT	O	Wait signal output terminal Not used
17	XRD	I	Read strobe signal input from the mechanism controller
18	XWR	I	Write strobe signal input from the mechanism controller
19	XCS	I	Chip select signal input from the mechanism controller
20, 21	XINT0, XINT1	O	Interrupt signal output to the mechanism controller
22	VDD	—	Power supply terminal (+3.3V) (digital system)
23	XHRS	I	Not used
24	HDB7	O	Stream data signal output to the DSD decoder and DVD system processor
25	VSS	—	Ground terminal (digital system)
26	HDB8	O	Error flag signal output to the DSD decoder and DVD system processor
27	HDB6	O	Stream data signal output to the DSD decoder and DVD system processor
28	VDDS	—	Power supply terminal (+5V) (digital system)
29	HDB9	O	Not used
30	HDB5	O	Stream data signal output to the DSD decoder and DVD system processor
31	HDBA	O	Not used
32	HDB4	O	Stream data signal output to the DSD decoder and DVD system processor
33	VSS	—	Ground terminal (digital system)
34	HDBB	O	Not used
35	HDB3	O	Stream data signal output to the DSD decoder and DVD system processor
36	VDD	—	Power supply terminal (+3.3V) (digital system)
37	HDBC	O	Not used
38	VDDS	—	Power supply terminal (+5V) (digital system)
39	HDB2	O	Stream data signal output to the DSD decoder and DVD system processor
40	HDBD	O	Not used
41	HDB1	O	Stream data signal output to the DSD decoder and DVD system processor
42	VSS	—	Ground terminal (digital system)
43	HDBE	O	Not used
44	HDB0	O	Stream data signal output to the DSD decoder and DVD system processor
45	HDBF	O	Not used
46	XDRQ	O	Serial data effect flag signal output to the DSD decoder and DVD system processor
47	VDDS	—	Power supply terminal (+5V) (digital system)
48	XHWR	O	Serial data transfer clock signal output to the DSD decoder and DVD system processor
49	XHRD	O	Header flag signal output to the DSD decoder
50	VDD	—	Power supply terminal (+3.3V) (digital system)
51	REDY	O	Not used
52	VSS	—	Ground terminal (digital system)

Pin No.	Pin Name	I/O	Description
53	XHAC	I	DVD mode: Serial data request signal input from the DVD system processor SACD mode: Serial data request signal input from the DSD decoder
54	HINT	O	Not used
55	XS16	O	Not used
56	HA1	I	Not used
57	XPDI	I/O	Not used
58	VDDS	—	Power supply terminal (+5V) (digital system)
59, 60	HA0, HA2	I	Not used
61	VSS	—	Ground terminal (digital system)
62, 63	HCS0, HCS1	I	Not used
64	VDD	—	Power supply terminal (+3.3V) (digital system)
65	DASP	I/O	Not used
66 to 69	MDB0 to MDB3	I/O	Two-way data bus with the D-RAM
70	VSS	—	Ground terminal (digital system)
71	MDB4	I/O	Two-way data bus with the D-RAM
72	VDD5V	—	Power supply terminal (+5V)
73 to 75	MDB5 to MDB7	I/O	Two-way data bus with the D-RAM
76	XMWR	O	Write enable signal output to the D-RAM
77	VDD	—	Power supply terminal (+3.3V) (digital system)
78	XRAS	O	Row address strobe signal output to the D-RAM
79, 80	MA0, MA1	O	Address signal output to the D-RAM
81	VSS	—	Ground terminal (digital system)
82 to 87	MA2 to MA7	O	Address signal output to the D-RAM
88	VDD	—	Power supply terminal (+3.3V) (digital system)
89	MA8	O	Address signal output to the D-RAM
90	VSS	—	Ground terminal (digital system)
91	MA9	O	Address signal output to the D-RAM
92	MNT1	O	EEPROM ready signal output to the mechanism controller
93	MNT2	O	Operation clock signal output for PSP physical disc mark detection to DSD decoder
94	XMOE	O	Output enable signal output to the D-RAM
95	XCAS	O	Column address strobe signal output to the D-RAM
96, 97	MDB8, MDB9	I/O	Two-way data bus with the D-RAM
98	VSS	—	Ground terminal (digital system)
99	MDBA	I/O	Two-way data bus with the D-RAM
100	VDD	—	Power supply terminal (+3.3V) (digital system)
101, 102	MDBB, MDBC	I/O	Two-way data bus with the D-RAM
103	VDD5V	—	Power supply terminal (+5V)
104 to 106	MDBD to MDBF	I/O	Two-way data bus with the D-RAM
107	GFS	O	Guard frame sync signal output to the mechanism controller
108	VSS	—	Ground terminal (digital system)
109	APEO	O	Absolute phase error signal output
110	VDD	—	Power supply terminal (+3.3V) (digital system)
111	DASYO	O	RF binary signal output
112	GNDA5	—	Ground terminal (analog system)
113, 114	ASF1, AFS2	—	Filter connected terminal for selection the constant asymmetry compensation
115	DASYI	I	Analog signal input after integrated from the RF binary signal

Pin No.	Pin Name	I/O	Description
116	RFDCC	I	Input terminal for adjusting DC cut high-pass filter for RF signal Not used
117	RFIN	I	RF signal input from the DVD/CD RF amplifier
118, 119	VCCA5, VCCA4	—	Power supply terminal (+3.3V) (analog system)
120	VCOR1	—	VCO oscillating range setting resistor connected terminal
121	VCOIN	I	VCO input terminal
122, 123	GNDA4, GNDA3	—	Ground terminal (analog system)
124	LPF5	O	Signal output from the operation amplifier from PLL loop filter
125	VC1	I	Middle point voltage (+1.65V) input terminal
126, 127	LPF2, LPF1	I	Inverted signal input to the operation amplifier from PLL loop filter
128, 129	VCCA3, VCCA2	—	Power supply terminal (+3.3V) (analog system)
130	PDO	O	Signal output from the charge pump for phase comparator
131	PDHVCC	I	Middle point voltage input terminal for RF PLL
132	FDO	O	Signal output from the charge pump for frequency comparator
133, 134	GNDA2, GNDA1	—	Ground terminal (analog system)
135	SPO	O	Spindle motor control signal output
136	VC2	I	Middle point voltage (+1.65V) input terminal
137	MDIN2	I	Spindle motor servo drive signal input
138	MDIN1	I	MDP input terminal
139	VCCA1	—	Power supply terminal (+3.3V) (analog system)
140	CLVS	O	Control signal output for selection the spindle control filter constant at CLVS
141	VSS	—	Ground terminal (digital system)
142	MDSOUT	O	Frequency error output terminal of internal CLV circuit
143	VDD	—	Power supply terminal (+3.3V) (digital system)
144	MDPOUT	O	Phase error output terminal of internal CLV circuit
145	DFCT	I	Defect signal input terminal Not used
146	GSCOR	I	Guard subcode sync (S0+S1) detection signal input from the digital signal processor
147	EXCK	O	Subcode serial data reading clock signal output to the digital signal processor
148	SBIN	I	Subcode serial data input from the digital signal processor
149	VSS	—	Ground terminal (digital system)
150	SCOR	I	Subcode sync (S0+S1) detection signal input from the digital signal processor
151	WFCK	I	Write frame clock signal input from the digital signal processor
152	VDD5V	—	Power supply terminal (+5V)
153	XRCI	I	RAM overflow signal input terminal Not used
154	VDDS	—	Power supply terminal (+5V) (digital system)
155	C2PO	I	C2 pointer signal input from the digital signal processor
156	VDD	—	Power supply terminal (+3.3V) (digital system)
157	DBCK	O	Bit clock signal (2.8224 MHz) output terminal Not used
158	BCLK	I	Bit clock signal (2.8224 MHz) input from the digital signal processor
159	DDAT	O	PCM data output terminal Not used
160	MDAT	I	Serial data input from the digital signal processor
161	VSS	—	Ground terminal (digital system)
162	DLRC	O	L/R sampling clock signal (44.1 kHz) output terminal Not used
163	LRCK	I	L/R sampling clock signal (44.1 kHz) input from the digital signal processor
164	XRST	I	Reset signal input from the mechanism controller "L": reset
165	IFS0	I	Interface selection signal input terminal Fixed at "L" in this set
166	IFS1	I	Interface selection signal input terminal Fixed at "H" in this set

Pin No.	Pin Name	I/O	Description
167	XTAL	I	33.8688 MHz clock signal input terminal
168	VSS	—	Ground terminal (digital system)
169	XTL2	O	System clock output terminal (33.8688 MHz)
170	XTL1	I	System clock input terminal (33.8688 MHz)
171	VDD	—	Power supply terminal (+3.3V) (digital system)
172 to 176	D0 to D4	I/O	Two-way data bus with the mechanism controller

• DVD BOARD IC801 CXD2753R (DSD DECODER)

Pin No.	Pin Name	I/O	Description
1	VSCA0	—	Ground terminal (for core)
2	XMSLAT	I	Serial data latch pulse signal input from the mechanism controller
3	MSCK	I	Serial data transfer clock signal input from the mechanism controller
4	MSDATI	I	Serial data input from the mechanism controller
5	VDCA0	—	Power supply terminal (+2.5V) (for core)
6	MSDATO	O	Serial data output to the mechanism controller
7	MSREADY	O	Ready signal output to the mechanism controller "L": ready
8	XMSDOE	O	Serial data output enable signal output terminal Not used
9	XRST	I	Reset signal input from the mechanism controller "L": reset
10	SMUTE	I	Soft muting on/off control signal input from the mechanism controller "H": muting on
11	MCKI	I	Master clock signal (33.8688 MHz) input
12	VSIOA0	—	Ground terminal (for I/O)
13	EXCKO1	O	Master clock signal (33.8688 MHz) output to the digital audio processor
14	EXCKO2	O	External clock 2 signal output terminal Not used
15	LRCK	O	L/R sampling clock signal (44.1kHz) output terminal Not used
16	F75HZ	O	Not used
17	VDIOA0	—	Power supply terminal (+3.3V) (for I/O)
18 to 25	MNT0 to MNT7	O	Monitor signal output terminal Not used
26	TCK	I	Clock signal input from the DVD system processor
27	TDI	I	Serial data input from the DVD system processor
28	VSCA1	—	Ground terminal (for core)
29	TDO	O	Serial data output to the DVD system processor
30	TMS	I	TMS signal input from the DVD system processor
31	TRST	I	Reset signal input from the DVD system processor "L": reset
32 to 34	TEST1 to TEST3	I	Input terminal for the test (normally: fixed at "L")
35	VDCA1	—	Power supply terminal (+2.5V) (for core)
36	UBIT	O	Not used
37	XBIT	O	Not used
38 to 41	SUPDT0 to SUPDT3	O	Supplementary data output terminal Not used
42	VSIOA1	—	Ground terminal (for I/O)
43, 44	SUPDT4, SUPDT5	O	Supplementary data output terminal Not used
45	VDIOA1	—	Power supply terminal (+3.3V) (for I/O)
46, 47	SUPDT6, SUPDT7	O	Supplementary data output terminal Not used
48	SUPEN	O	Supplementary data enable signal output terminal Not used
49	VSCA2	—	Ground terminal (for core)
50	NC	O	Not used
51, 52	TEST4, TEST5	I	Input terminal for the test (normally: fixed at "L")
53	NC	O	Not used
54	VDCA2	—	Power supply terminal (+2.5V) (for core)
55, 56	NC	O	Not used
57	BCKASL	I	Input/output selection signal input terminal of bit clock signal (2.8224 MHz) for DSD data output "L": input (slave), "H": output (master) Fixed at "H" in this set
58	VSDSD0	—	Ground terminal (for DSD data output)
59	BCKAI	I	Bit clock signal (2.8224 MHz) input terminal for DSD data output Not used
60	BCKAO	O	Bit clock signal (2.8224 MHz) output terminal for DSD data output

HCD-SC5/SC6/SC8

Pin No.	Pin Name	I/O	Description
61	PHREFI	I	Bit clock signal (2.8224 MHz) input terminal for DSD data output Not used
62	PHREFO	O	Bit clock signal (2.8224 MHz) output to the digital audio processor Not used
63	ZDFL	O	Front L-ch Zero data flag detection signal output terminal Not used
64	DSAL	O	Front L-ch DSD data output to the digital audio processor
65	ZDFR	O	Front R-ch Zero data flag detection signal output terminal Not used
66	DSAR	O	Front R-ch DSD data output to the digital audio processor
67	VDDSD0	—	Power supply terminal (+3.3V) (for DSD data output)
68	ZDFC	O	Center zero data flag detection signal output terminal Not used
69	DSAC	O	Center DSD data output to the digital audio processor
70	ZDFLFE	O	Woofer zero data flag detection signal output terminal Not used
71	DSALFE	O	Woofer DSD data output to the digital audio processor
72	VSDSD1	—	Ground terminal (for DSD data output)
73	ZDFLS	O	Rear L-ch zero data flag detection signal output terminal Not used
74	DSALS	O	Rear L-ch DSD data output to the digital audio processor
75	ZDFRS	O	Rear R-ch zero data flag detection signal output terminal Not used
76	DSARS	O	Rear R-ch DSD data output to the digital audio processor
77	VDDSD	—	Power supply terminal (+3.3V) (For DSD data output)
78, 79	IOUT0, IOUT1	O	Data output terminal for IEEE 1394 link chip interface Not used
80	VSCB0	—	Ground terminal (for core)
81, 82	IOUT2, IOUT3	O	Data output terminal for IEEE 1394 link chip interface Not used
83	VDCB0	—	Power supply terminal (+2.5V) (for core)
84, 85	IOUT4, IOUT5	O	Data output terminal for IEEE 1394 link chip interface Not used
86	VSIOB0	—	Ground terminal (for I/O)
87	IANCO	O	Transmission information data output terminal for IEEE 1394 link chip interface Not used
88	IFULL	I	Data transmission hold request signal input terminal for IEEE 1394 link chip interface Not used
89	IEMPTY	I	High speed transmission request signal input terminal for IEEE 1394 link chip interface Not used
90	VDIOB0	—	Power supply terminal (+3.3V) (for I/O)
91	IFRM	O	Frame reference signal output terminal for IEEE 1394 link chip interface Not used
92	IOUTE	O	Enable signal output terminal for IEEE 1394 link chip interface Not used
93	IBCK	O	Data transmission clock signal output terminal for IEEE 1394 link chip interface Not used
94	VSCB1	—	Ground terminal (for core)
95	IERR	I	Not used
96	IANCI	I	Not used
97	IPLAN	I	Not used
98	IHOLD	O	Not used
99	VDCB1	—	Power supply terminal (+2.5V) (for core)
100	IVLD	I	Not used
101 to 105	IDIN0 to IDIN4	I	Not used
106	VSIOB1	—	Ground terminal (for I/O)
107 to 109	IDIN5 to IDIN7	I	Not used
110	VDIOB1	—	Power supply terminal (+3.3V) (for I/O)
111 to 114	WAD0 to WAD3	I	External A/D data input terminal for PSP physical disc mark detection Not used
115	TEST1	I	Input terminal for the test (normally: fixed at "L")
116	VSCB2	—	Ground terminal (for core)
117 to 120	WAD4 to WAD7	I	External A/D data input terminal for PSP physical disc mark detection Not used
121	VDCB2	—	Power supply terminal (+2.5V) (for core)

Pin No.	Pin Name	I/O	Description
122	WRFD	I	Not used
123	WCK	I	Operation clock signal input for PSP physical disc mark detection from the DVD decoder
124, 125	WAVDD0, WAVDD1	—	A/D power supply terminal (+2.5V) (for PSP physical disc mark detection)
126	WARFI	I	Analog RF signal input for PSP physical disc mark detection from the DVD/CD RF amplifier
127	WAVRB	I	A/D bottom reference terminal for PSP physical disc mark detection
128, 129	WAVSS0, WAVSS1	—	A/D ground terminal (for PSP physical disc mark detection)
130	VSIO	—	Ground terminal (for I/O)
131 to 134	DQ7 to DQ4	I/O	Two-way data bus with the SD-RAM
135	VDIOA2	—	Power supply terminal (+3.3V) (for I/O)
136 to 139	DQ3 to DQ0	I/O	Two-way data bus with the SD-RAM
140	VSIOA3	—	Ground terminal (for I/O)
141	DCLK	O	Clock signal output to the SD-RAM
142	DCKE	O	Clock enable signal output to the SD-RAM
143	XWE	O	Write enable signal output to the SD-RAM
144	XCAS	O	Column address strobe signal output to the SD-RAM
145	XRAS	O	Row address strobe signal output to the SD-RAM
146	VDIOA3	—	Power supply terminal (+3.3V) (for I/O)
147	NC	O	Not used
148, 149	A11, A10	O	Address signal output to the SD-RAM
150	VSCA3	—	Ground terminal (for core)
151, 152	A9, A8	O	Address signal output to the SD-RAM
153	VDCA3	—	Power supply terminal (+2.5V) (for core)
154 to 157	A7 to A4	O	Address signal output to the SD-RAM
158	VSIOA4	—	Ground terminal (for I/O)
159 to 162	A3 to A0	O	Address signal output to the SD-RAM
163	VDIOA4	—	Power supply terminal (+3.3V) (for I/O)
164	XSRQ	O	Serial data request signal output to the DVD decoder
165	XSHD	I	Header flag signal input from the DVD decoder
166	SDCK	I	Serial data transfer clock signal input from the DVD decoder
167	XSAK	I	Serial data effect flag signal input from the DVD decoder
168	SDEF	I	Error flag signal input from the DVD decoder
169 to 176	SD0 to SD7	I	Stream data signal input from the DVD decoder

• IC901 μPD703033BYGF-M40-3BA-A (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	DAMP-DATA	O	Serial data output to the stream processors
2	DAMP-CLK	O	Serial data transfer clock signal output to the stream processors
3	I2C-DATA	I/O	Communication data bus with the DVD system processor and mechanism controller
4	CQ-RST	O	Reset signal output to the DVD system processor "L": reset
5	I2C-CLK	I/O	Communication data reading clock signal input or transfer clock signal output with the DVD system processor and mechanism controller
6	DSP-DO	I	Write data input from the audio digital signal processor
7	DIG-DI	O	Read data output to the digital audio interface IC, audio digital signal processor and D/A converter
8	DIG-CLK	O	Clock signal output to the digital audio interface IC, audio digital signal processor and D/A converter
9	EVDD	—	Power supply terminal (+5V)
10	EVSS	—	Ground terminal
11	P-PWM	O	PWM voltage control signal output
12	DSP-RST	O	Reset signal output to the audio digital signal processor "L": reset
13	DSP-PM	O	PLL reset signal output to the audio digital signal processor "L": reset
14	DSP-CS	O	Chip select signal output to the audio digital signal processor
15	DSP-HACN	I	Acknowledge signal input from to the audio digital signal processor
16	DSP-BST	O	Boot strap signal output to the audio digital signal processor
17	DSP-GP9	I	Decode signal input from to the audio digital signal processor
18	DIR-ZERO	I	Audio serial data input from the digital audio interface IC
19	DIR-ERR	I	PLL lock error and data error flag input from the digital audio interface IC
20	DIR-CE	O	Chip enable signal output to the digital audio interface IC
21	VPP	—	Power supply terminal (for programming) Not used
22	DIR-XST	I	Source clock switching monitor input from the digital audio interface IC
23	DIR-AD	O	Muting signal output
24	DIR-XMODE	O	System reset signal output to the digital audio interface IC "L": reset
25	DIRDO	I	Write data input from the digital audio interface IC
26	DAMP-RST	O	Reset signal output to the stream processors "L": reset
27	GP12	—	Not used (fixed at "L")
28	DAMP-MUTEN	O	Muting on/off control signal output to the stream processors "H": muting on
29	CS1	O	Chip select signal output to the stream processor (for front L-ch and R-ch)
30	CS2	O	Chip select signal output to the stream processor (for center and woofer)
31	CS3	O	Chip select signal output to the stream processor (for rear L-ch and R-ch)
32	DAC-CS	O	Chip select signal output to the D/A converter
33	AD-RST	O	Reset signal output to the A/D converter and D/A converter "L": reset
34	RESET	I	System reset signal input "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
35	XT1	I	Sub system clock input terminal Not used (open)
36	XT2	O	Sub system clock output terminal Not used (open)
37	REGC	—	Capacitance connection terminal
38	X2	O	Main system clock output terminal (20 MHz)
39	X1	I	Main system clock input terminal (20 MHz)
40	VSS	—	Ground terminal
41	VDD	—	Power supply terminal (+5V)
42	CLKOUT	O	Clock signal output terminal Not used (open)
43	DIP-RST	O	Reset signal output to the power drivers "L": reset
44	DIP-OCP	I	Protect signal input from the over load detection circuit
45	ST-POWER	O	System power on/off control signal output "H": power on
46	HP-MUTE	O	Headphone muting on/off control signal output "L": muting on
47	AU-MUTE	O	Audio line muting on/off control signal output "L": muting on
48	VIDEO-MUTE	O	Video muting signal output

Pin No.	Pin Name	I/O	Description
49	PROG SW	I	SCAN SELECT switch input terminal "L": SELECTABLE, "H": INTERLACE
50	FM750	O	Power supply for tuner pack on/off control signal output
51	TUNED	I	Tuning detection signal input from the tuner unit "L": tuned
52	TUN-DI	I	Serial data input from the tuner unit
53	TUN-CE	O	Chip enable signal output to the tuner unit
54	TUN-DO	O	Serial data output to the tuner unit
55	TUN-CLK	O	Serial data transfer clock signal output to the tuner unit
56	FL-MUTE	O	Reset signal output to the fluorescent indicator tube driver "L": reset
57	FL-CLK	O	Serial data transfer clock signal output to the fluorescent indicator tube driver
58	BVDD	–	Power supply terminal (+5V) (for bus interface)
59	BVSS	–	Ground terminal (for bus interface)
60	FL-DATA	O	Serial data output to the fluorescent indicator tube driver
61	FL-CS	O	Chip select signal output to the fluorescent indicator tube driver "L" active
62	LED-CS	–	Not used
63	LED-CLR	–	Not used
64	HPSW	I	Connection detection signal input of the headphone jack "L": no connection, "H": headphone connected
65	DF-RST	O	Reset signal output to the digital audio processor "L": reset
66	PCON3	O	Standby LED control signal output
67	SW2	I	Chucking detection switch signal input
68	F-IN	O	Motor drive signal output
69	R-IN	O	Motor drive signal output
70	DVD_SEL	O	DVD select signal output
71, 72	NC	–	Not used
73	RGB_SEL	O	RGB select signal output
74	AVDD	–	Power supply terminal (+5V) (analog system)
75	AVSS	–	Ground terminal (analog system)
76	AVREF	–	Reference voltage (+5V) input terminal (analog system)
77	NC	–	Not used (fixed at "L")
78	SW1	I	Loading out detection switch signal input
79	SW3	I	Trigger detection switch signal input
80	AREA1	I	Destination setting terminal
81	SEN2	I	Disc loading detection signal input
82 to 84	KEY0 to KEY2	I	Key input terminal (A/D input)
85, 86	NC	–	Not used (fixed at "L")
87	MODEL	I	Model setting terminal
88	RDS-DATA	I	RDS serial data input from the RDS decoder
89	DVD-POWER	O	DVD power on/off control signal output "H": power on
90	STOP	I	System power stop signal input
91	POWER-SW	I	AC power detection signal input
92	SIRCS	I	Remote control signal input
93	WAKE	I	System wake up signal input by pressing a key on the front panel or remote commander or disc insert detect switch
94	RDS-CLK	I	RDS serial data transfer clock signal input from the RDS decoder
95	AV-SEL0	O	Audio/video selection signal output
96	AV-SEL1	O	Audio/video selection signal output
97	DF-SW	O	selection signal output to the digital audio processor
98	DF-SYNC	O	Sync signal output to the digital audio processor
99, 100	NC	–	Not used (fixed at "L")

SECTION 7
EXPLODED VIEWS

NOTE:
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Abbreviation
  - AUS : Australian model
  - E32 : 110-240V AC area in E model
  - EA : Saudi Arabia model
  - HK : Hong Kong model
  - KR : Korean model
  - MX : Mexican model
  - RU : Russian model
  - SP : Singapore model
  - TW : Taiwan model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

7-1. CASE SECTION

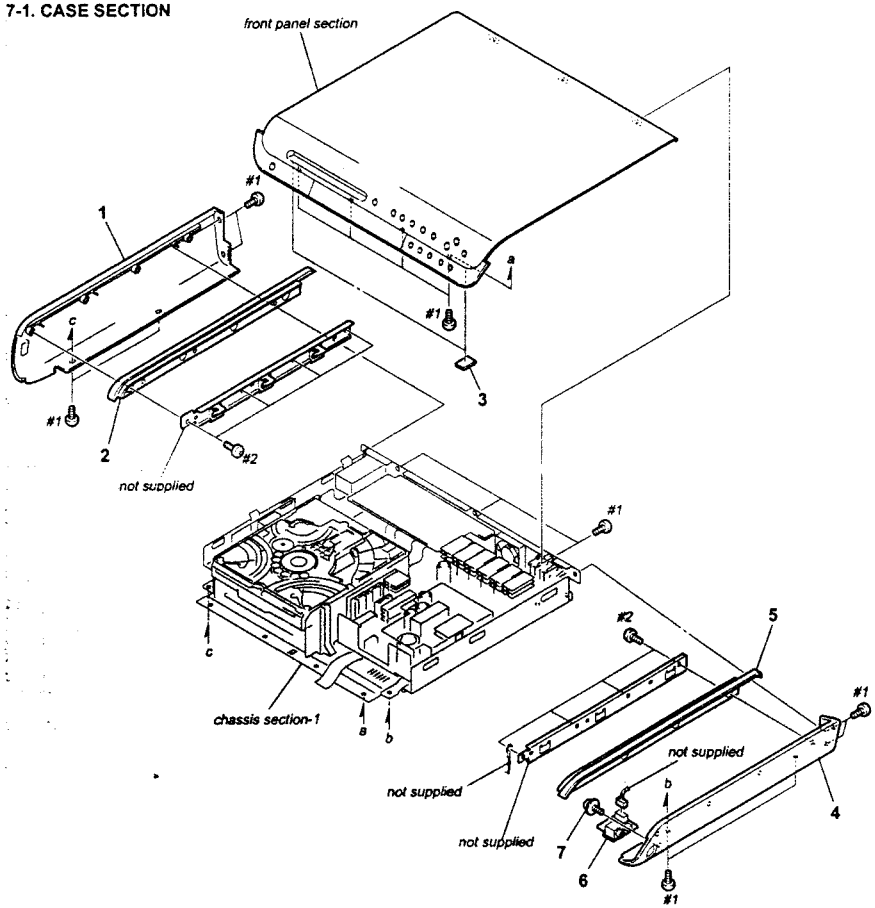

Ref. No.	Part No.	Description	Remark
1	4-248-580-01	SIDE PANEL(L)	
2	4-248-571-01	SIDE PANEL TOP(L)	
3	4-249-991-01	FOOT	
4	4-248-568-01	SIDE PANEL(R)	
5	4-248-578-01	SIDE PANEL TOP(R)	
6	A-4747-935-A	HP BOARD, COMPLETE (SC8:MX)	
6	A-4748-360-A	HP BOARD, COMPLETE (SC5:EXCEPT TW/SC6/SC8:EXCEPT MX,TW)	
6	A-4749-850-A	HP BOARD, COMPLETE (SC5:TW)	
6	A-4750-123-A	HP BOARD, COMPLETE (SC8:TW)	
7	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#2	7-685-545-14	SCREW +BTP 3X6 TYPE2 N-S	

7-2. FRONT PANEL SECTION

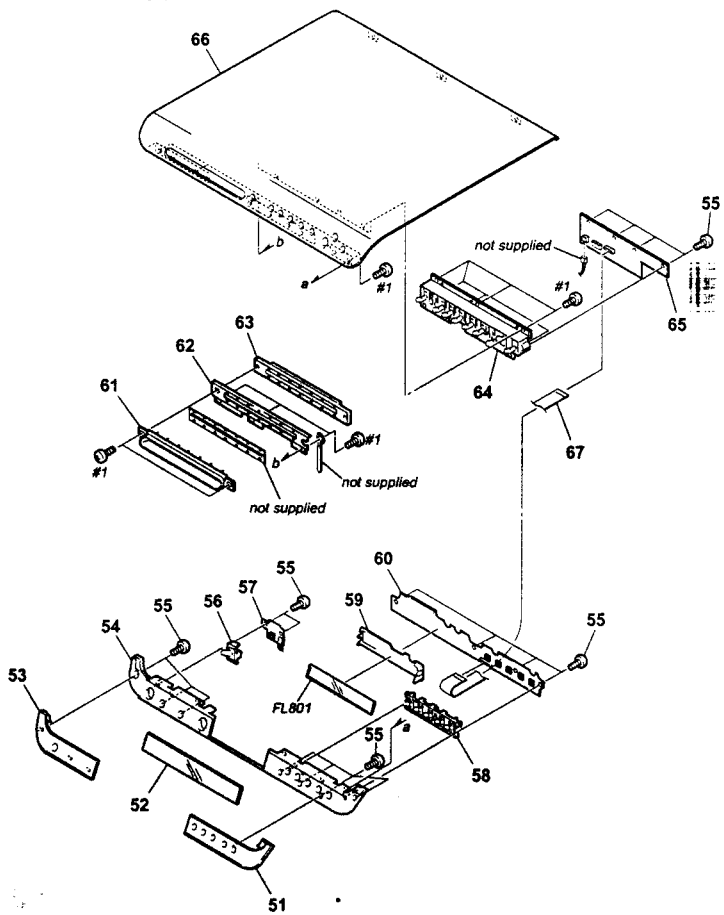

Ref. No.	Part No.	Description	Remark
51	4-248-573-01	PANEL TOP(R)	
52	X-4955-961-1	WINDOW SUB ASSY	
53	4-248-572-01	PANEL TOP(L) (SC5)	
53	4-248-572-11	PANEL TOP(L) (SC6)	
53	4-248-572-21	PANEL TOP(L) (SC8)	
54	4-248-577-01	FRONT(ML)PANEL	
55	4-931-757-31	SCREW(DIA.2.6X8)(IT38),TAPPING	
56	X-4955-809-1	POWER BUTTON SUB ASSY	
57	1-689-358-11	POWER LED BOARD	
58	4-248-576-01	BAND BUTTON	
59	4-248-538-02	HOLDER (FL)	
60	A-4748-363-A	FL BOARD, COMPLETE	
61	4-249-729-01	SLOT DISC	
62	4-249-732-01	COVER SLOT	
63	4-249-730-01	SLOT DISC(INSIDE)	
64	4-248-575-01	PLAY BUTTON	
65	A-4748-364-A	DOCON BOARD, COMPLETE	
66	4-248-561-01	FRONT(AL)PANEL(SC5:EXCEPT KR/ SC6:EXCEPT KR,EA/SC8:EXCEPT KR,E32,MX,TW)	
66	4-248-561-11	FRONT(AL)PANEL (SC5:KR/SC6:KR,EA/SC8:KR,E32,MX,TW)	
67	1-827-619-11	FLEXIBLE FLAT CABLE (13 CORE)	
FL801	1-518-924-11	INDICATOR TUBE, FLUORESCENT	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	

7-3. CHASSIS SECTION-1

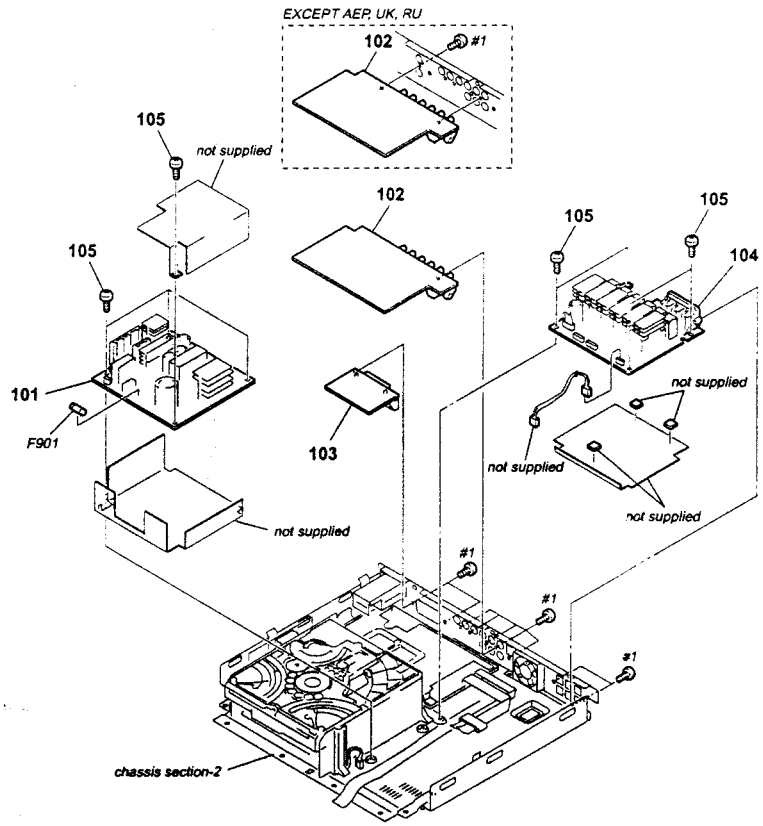

Ref. No.	Part No.	Description	Remark
101	1-468-790-11	POWER SWITCHING (including Ref.No.201) (SC6:AEP,UK/SC8:AEP,UK)	
101	A-4748-367-A	POWER BOARD, COMPLETE (SC5:AEP,UK,RU,SP,EA,HK,KR/SC6:RU,SP,EA,KR,AUS/ SC8:RU,SP,EA,HK,KR,AUS)	
101	A-4749-310-A	POWER BOARD, COMPLETE (SC8:MX)	
101	A-4749-714-A	POWER BOARD, COMPLETE (SC5:E32/SC8:E32)	
101	A-4749-845-A	POWER BOARD, COMPLETE (SC5:TW/SC8:TW)	
102	A-4748-355-A	I/O BOARD, COMPLETE (SC5:AEP,UK,RU/SC6:AEP,UK,RU/SC8:RU)	
102	A-4749-237-A	I/O BOARD, COMPLETE (SC8:E32,MX)	
102	A-4749-589-A	I/O BOARD, COMPLETE (SC8:AEP,UK)	
102	A-4749-712-A	I/O BOARD, COMPLETE (SC5:E32,HK,SP/SC6:EA,SP/SC8:HK,SP)	
102	A-4749-752-A	I/O BOARD, COMPLETE (SC5:KR,EA/SC6:KR,AUS/SC8:KR,AUS,EA)	
102	A-4749-857-A	I/O BOARD, COMPLETE (SC5:TW/SC8:TW)	
103	1-689-360-11	SCART BOARD (AEP,UK,RU)	
104	A-4748-358-A	AMP BOARD, COMPLETE (SC5:AEP,UK,RU,KR,EA/SC6:AEP,UK,RU,KR,AUS)	
104	A-4749-319-A	AMP BOARD, COMPLETE (SC8:MX)	
104	A-4749-707-A	AMP BOARD, COMPLETE (SC5:E32,HK,SP/SC6:EA,SP)	
104	A-4749-778-A	AMP BOARD, COMPLETE (SC8:AEP,UK,RU,KR,EA,AUS)	
104	A-4749-789-A	AMP BOARD, COMPLETE (SC8:E32,HK,SP)	
104	A-4750-126-A	AMP BOARD, COMPLETE (SC8:TW)	
105	3-970-608-01	SUMITITE (83), +BV	
⚠F901	1-532-465-31	FUSE (T3.15AL/250V) (EXCEPT SC5:TW/SC8:AEP,UK/SC8:AEP,UK,MX,TW)	
⚠F901	1-533-453-12	FUSE, GLASS TUBE (DIA. 5) (T5AL/125V) (SC5:TW/SC8:MX,TW)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

7-4. CHASSIS SECTION-2

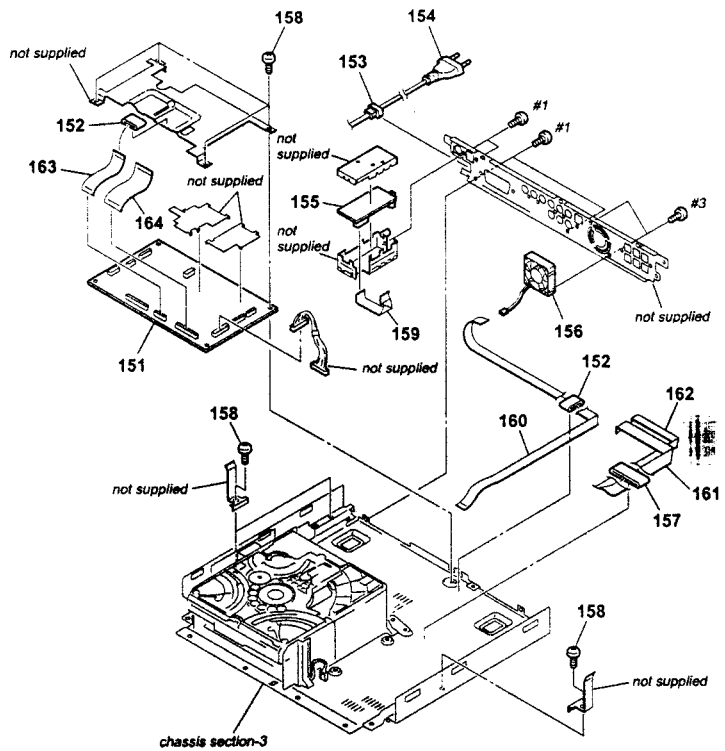

Ref. No.	Part No.	Description	Remark
151	A-4748-350-A	DVD BOARD, COMPLETE (SC5:AEP,UK)	
151	A-4749-315-A	DVD BOARD, COMPLETE (SC8:MX)	
151	A-4749-579-A	DVD BOARD, COMPLETE (SC8:AEP,UK)	
151	A-4749-584-A	DVD BOARD, COMPLETE (SC8:AEP,UK)	
151	A-4749-709-A	DVD BOARD, COMPLETE (SC5:HK,SP)	
151	A-4749-716-A	DVD BOARD, COMPLETE (SC5:E32)	
151	A-4749-749-A	DVD BOARD, COMPLETE (SC5:RU)	
151	A-4749-756-A	DVD BOARD, COMPLETE (SC6:AUS)	
151	A-4749-758-A	DVD BOARD, COMPLETE (SC6:RU)	
151	A-4749-760-A	DVD BOARD, COMPLETE (SC6:SP)	
151	A-4749-762-A	DVD BOARD, COMPLETE (SC5:EA)	
151	A-4749-782-A	DVD BOARD, COMPLETE (SC8:RU)	
151	A-4749-784-A	DVD BOARD, COMPLETE (SC8:AUS)	
151	A-4749-786-A	DVD BOARD, COMPLETE (SC8:HK,SP)	
151	A-4749-792-A	DVD BOARD, COMPLETE (SC8:EA)	
151	A-4749-852-A	DVD BOARD, COMPLETE (SC5:TW)	
151	A-4750-056-A	DVD BOARD, COMPLETE (SC5:KR)	
151	A-4750-071-A	DVD BOARD, COMPLETE (SC6:EA)	
151	A-4750-073-A	DVD BOARD, COMPLETE (SC6:KR)	
151	A-4750-075-A	DVD BOARD, COMPLETE (SC8:KR)	
151	A-4750-119-A	DVD BOARD, COMPLETE (SC8:E32)	

Ref. No.	Part No.	Description	Remark
151	A-4750-121-A	DVD BOARD, COMPLETE (SC8:TW)	
152	1-500-657-11	CORE, FERRIET	
* 153	3-703-244-00	BUSHING (2104), CORD	
⚠154	1-696-169-51	CORD, POWER (EXCEPT AUS,KR,MX,TW)	
⚠154	1-696-848-51	CORD, POWER (AUS)	
⚠154	1-769-079-22	CORD, POWER (KR)	
⚠154	1-775-789-91	CORD, POWER (MX,TW)	
155	A-4734-407-A	TUNER UNIT (AEP/UK/RU/KR/EA)	
155	A-4734-411-A	TUNER UNIT (EXCEPT AEP/UK/RU/KR/EA)	
156	1-763-861-12	FAN, DC	
157	1-469-854-11	CORE, FERRITE	
158	3-970-608-11	SUMITITE (B3), +BV	
159	1-827-625-11	FLEXIBLE FLAT CABLE (11 CORE)	
160	1-827-620-11	FLEXIBLE FLAT CABLE (15 CORE)	
161	1-827-623-11	FLEXIBLE FLAT CABLE (15 CORE)	
162	1-827-624-11	FLEXIBLE FLAT CABLE (11 CORE)	
163	1-827-622-11	FLEXIBLE FLAT CABLE (15 CORE)	
164	1-827-621-11	FLEXIBLE FLAT CABLE (29 CORE)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#3	7-685-681-09	SCREW +BVTT 4X8 (S)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

7-5. CHASSIS SECTION-3

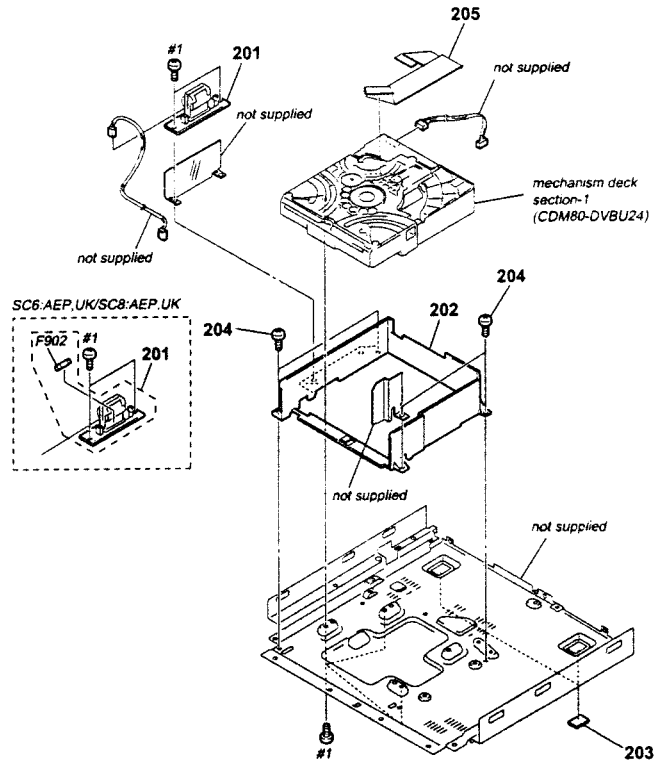

Ref. No.	Part No.	Description	Remark
201	1-468-790-11	POWER SWITCHING (including Ref.No.101) (SC6:AEP,UK/SC8:AEP,UK)	
201	A-4747-662-A	LF BOARD, COMPLETE (SC5:AEP,UK,RU,SP,EA,HK,KR/SC6:RU,SP,EA,KR,AUS/ SC8:RU,SP,EA,HK,KR,AUS)	
201	A-4749-311-A	LF BOARD, COMPLETE (SC8:MX)	
201	A-4749-715-A	LF BOARD, COMPLETE (SC5:E32/SC8:E32)	
201	A-4749-846-A	LF BOARD, COMPLETE (SC5:TW/SC8:TW)	

Ref. No.	Part No.	Description	Remark
202	4-248-579-01	MD COVER	
203	4-249-991-01	FOOT	
204	3-970-608-11	SUMITITE (B3), +8V	
205	1-827-626-11	FLEXIBLE FLAT CABLE (29 CORE)	
⚠F902	1-532-465-31	FUSE (T3.15AL/250V) (SC6:AEP,UK/SC8:AEP,UK)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

7-6. MECHANISM DECK SECTION-1 (CDM80-DVBU24)

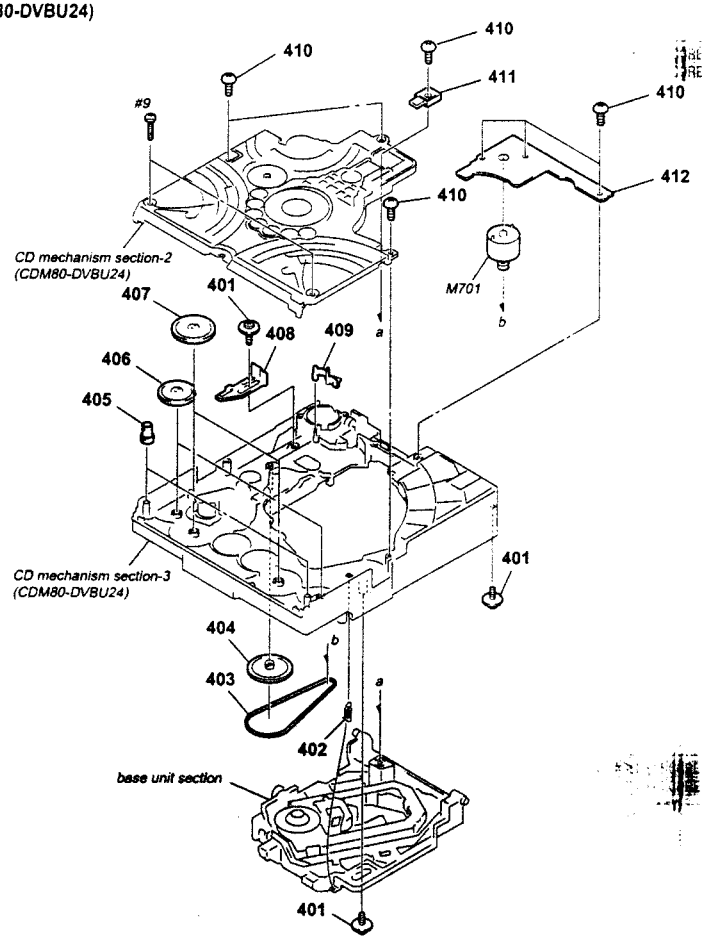

Ref. No.	Part No.	Description	Remark
401	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
402	4-248-723-01	SPR-E, HOLDER DOWN	
403	4-245-653-01	BELT (MOT)	
404	4-245-662-01	PULLEY (GEAR)	
405	4-245-646-01	GEAR (IDL-F)	
406	4-245-644-01	GEAR (IDL-D)	
407	4-245-645-01	GEAR (IDL-E)	
408	4-246-203-01	LEVER (RELEASE)	
409	4-245-630-01	LEVER (SW)	
410	4-951-620-01	SCREW (2.6X8), +BVTP	
411	4-245-639-01	LEVER (CL UP2)	
412	1-688-337-11	DRIVER BOARD	
M701	X-4955-496-1	MOTOR (PULLEY) ASSY (LOADING)	
#9	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	

7-7. MECHANISM DECK SECTION-2 (CDM80-DVBU24)

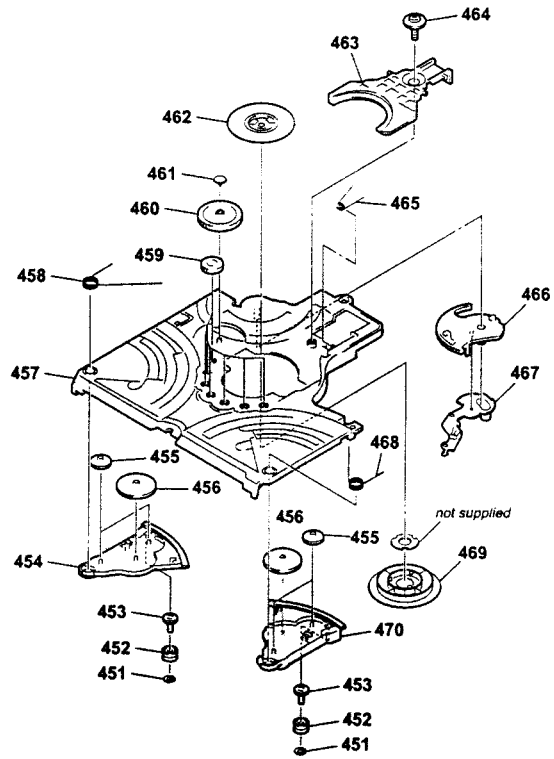

Ref. No.	Part No.	Description	Remark
451	4-245-627-01	WASHER (6-2.7-0.4)	
452	4-245-637-01	ROLLER, RUBBER	
453	4-245-649-01	GEAR (IDL-I)	
454	4-245-657-01	LEVER (LOADING-R)	
455	4-245-647-01	GEAR (IDL-G)	
456	4-245-648-01	GEAR (IDL-H)	
457	4-245-655-01	CHASSIS (TOP)	
458	4-245-631-01	SPT-T (LOADING-R)	
459	4-245-650-01	GEAR (IDL-J)	
460	4-245-651-01	GEAR (IDL-L)	
461	4-245-640-01	GEAR (CAP)	
462	4-245-626-01	CAP, CLAMPER DBU-1	
463	4-245-638-01	LEVER (CL UP1)	
464	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
465	4-245-636-01	SPR-T CL DOWN	
466	4-245-658-01	LEVER (DISC STOP)	
467	4-245-659-01	LEVER (DISC SENSOR)	
468	4-245-632-01	SPR-T (LOADING-L)	
469	4-245-625-01	CLAMPER DBU-1	
470	4-245-656-01	LEVER (LOADING-L)	

7-8. MECHANISM DECK SECTION-3 (CDM80-DVBU24)

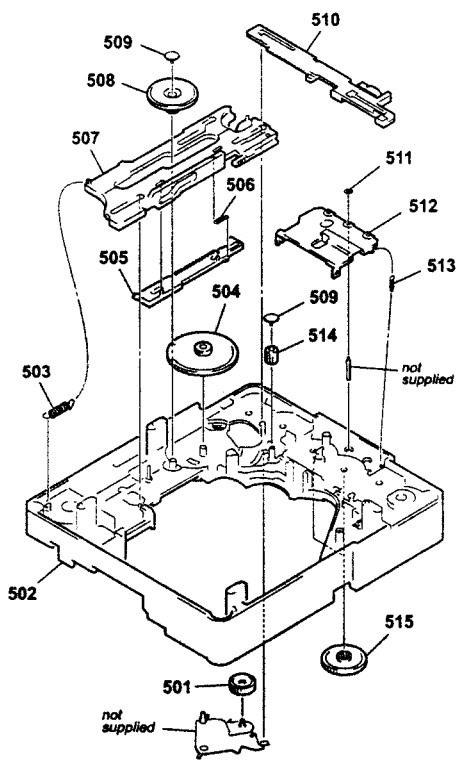

Ref. No.	Part No.	Description	Remark
501	4-245-643-01	GEAR (IDL-C)	
502	X-4955-497-1	CHASSIS (BOTTOM) ASSY	
503	4-248-722-01	SPR-E, DIR	
504	4-245-642-01	GEAR (IDL-B)	
505	4-245-614-01	LEVER (DIR FIRST)	
506	4-245-633-01	SPR-E DIR BACK	
507	4-245-660-01	LEVER (DIR)	
508	4-245-641-01	GEAR (IDL-A)	
509	4-245-640-01	GEAR (CAP)	
510	4-245-628-01	LEVER (BU LOCK)	
511	4-248-206-01	WASHER (3-1-0.4)	
512	4-245-624-01	LEVER, CLOSE	
513	4-245-635-01	SPR-E LEVER CLOSE	
514	4-245-629-01	GEAR (BU LOCK)	
515	4-245-644-01	GEAR (IDL-D)	

7-9. BASE UNIT SECTION

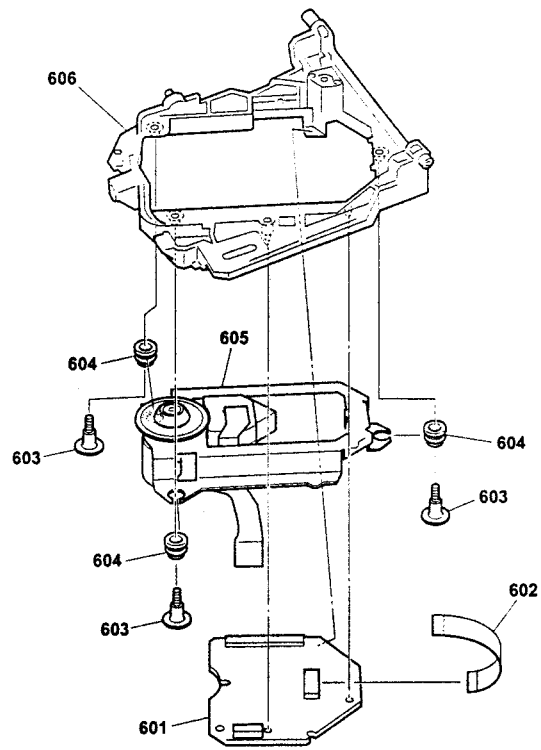

Ref. No.	Part No.	Description	Remark
601	A-4728-690-A	RF BOARD, COMPLETE	
602	1-685-250-11	PWB, FLEXIBLE	
603	4-981-923-01	SCREW (M), STEP	
604	3-053-847-41	INSULATOR	
⚠605	1-477-263-11	OPTICAL PICK-UP (TDP022W)	
606	X-4955-484-1	HOLDER (BU) ASSY	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

SECTION 8
ELECTRICAL PARTS LIST

AMP

Note:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
  All resistors are in ohms
  METAL: Metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- CAPACITORS
  uF : μF
- COILS
  uH : μH
- SEMICONDUCTORS
  In each case, u: μ , for example:
  uA...: μA..., uPA...: μPA..., uPB...: μPB..., uPC...: μPC..., uPD...: μPD...
- Abbreviation
  AUS : Australian model
  E32 : 110-240V AC area in E model
  EA : Saudi Arabia model
  HK : Hong Kong model
  KR : Korean model
  MX : Mexican model
  RU : Russian model
  SP : Singapore model
  TW : Taiwan model

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description				Remark
	A-4748-358-A	AMP BOARD, COMPLETE (SC5:AEP,UK,RU,KR,EA/SC6:AEP,UK,RU,KR,AUS)				
		**********				
	A-4749-319-A	AMP BOARD, COMPLETE (SC8:MX)				
		**********				
	A-4749-707-A	AMP BOARD, COMPLETE (SC5:E32,HK,SP/SC6:EA,SP)				
		**********				
	A-4749-778-A	AMP BOARD, COMPLETE (SC8:AEP,UK,RU,KR,EA,AUS)				
		**********				
	A-4749-789-A	AMP BOARD, COMPLETE (SC8:E32,HK,SP)				
		**********				
	A-4750-126-A	AMP BOARD, COMPLETE (SC8:TW)				
		**********				
	7-685-646-79	SCREW +8VTP 3X8 TYPE2 N-S				
		< CAPACITOR >				
C101	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C102	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C103	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V (SC5/SC6)	
C104	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C105	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C106	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C121	1-126-948-11	ELECT	100uF	20.00%	35V	
C122	1-126-948-11	ELECT	100uF	20.00%	35V	
C123	1-126-948-11	ELECT	100uF	20.00%	35V (SC5/SC6)	
C124	1-126-948-11	ELECT	100uF	20.00%	35V	
C125	1-126-948-11	ELECT	100uF	20.00%	35V	
C126	1-126-948-11	ELECT	100uF	20.00%	35V	
C131	1-136-157-00	FILM	0.022uF	5%	50V	
C132	1-136-157-00	FILM	0.022uF	5%	50V	
C133	1-136-157-00	FILM	0.022uF	5%	50V (SC5/SC6)	
C134	1-136-157-00	FILM	0.022uF	5%	50V	
C135	1-136-157-00	FILM	0.022uF	5%	50V	
C136	1-136-157-00	FILM	0.022uF	5%	50V	
C141	1-104-665-11	ELECT	100uF	20.00%	10V	
C142	1-104-665-11	ELECT	100uF	20.00%	10V	
C143	1-104-665-11	ELECT	100uF	20.00%	10V (SC5/SC6)	
C144	1-104-665-11	ELECT	100uF	20.00%	10V	
C145	1-104-665-11	ELECT	100uF	20.00%	10V	
C146	1-104-665-11	ELECT	100uF	20.00%	10V	
C151	1-104-665-11	ELECT	100uF	20.00%	10V	
C152	1-104-665-11	ELECT	100uF	20.00%	10V	
C153	1-104-665-11	ELECT	100uF	20.00%	10V (SC5/SC6)	
C154	1-104-665-11	ELECT	100uF	20.00%	10V	
C155	1-104-665-11	ELECT	100uF	20.00%	10V	
C156	1-104-665-11	ELECT	100uF	20.00%	10V	
C161	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C162	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C163	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V (SC5/SC6)	
C164	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C165	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C166	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C171	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C172	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C173	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V (SC5/SC6)	
C174	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C175	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C176	1-107-826-11	CERAMIC CHIP	0.1uF	10.00%	16V	
C181	1-136-157-00	FILM	0.022uF	5%	50V	
C182	1-136-157-00	FILM	0.022uF	5%	50V	
C183	1-136-157-00	FILM	0.022uF	5%	50V (SC5/SC6)	
C184	1-136-157-00	FILM	0.022uF	5%	50V	
C185	1-136-157-00	FILM	0.022uF	5%	50V	
C186	1-136-157-00	FILM	0.022uF	5%	50V	
C191	1-136-177-00	FILM	1uF	5.00%	50V	
C192	1-136-177-00	FILM	1uF	5.00%	50V	
C193	1-136-177-00	FILM	1uF	5.00%	50V (SC5/SC6)	
C194	1-136-177-00	FILM	1uF	5.00%	50V	
C195	1-136-177-00	FILM	1uF	5.00%	50V	
C196	1-136-177-00	FILM	1uF	5.00%	50V	
C201	1-136-177-00	FILM	1uF	5.00%	50V	
C202	1-136-177-00	FILM	1uF	5.00%	50V	
C203	1-136-177-00	FILM	1uF	5.00%	50V (SC5/SC6)	
C204	1-136-177-00	FILM	1uF	5.00%	50V	
C205	1-136-177-00	FILM	1uF	5.00%	50V	
C206	1-136-177-00	FILM	1uF	5.00%	50V	
C211	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C212	1-164-505-11	CERAMIC CHIP	2.2uF		16V	

AMP

Ref. No.	Part No.	Description				Remarks
C213	1-164-505-11	CERAMIC CHIP	2.2uF		16V (SC5/SC6)	
C214	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C215	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C216	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C221	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V	
C222	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V	
C223	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V (SC5/SC6)	
C224	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V	
C225	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V	
C226	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V	
C231	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C232	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C233	1-164-505-11	CERAMIC CHIP	2.2uF		16V (SC5/SC6)	
C234	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C235	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C236	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C241	1-104-665-11	ELECT	100uF	20.00%	10V	
C242	1-104-665-11	ELECT	100uF	20.00%	10V	
C243	1-104-665-11	ELECT	100uF	20.00%	10V (SC5/SC6)	
C244	1-104-665-11	ELECT	100uF	20.00%	10V	
C245	1-104-665-11	ELECT	100uF	20.00%	10V	
C246	1-104-665-11	ELECT	100uF	20.00%	10V	
C271	1-109-982-11	CERAMIC CHIP	1uF	10.00%	10V	
C272	1-109-982-11	CERAMIC CHIP	1uF	10.00%	10V	
C273	1-117-370-11	CERAMIC CHIP	10uF		10V (SC5/SC6)	
C274	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C275	1-109-982-11	CERAMIC CHIP	1uF	10.00%	10V	
C276	1-109-982-11	CERAMIC CHIP	1uF	10.00%	10V	
C281	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C282	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C283	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V (SC5/SC6)	
C284	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C285	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C286	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C291	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C292	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C293	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V (SC5/SC6)	
C294	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C295	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C296	1-163-021-91	CERAMIC CHIP	0.01uF	10.00%	50V	
C300	1-107-898-11	ELECT	2200uF	20.00%	35V	
C303	1-126-934-11	ELECT	220uF	20.00%	10V	
C304	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C305	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C306	1-104-665-11	ELECT	100uF	20.00%	10V	
C307	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C308	1-104-665-11	ELECT	100uF	20.00%	10V	
C309	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C310	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C311	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C312	1-104-665-11	ELECT	100uF	20.00%	10V	
C313	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C314	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C315	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C321	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C326	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C331	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C336	1-126-965-91	ELECT	22uF	20.00%	50V	
C337	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C338	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C339	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	
C340	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V	
C350	1-115-339-11	CERAMIC CHIP	0.1uF	10.00%	50V	
C356	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C357	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C358	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C359	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C360	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C361	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C362	1-126-947-11	ELECT	47uF	20.00%	35V	
C363	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C364	1-126-933-11	ELECT	100uF	20.00%	16V	
C365	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C367	1-164-156-11	CERAMIC CHIP	0.1uF		25V (SC8)	
C369	1-126-933-11	ELECT	100uF	20.00%	16V (SC8)	
C370	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (SC8)	
C372	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (SC8)	
C374	1-128-551-11	ELECT	22uF	20.00%	25V (SC8)	
C375	1-126-935-11	ELECT	470uF	20.00%	16V	
C376	1-126-935-11	ELECT	470uF	20.00%	16V	
C377	1-126-964-11	ELECT	10uF	20.00%	50V (SC5/SC6)	
C378	1-126-160-11	ELECT	1uF	20%	50V	
C380	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (SC8)	
C381	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (SC8)	
C403	1-164-505-11	CERAMIC CHIP	2.2uF		16V (SC8)	
C404	1-164-505-11	CERAMIC CHIP	2.2uF		16V (SC8)	
C476	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C477	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C478	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C491	1-126-947-11	ELECT	47uF	20.00%	10V	
		< CONNECTOR >				
* CN301	1-506-987-11	PIN, CONNECTOR (PC BOARD) 5P				
* CN302	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P				
CN303	1-784-213-11	CONNECTOR,FFC(LIF(NON-ZIF))15P				
CN304	1-779-279-11	CONNECTOR,FFC(LIF(NON-ZIF))11P				
		< DIODE >				
D101	6-500-248-01	DIODE SFPL-62V				
D102	6-500-248-01	DIODE SFPL-62V				
D103	6-500-248-01	DIODE SFPL-62V (SC5/SC6)				

AMP

Ref. No.	Part No.	Description	Remarks
D104	6-500-248-01	DIODE SFPL-62V	
D105	6-500-248-01	DIODE SFPL-62V	
D106	6-500-248-01	DIODE SFPL-62V	
D111	6-500-248-01	DIODE SFPL-62V	
D112	6-500-248-01	DIODE SFPL-62V	
D113	6-500-248-01	DIODE SFPL-62V (SC5/SC6)	
D114	6-500-248-01	DIODE SFPL-62V	
D115	6-500-248-01	DIODE SFPL-62V	
D116	6-500-248-01	DIODE SFPL-62V	
D121	6-500-131-01	DIODE LI116	
D122	6-500-131-01	DIODE LI116	
D123	6-500-131-01	DIODE LI116 (SC5/SC6)	
D124	6-500-131-01	DIODE LI116	
D125	6-500-131-01	DIODE LI116	
D126	6-500-131-01	DIODE LI116	
D131	6-500-131-01	DIODE LI116	
D132	6-500-131-01	DIODE LI116	
D133	6-500-131-01	DIODE LI116 (SC5/SC6)	
D134	6-500-131-01	DIODE LI116	
D135	6-500-131-01	DIODE LI116	
D136	6-500-131-01	DIODE LI116	
D141	6-500-260-01	DIODE P6SMB39AT3	
D142	6-500-260-01	DIODE P6SMB39AT3	
D143	6-500-260-01	DIODE P6SMB39AT3 (SC5/SC6)	
D144	6-500-260-01	DIODE P6SMB39AT3	
D145	6-500-260-01	DIODE P6SMB39AT3	
D146	6-500-260-01	DIODE P6SMB39AT3	
D151	6-500-260-01	DIODE P6SMB39AT3	
D152	6-500-260-01	DIODE P6SMB39AT3	
D153	6-500-260-01	DIODE P6SMB39AT3 (SC5/SC6)	
D154	6-500-260-01	DIODE P6SMB39AT3	
D155	6-500-260-01	DIODE P6SMB39AT3	
D156	6-500-260-01	DIODE P6SMB39AT3	
D303	8-719-404-50	DIODE MA111-TX (SC5/SC6)	
D304	8-719-404-50	DIODE MA111-TX (SC5/SC6)	
D305	8-719-404-50	DIODE MA111-TX (SC8)	
D306	8-719-404-50	DIODE MA111-TX	
D401	8-719-404-50	DIODE MA111-TX (SC8)	
D402	8-719-404-50	DIODE MA111-TX (SC8)	
		< FERRITE BEAD >	
FB301	1-469-760-21	INDUCTOR 0uH	
FB302	1-469-760-21	INDUCTOR 0uH	
FB303	1-469-760-21	INDUCTOR 0uH	
FB304	1-469-760-21	INDUCTOR 0uH	
		< IC >	
IC101	6-703-288-01	IC CXD9750L	
IC102	6-703-288-01	IC CXD9750L	
IC103	6-703-288-01	IC CXD9750L (SC5/SC6)	
IC104	6-703-288-01	IC CXD9750L	
IC105	6-703-288-01	IC CXD9750L	
IC106	6-703-288-01	IC CXD9750L	
IC301	6-703-287-01	IC CXD9743N	
IC302	6-703-287-01	IC CXD9743N	
IC303	6-703-287-01	IC CXD9743N	
IC304	6-701-189-01	IC MC74VHC1GU04DFT1	

Ref. No.	Part No.	Description			Remarks
IC305	8-759-385-17	IC NJM4580E(TE2)			
IC306	8-759-533-85	IC BA05FP-E2			
IC307	8-759-460-72	IC BA033FP-E2			
IC308	6-700-263-01	IC NJM2870F18(TE2)			
IC309	8-759-385-17	IC NJM4580E(TE2) (SC8)			
		< JACK >			
J301	1-694-998-11	TERMINAL BOARD (SPEAKER) (SC5/SC6)			
J301	1-780-000-11	TERMINAL BOARD (SPEAKER) (SC8)			
J302	1-774-785-11	JACK, PIN 1P (SUB WOOFER) (SC8)			
		< COIL >			
L101	1-456-035-11	INDUCTOR 10uH			
L102	1-456-035-11	INDUCTOR 10uH			
L103	1-456-035-11	INDUCTOR 10uH (SC5/SC6)			
L104	1-456-035-11	INDUCTOR 10uH			
L105	1-456-035-11	INDUCTOR 10uH			
L106	1-456-035-11	INDUCTOR 10uH			
L302	1-412-939-11	INDUCTOR 1uH			
L305	1-414-398-11	INDUCTOR 10uH			
		< TRANSISTOR >			
Q101	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q102	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q103	8-729-602-36	TRANSISTOR 2SA1602TP-1EF (SC5/SC6)			
Q104	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q105	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q106	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q111	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q112	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q113	8-729-602-36	TRANSISTOR 2SA1602TP-1EF (SC5/SC6)			
Q114	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q115	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q116	8-729-602-36	TRANSISTOR 2SA1602TP-1EF			
Q301	8-729-920-31	TRANSISTOR DTC343TK-T-146 (SC8)			
Q303	8-729-801-84	TRANSISTOR 2SB1013-TP-34			
Q304	8-729-901-00	TRANSISTOR DTC124EKA-T146			
Q309	8-729-920-31	TRANSISTOR DTC343TK-T-146 (SC8)			
Q401	8-729-801-84	TRANSISTOR 2SB1013-TP-34			
Q402	8-729-901-00	TRANSISTOR DTC124EKA-T146			
Q403	8-729-120-28	TRANSISTOR 2SC2412K-T-146-QR (SC8)			
Q476	8-729-120-28	TRANSISTOR 2SC1623-T1-L5L6			
		< RESISTOR >			
R101	1-216-845-11	METAL CHIP	100K	5%	1/16W
R102	1-216-845-11	METAL CHIP	100K	5%	1/16W
R103	1-216-845-11	METAL CHIP	100K	5%	1/16W (SC5/SC6)
R104	1-216-845-11	METAL CHIP	100K	5%	1/16W
R105	1-216-845-11	METAL CHIP	100K	5%	1/16W
R106	1-216-845-11	METAL CHIP	100K	5%	1/16W
R111	1-216-845-11	METAL CHIP	100K	5%	1/16W
R112	1-216-845-11	METAL CHIP	100K	5%	1/16W
R113	1-216-845-11	METAL CHIP	100K	5%	1/16W (SC5/SC6)
R114	1-216-845-11	METAL CHIP	100K	5%	1/16W
R115	1-216-845-11	METAL CHIP	100K	5%	1/16W
R116	1-216-845-11	METAL CHIP	100K	5%	1/16W
R121	1-216-845-11	METAL CHIP	100K	5%	1/16W

AMP

Ref. No.	Part No.	Description			Remarks
R122	1-216-845-11	METAL CHIP	100K	5%	1/16W
R123	1-216-845-11	METAL CHIP	100K	5%	1/16W (SC5/SC6)
R124	1-216-845-11	METAL CHIP	100K	5%	1/16W
R125	1-216-845-11	METAL CHIP	100K	5%	1/16W
R126	1-216-845-11	METAL CHIP	100K	5%	1/16W
R301	1-216-817-11	METAL CHIP	470	5%	1/16W
R303	1-216-817-11	METAL CHIP	470	5%	1/16W
R304	1-216-817-11	METAL CHIP	470	5%	1/16W
R305	1-216-817-11	METAL CHIP	470	5%	1/16W
R306	1-216-817-11	METAL CHIP	470	5%	1/16W
R307	1-216-817-11	METAL CHIP	470	5%	1/16W
R312	1-216-809-11	METAL CHIP	100	5%	1/16W
R313	1-216-809-11	METAL CHIP	100	5%	1/16W
R314	1-216-809-11	METAL CHIP	100	5%	1/16W
R315	1-216-809-11	METAL CHIP	100	5%	1/16W
R316	1-216-809-11	METAL CHIP	100	5%	1/16W
R317	1-216-805-11	METAL CHIP	47	5%	1/16W
R318	1-216-821-11	METAL CHIP	1K	5%	1/16W
R319	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R320	1-216-821-11	METAL CHIP	1K	5%	1/16W
R321	1-216-821-11	METAL CHIP	1K	5%	1/16W
R322	1-216-821-11	METAL CHIP	1K	5%	1/16W
R323	1-216-821-11	METAL CHIP	1K	5%	1/16W
R324	1-216-821-11	METAL CHIP	1K	5%	1/16W
R325	1-216-809-11	METAL CHIP	100	5%	1/16W
R326	1-216-809-11	METAL CHIP	100	5%	1/16W
R327	1-216-809-11	METAL CHIP	100	5%	1/16W
R328	1-216-809-11	METAL CHIP	100	5%	1/16W
R329	1-216-809-11	METAL CHIP	100	5%	1/16W
R330	1-216-809-11	METAL CHIP	100	5%	1/16W
R331	1-216-809-11	METAL CHIP	100	5%	1/16W
R332	1-216-809-11	METAL CHIP	100	5%	1/16W
R333	1-216-809-11	METAL CHIP	100	5%	1/16W
R334	1-216-809-11	METAL CHIP	100	5%	1/16W
R335	1-216-809-11	METAL CHIP	100	5%	1/16W
R336	1-216-809-11	METAL CHIP	100	5%	1/16W
R337	1-216-857-11	METAL CHIP	1M	5%	1/16W
R338	1-216-819-11	METAL CHIP	680	5%	1/16W
R339	1-216-864-11	METAL CHIP	0	5%	1/16W
R341	1-216-837-11	METAL CHIP	22K	5%	1/16W
R342	1-216-837-11	METAL CHIP	22K	5%	1/16W
R343	1-216-837-11	METAL CHIP	22K	5%	1/16W
R344	1-216-837-11	METAL CHIP	22K	5%	1/16W
R345	1-216-837-11	METAL CHIP	22K	5%	1/16W
R346	1-216-837-11	METAL CHIP	22K	5%	1/16W
R347	1-216-837-11	METAL CHIP	22K	5%	1/16W
R348	1-216-837-11	METAL CHIP	22K	5%	1/16W
R349	1-216-839-11	METAL CHIP	33K	5%	1/16W
R350	1-216-839-11	METAL CHIP	33K	5%	1/16W
R351	1-216-839-11	METAL CHIP	33K	5%	1/16W
R352	1-216-839-11	METAL CHIP	33K	5%	1/16W
R353	1-216-833-11	METAL CHIP	10K	5%	1/16W
R354	1-216-833-11	METAL CHIP	10K	5%	1/16W
R358	1-216-837-11	METAL CHIP	22K	5%	1/16W (SC8)
R359	1-216-837-11	METAL CHIP	22K	5%	1/16W (SC8)

Ref. No.	Part No.	Description			Remarks
R360	1-216-837-11	METAL CHIP	22K	5%	1/16W (SC8)
R361	1-216-837-11	METAL CHIP	22K	5%	1/16W (SC8)
R362	1-216-839-11	METAL CHIP	33K	5%	1/16W (SC8)
R363	1-216-839-11	METAL CHIP	33K	5%	1/16W (SC8)
R364	1-216-839-11	METAL CHIP	33K	5%	1/16W (SC8)
R365	1-216-839-11	METAL CHIP	33K	5%	1/16W (SC8)
R366	1-216-833-11	METAL CHIP	10K	5%	1/16W (SC8)
R367	1-216-833-11	METAL CHIP	10K	5%	1/16W (SC8)
R368	1-216-837-11	METAL CHIP	22K	5%	1/16W (SC8)
R369	1-216-809-11	METAL CHIP	100	5%	1/16W (SC8)
R370	1-216-841-11	METAL CHIP	47K	5%	1/16W (SC8)
R375	1-216-845-11	METAL CHIP	100K	5%	1/16W
R376	1-216-833-11	METAL CHIP	10K	5%	1/16W (SC5/SC6)
R377	1-216-845-11	METAL CHIP	100K	5%	1/16W (SC5/SC6)
R378	1-216-817-11	METAL CHIP	470	5%	1/16W
R379	1-216-817-11	METAL CHIP	470	5%	1/16W
R380	1-216-815-11	METAL CHIP	330	5%	1/16W
R381	1-216-841-11	METAL CHIP	47K	5%	1/16W
R382	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R383	1-216-864-11	METAL CHIP	0	5%	1/16W
R384	1-216-833-11	METAL CHIP	10K	5%	1/16W
R385	1-216-809-11	METAL CHIP	100	5%	1/16W (SC8)
R401	1-216-810-11	METAL CHIP	120	5%	1/16W
R402	1-216-810-11	METAL CHIP	120	5%	1/16W
R403	1-216-841-11	METAL CHIP	47K	5%	1/16W
R404	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R409	1-218-867-11	METAL CHIP	6.8K	5%	1/10W (SC8)
R410	1-216-853-11	METAL CHIP	470K	5%	1/16W (SC8)
R411	1-216-803-11	METAL CHIP	33	5%	1/16W (SC8)
R412	1-216-845-11	METAL CHIP	100K	5%	1/16W (SC8)
R413	1-216-833-11	METAL CHIP	10K	5%	1/16W (SC8)
R480	1-216-833-11	METAL CHIP	10K	5%	1/16W
R490	1-216-833-11	METAL CHIP	10K	5%	1/16W
		< VIBRATOR >			
X301	1-795-286-21	VIBRATOR, CRYSTAL 49.152MHz			

DDCON **DRIVER** **DVD**

Ref. No.	Part No.	Description			Remarks
	A-4748-364-A	DDCON BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C820	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C821	1-126-176-11	ELECT	220uF	20%	10V
C822	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C823	1-126-967-11	ELECT	47uF	20.00%	50V
C826	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		< CONNECTOR >			
CN814	1-779-552-21	CONNECTOR,FFC(LIF(NON-ZIF))15P			
CN815	1-779-281-11	CONNECTOR,FFC(LIF(NON-ZIF))13P			
* CN819	1-568-941-11	PIN, CONNECTOR 3P			
		< DIODE >			
D806	8-719-404-50	DIODE MA111-TX			
D807	8-719-404-50	DIODE MA111-TX			
D808	8-719-404-50	DIODE MA111-TX			
D809	8-719-404-50	DIODE MA111-TX			
D810	8-719-069-56	DIODE UDZSTE-176.2B			
		< FERRITE BEAD >			
FB800	1-414-813-11	FERRITE	0uH		
FB801	1-414-813-11	FERRITE	0uH		
FB802	1-414-813-11	FERRITE	0uH		
		< COIL >			
L801	1-412-031-11	INDUCTOR CHIP	47uH		
		< TRANSISTOR >			
Q803	8-729-808-42	TRANSISTOR	2SD1624T-TD-E		
Q804	8-729-808-42	TRANSISTOR	2SD1624T-TD-E		
		< RESISTOR >			
R800	1-216-819-11	METAL CHIP	680	5%	1/16W
R801	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R802	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R809	1-216-821-11	METAL CHIP	1K	5%	1/16W
R826	1-216-795-11	METAL CHIP	6.8	5%	1/10W
R827	1-216-795-11	METAL CHIP	6.8	5%	1/10W
R828	1-216-795-11	METAL CHIP	6.8	5%	1/10W
R836	1-216-817-11	METAL CHIP	470	5%	1/16W
R838	1-216-805-11	METAL CHIP	47	5%	1/16W
R841	1-216-809-11	METAL CHIP	100	5%	1/16W
R842	1-216-809-11	METAL CHIP	100	5%	1/16W
R843	1-216-809-11	METAL CHIP	100	5%	1/16W
R845	1-216-819-11	METAL CHIP	680	5%	1/16W
R846	1-216-821-11	METAL CHIP	1K	5%	1/16W
R849	1-216-813-11	METAL CHIP	220	5%	1/16W
R850	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R855	1-216-809-11	METAL CHIP	100	5%	1/16W
R860	1-216-815-11	METAL CHIP	330	5%	1/16W
R864	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R874	1-216-839-11	METAL CHIP	33K	5%	1/16W
		< SWITCH >			
S801	1-786-220-11	SWITCH, KEY BOARD (NEXT ▶▶I)			
S802	1-786-220-11	SWITCH, KEY BOARD (I◀◀ PREV)			
S803	1-786-220-11	SWITCH, KEY BOARD (▷)			
S804	1-786-220-11	SWITCH, KEY BOARD (▮▮)			
S805	1-786-220-11	SWITCH, KEY BOARD (■)			
S806	1-786-220-11	SWITCH, KEY BOARD (-(VOLUME))			
S807	1-786-220-11	SWITCH, KEY BOARD (+(VOLUME))			
S808	1-786-220-11	SWITCH, KEY BOARD (BASS LEVEL)			
S809	1-786-220-11	SWITCH, KEY BOARD (⏏)			
		< TRANSFORMER >			
T801	1-437-416-11	TRANSFORMER, DC-DC CONVERTER			
	1-688-337-11	DRIVER BOARD			
		**********			
		< CAPACITOR >			
C705	1-162-306-11	CERAMIC	0.01uF	30.00%	16V
C711	1-126-964-11	ELECT	10uF	20.00%	50V
		< CONNECTOR >			
CN701	1-785-333-11	PIN, CONNECTOR (LIGHT ANGLE)7P			
		< DIODE >			
D701	8-719-921-40	DIODE MTZJ-T-77-4.7C			
		< IC >			
IC701	8-759-598-69	IC BA6956AN			
		< RESISTOR >			
R701	1-249-415-11	CARBON	680	5%	1/4W F
R702	1-247-807-31	CARBON	100	5%	1/4W
		< SWITCH >			
S701	1-762-951-13	SWITCH, PUSH			
S702	1-762-951-13	SWITCH, PUSH			
S703	1-762-951-13	SWITCH, PUSH			
	A-4748-350-A	DVD BOARD, COMPLETE (SC5:AEP,UK)			
		**********			
	A-4749-315-A	DVD BOARD, COMPLETE (SC8:MX)			
		**********			
	A-4749-579-A	DVD BOARD, COMPLETE (SC6:AEP,UK)			
		**********			
	A-4749-584-A	DVD BOARD, COMPLETE (SC8:AEP,UK)			
		**********			
	A-4749-709-A	DVD BOARD, COMPLETE (SC5:HK,SP)			
		**********			
	A-4749-716-A	DVD BOARD, COMPLETE (SC5:E32)			
		**********			
	A-4749-749-A	DVD BOARD, COMPLETE (SC5:RU)			
		**********			
	A-4749-756-A	DVD BOARD, COMPLETE (SC6:AUS)			
		**********			
	A-4749-758-A	DVD BOARD, COMPLETE (SC6:RU)			
		**********			
	A-4749-760-A	DVD BOARD, COMPLETE (SC6:SP)			
		**********			
	A-4749-762-A	DVD BOARD, COMPLETE (SC5:EA)			
		**********			

DVD

Ref. No.	Part No.	Description			Remarks
	A-4749-782-A	DVD BOARD, COMPLETE (SC8:RU)			
		**********			
	A-4749-784-A	DVD BOARD, COMPLETE (SC8:AUS)			
		**********			
	A-4749-786-A	DVD BOARD, COMPLETE (SC8:HK,SP)			
		**********			
	A-4749-792-A	DVD BOARD, COMPLETE (SC8:EA)			
		**********			
	A-4749-852-A	DVD BOARD, COMPLETE (SC5:TW)			
		**********			
	A-4750-056-A	DVD BOARD, COMPLETE (SC5:KR)			
		**********			
	A-4750-071-A	DVD BOARD, COMPLETE (SC6:EA)			
		**********			
	A-4750-073-A	DVD BOARD, COMPLETE (SC6:KR)			
		**********			
	A-4750-075-A	DVD BOARD, COMPLETE (SC8:KR)			
		**********			
	A-4750-119-A	DVD BOARD, COMPLETE (SC8:E32)			
		**********			
	A-4750-121-A	DVD BOARD, COMPLETE (SC8:TW)			
		**********			
		< CAPACITOR >			
C001	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C003	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C004	1-126-204-11	ELECT CHIP	47uF	20%	16V
C005	1-126-246-11	ELECT CHIP	220uF	20%	4V
C006	1-126-204-11	ELECT CHIP	47uF	20%	16V
C008	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C010	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C011	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C012	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C013	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C014	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C015	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C016	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C017	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C018	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C019	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C020	1-126-246-11	ELECT CHIP	220uF	20%	4V
C021	1-164-947-11	CERAMIC CHIP	0.01uF		50V
C022	1-126-209-11	ELECT CHIP	100uF	20.00%	4V
C201	1-126-246-11	ELECT CHIP	220uF	20%	4V
C203	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C204	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C217	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C219	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C225	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C226	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C228	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C229	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C230	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C231	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C232	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C233	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C234	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C235	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C236	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C237	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C238	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C239	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C240	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C241	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C242	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C243	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C244	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C245	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C246	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C247	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C248	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C249	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C250	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C251	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C252	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C253	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C254	1-117-370-11	CERAMIC CHIP	10uF		10V
C255	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C257	1-117-370-11	CERAMIC CHIP	10uF		10V
C258	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C259	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C260	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C261	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C262	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C263	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C264	1-117-370-11	CERAMIC CHIP	10uF		10V
C265	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C266	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C267	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C268	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C269	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C270	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C271	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C274	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C301	1-117-370-11	CERAMIC CHIP	10uF		10V
C302	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C303	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C304	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C307	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C308	1-127-772-81	CERAMIC CHIP	33000PF	10%	10V
C309	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C310	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C311	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C312	1-117-370-11	CERAMIC CHIP	10uF		10V
C313	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C314	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C315	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C316	1-124-779-00	ELECT CHIP	10uF	20%	16V
C317	1-164-852-11	CERAMIC CHIP	12PF	5.00%	50V
C318	1-164-852-11	CERAMIC CHIP	12PF	5.00%	50V
C319	1-164-862-11	CERAMIC CHIP	33PF	5.00%	50V
C320	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C355	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C356	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C401	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C402	1-117-370-11	CERAMIC CHIP	10uF		10V
C403	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C404	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C405	1-124-779-00	ELECT CHIP	10uF	20%	16V

DVD

Ref. No.	Part No.	Description			Remarks
C406	1-164-939-11	CERAMIC CHIP	0.0022uF	10.00%	50V
C407	1-117-370-11	CERAMIC CHIP	10uF		10V
C408	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C409	1-164-939-11	CERAMIC CHIP	0.0022uF	10.00%	50V
C410	1-124-779-00	ELECT CHIP	10uF	20%	16V
C411	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C412	1-164-939-11	CERAMIC CHIP	0.0022uF	10.00%	50V
C413	1-164-939-11	CERAMIC CHIP	0.0022uF	10.00%	50V
C414	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C415	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C416	1-117-370-11	CERAMIC CHIP	10uF		10V
C417	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C418	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C419	1-119-923-11	CERAMIC CHIP	0.047uF	10.00%	10V
C420	1-164-939-11	CERAMIC CHIP	0.0022uF	10.00%	50V
C421	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C422	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C423	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C424	1-107-819-11	CERAMIC CHIP	0.022uF	10.00%	16V
C425	1-164-939-11	CERAMIC CHIP	0.0022uF	10.00%	50V
C426	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C427	1-117-863-11	CERAMIC CHIP	0.47uF	10.00%	6.3V
C428	1-164-940-11	CERAMIC CHIP	0.0033uF	10.00%	16V
C432	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C433	1-164-938-11	CERAMIC CHIP	0.0015uF	10.00%	50V
C434	1-117-370-11	CERAMIC CHIP	10uF		10V
C435	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C436	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C503	1-127-772-81	CERAMIC CHIP	33000PF	10%	10V
C504	1-127-772-81	CERAMIC CHIP	33000PF	10%	10V
C506	1-164-934-11	CERAMIC CHIP	330PF	10.00%	50V
C508	1-164-937-11	CERAMIC CHIP	0.001uF	10.00%	50V
C509	1-164-934-11	CERAMIC CHIP	330PF	10.00%	50V
C510	1-164-937-11	CERAMIC CHIP	0.001uF	10.00%	50V
C512	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C514	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C519	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C521	1-164-938-11	CERAMIC CHIP	0.0015uF	10.00%	50V
C523	1-164-938-11	CERAMIC CHIP	0.0015uF	10.00%	50V
C525	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C526	1-126-395-11	ELECT	22uF	20%	16V
C527	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C528	1-126-395-11	ELECT	22uF	20%	16V
C529	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C552	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C600	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C601	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C602	1-117-681-11	ELECT CHIP	100uF	20.00%	16V
C603	1-164-858-11	CERAMIC CHIP	22PF	5.00%	50V
C604	1-164-868-11	CERAMIC CHIP	56PF	5.00%	50V
C605	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C606	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C607	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C608	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C609	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C610	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C611	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C612	1-117-370-11	CERAMIC CHIP	10uF		10V
C613	1-117-370-11	CERAMIC CHIP	10uF		10V
C614	1-124-779-00	ELECT CHIP	10uF	20%	16V
C615	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C616	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C617	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C618	1-124-779-00	ELECT CHIP	10uF	20%	16V
C619	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C620	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C621	1-164-935-11	CERAMIC CHIP	470PF	10.00%	50V
C622	1-124-779-00	ELECT CHIP	10uF	20%	16V
C623	1-164-850-11	CERAMIC CHIP	10PF	0.50PF	50V
C624	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C625	1-124-779-00	ELECT CHIP	10uF	20%	16V
C626	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C627	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C628	1-124-779-00	ELECT CHIP	10uF	20%	16V
C629	1-164-935-11	CERAMIC CHIP	470PF	10.00%	50V
C630	1-117-370-11	CERAMIC CHIP	10uF		10V
C631	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C632	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C633	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C634	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C635	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C636	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C637	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C638	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C639	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C640	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C641	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C642	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C643	1-126-246-11	ELECT CHIP	220uF	20%	4V
C644	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C645	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
C646	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C647	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C648	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C650	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C651	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C652	1-126-246-11	ELECT CHIP	220uF	20%	4V
C653	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C654	1-117-681-11	ELECT CHIP	100uF	20.00%	16V
C655	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C656	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C657	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C658	1-164-935-11	CERAMIC CHIP	470PF	10.00%	50V
C659	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
C660	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C661	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C662	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
C663	1-164-935-11	CERAMIC CHIP	470PF	10.00%	50V
C664	1-117-370-11	CERAMIC CHIP	10uF		10V
C665	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C666	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C667	1-117-370-11	CERAMIC CHIP	10uF		10V
C668	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C669	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C670	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V

DVD

Ref. No.	Part No.	Description			Remarks
C671	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C672	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C673	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C674	1-117-370-11	CERAMIC CHIP	10uF		10V
C675	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C678	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
C679	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C702	1-126-209-11	ELECT CHIP	100uF	20.00%	4V
C703	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C706	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C708	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C709	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C711	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C712	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C713	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C714	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C715	1-164-938-11	CERAMIC CHIP	0.0015uF	10.00%	50V
C716	1-117-863-11	CERAMIC CHIP	0.47uF	10.00%	6.3V
C717	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C718	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C720	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C721	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C722	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C723	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C724	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C725	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C726	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C727	1-117-370-11	CERAMIC CHIP	10uF		10V
C728	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C729	1-117-370-11	CERAMIC CHIP	10uF		10V
C730	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C740	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C741	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C742	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C743	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C744	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C745	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C752	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C760	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C761	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C762	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C763	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C764	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C765	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C766	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C767	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C768	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C769	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C770	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C771	1-119-923-11	CERAMIC CHIP	0.047uF	10.00%	10V
C772	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C773	1-117-863-11	CERAMIC CHIP	0.47uF	10.00%	6.3V
C774	1-164-941-11	CERAMIC CHIP	0.0047uF	10.00%	16V
C775	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C776	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C777	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C778	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C779	1-117-370-11	CERAMIC CHIP	10uF		10V
C780	1-117-370-11	CERAMIC CHIP	10uF		10V
C781	1-117-370-11	CERAMIC CHIP	10uF		10V
C791	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C793	1-126-246-11	ELECT CHIP	220uF	20%	4V
C795	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C796	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C797	1-126-246-11	ELECT CHIP	220uF	20%	4V
C802	1-117-370-11	CERAMIC CHIP	10uF		10V
C803	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C804	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C807	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C808	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C809	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C810	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C811	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C812	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C813	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C815	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C817	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C818	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C819	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C837	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C838	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C839	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C840	1-117-370-11	CERAMIC CHIP	10uF		10V
C841	1-117-370-11	CERAMIC CHIP	10uF		10V
C842	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C843	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C848	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C849	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C854	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C855	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C856	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C857	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C861	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C865	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C866	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C867	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C870	1-127-772-81	CERAMIC CHIP	33000PF	10%	10V
C871	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C900	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C901	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C903	1-126-602-11	ELECT CHIP	3.3uF	20%	50V
C905	1-164-934-11	CERAMIC CHIP	330PF	10.00%	50V
C906	1-164-934-11	CERAMIC CHIP	330PF	10.00%	50V
C907	1-164-937-11	CERAMIC CHIP	0.001uF	10.00%	50V
C909	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C911	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C912	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C913	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C914	1-164-943-11	CERAMIC CHIP	0.01uF	10.00%	16V
C916	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C917	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C918	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
C921	1-125-777-11	CERAMIC CHIP	0.1uF	10.00%	10V
C922	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C923	1-107-820-11	CERAMIC CHIP	0.1uF		16V

DVD

Ref. No.	Part No.	Description		Remarks
C925	1-107-820-11	CERAMIC CHIP	0.1uF	16V
C926	1-107-820-11	CERAMIC CHIP	0.1uF	16V
C927	1-107-820-11	CERAMIC CHIP	0.1uF	16V
C928	1-107-820-11	CERAMIC CHIP	0.1uF	16V
		< CONNECTOR >		
CN001	1-784-370-31	CONNECTOR, FFC/FPC 11P		
CN002	1-778-957-11	CONNECTOR, FFC/FPC 29P		
CN003	1-793-989-21	CONNECTOR, FFC/FPC 13P		
CN004	1-784-374-31	CONNECTOR, FFC/FPC 15P		
CN005	1-784-376-31	CONNECTOR, FFC/FPC 17P		
CN007	1-764-177-11	PIN, CONNECTOR (SMD)(1.5mm) 7P		
CN008	1-815-954-21	PIN, CONNECTOR (PC BOARD) 13P		
CN301	1-764-177-11	PIN, CONNECTOR (SMD)(1.5mm) 7P		
CN401	1-778-957-11	CONNECTOR, FFC/FPC 29P		
CN900	1-784-367-31	CONNECTOR, FFC/FPC 8P		
		< DIODE >		
D900	8-719-053-18	DIODE 1SR154-400TE-25		
D901	8-719-053-18	DIODE 1SR154-400TE-25		
D902	8-719-988-61	DIODE 1SS355TE-17		
D903	8-719-988-61	DIODE 1SS355TE-17		
D904	8-719-988-61	DIODE 1SS355TE-17		
D906	8-719-988-61	DIODE 1SS355TE-17		
D907	8-719-988-61	DIODE 1SS355TE-17		
		< FERRITE BEAD >		
FB001	1-469-324-21	FERRITE	0uH	
FB003	1-469-324-21	FERRITE	0uH	
FB004	1-469-324-21	FERRITE	0uH	
FB005	1-469-324-21	FERRITE	0uH	
FB006	1-469-324-21	FERRITE	0uH	
FB007	1-469-324-21	FERRITE	0uH	
FB008	1-469-324-21	FERRITE	0uH	
FB009	1-469-324-21	FERRITE	0uH	
FB010	1-469-324-21	FERRITE	0uH	
FB011	1-469-324-21	FERRITE	0uH	
FB012	1-469-324-21	FERRITE	0uH	
FB013	1-469-324-21	FERRITE	0uH	
FB014	1-469-324-21	FERRITE	0uH	
FB201	1-469-324-21	FERRITE	0uH	
FB202	1-469-324-21	FERRITE	0uH	
FB901	1-469-324-21	FERRITE	0uH	
		< FILTER >		
FL003	1-234-177-21	FERRITE	0uH	
FL004	1-234-177-21	FERRITE	0uH	
FL005	1-233-893-21	FILTER, CHIP EMI		
FL006	1-234-177-21	FERRITE	0uH	
FL202	1-234-177-21	FERRITE	0uH	
FL203	1-234-177-21	FERRITE	0uH	
FL204	1-234-177-21	FERRITE	0uH	
FL301	1-234-177-21	FERRITE	0uH	
FL303	1-234-177-21	FERRITE	0uH	
FL304	1-234-177-21	FERRITE	0uH	
FL401	1-234-177-21	FERRITE	0uH	
FL402	1-234-177-21	FERRITE	0uH	
FL603	1-234-177-21	FERRITE	0uH	

Ref. No.	Part No.	Description		Remarks
FL604	1-234-177-21	FERRITE	0uH	
FL605	1-234-177-21	FERRITE	0uH	
FL606	1-234-177-21	FERRITE	0uH	
FL607	1-234-177-21	FERRITE	0uH	
FL701	1-234-177-21	FERRITE	0uH	
FL702	1-234-177-21	FERRITE	0uH	
FL703	1-234-177-21	FERRITE	0uH	
FL704	1-234-177-21	FERRITE	0uH	
FL705	1-234-177-21	FERRITE	0uH	
FL706	1-234-177-21	FERRITE	0uH	
FL807	1-234-177-21	FERRITE	0uH	
FL810	1-234-177-21	FERRITE	0uH	
FL811	1-233-893-21	FILTER, CHIP EMI		
FL812	1-233-893-21	FILTER, CHIP EMI		
		< IC >		
IC001	8-759-583-47	IC uPC2933T-E2		
IC002	8-759-473-95	IC uPC2905T-E1		
IC003	8-759-473-95	IC uPC2905T-E1		
IC004	8-759-473-95	IC uPC2905T-E1		
IC005	8-759-583-47	IC uPC2933T-E2		
IC006	6-700-398-01	IC uPC2918T-E1		
IC202	6-704-069-01	IC HY57V283220T-6		
IC203	6-703-671-01	IC BR9040F-WE2		
IC205	6-803-225-01	IC MBM29DL324BE-90TN-FCV000		
IC206	6-703-540-01	IC ZIVA5X-C1F		
IC215	6-700-437-01	IC SN74ALVCH16841DGGR		
IC301	8-752-937-54	IC CXP973064-228R		
IC302	6-704-004-01	IC BR24L16F-WE2		
IC303	6-700-407-01	IC SM8707GV-G-E2		
IC401	8-752-408-73	IC CXD3068Q		
IC402	8-759-058-43	IC NJM3404AV (TE2)		
IC501	6-702-157-01	IC FAN8035L		
IC600	8-759-052-52	IC NJM78M05DL1A-TE1		
IC601	6-701-011-01	IC uPC2910T-E1		
IC602	8-759-560-56	IC PCM1800E/2K		
IC603	8-759-337-40	IC NJM2904V (TE2)		
IC604	6-704-037-01	IC IS61LV6416-10TLT		
IC605	8-759-835-63	IC NJM2391DL1-26 (TE1)		
IC606	8-759-825-15	IC LC89056W-E		
IC607	8-759-698-76	IC CXD9617R		
IC608	6-701-111-01	IC AK4382AVT-E2		
IC610	8-759-337-40	IC NJM2904V (TE2)		
IC612	6-703-372-01	IC CXD9742Q		
IC701	6-703-552-01	IC TMC57929PGF-RDP		
IC702	8-759-637-50	IC TA48M025F (TE16L)		
IC703	8-759-058-43	IC NJM3404AV (TE2)		
IC706	8-759-564-30	IC MSM51V18165F-60TSKR1		
IC801	8-752-416-77	IC CXD2753R		
IC802	8-759-058-64	IC TC7S32FU (TE85R)		
IC803	6-702-563-01	IC TC7W74FK-TE85L		
IC808	6-702-336-01	IC MSM56V16160F-8TK7R1		
IC812	8-759-549-15	IC SN74LV245APWR		
IC813	8-759-549-15	IC SN74LV245APWR		
IC814	8-759-680-48	IC TC7WH157FK (TE85R)		
IC900	8-759-238-47	IC TC74HCT7007AF (EL)		
IC901	6-803-130-01	IC uPD703033BYGF-M40-3BA-A		

DVD

Ref. No.	Part No.	Description			Remarks
IC903	8-759-326-78	IC PST9140NL			
IC904	8-759-326-78	IC PST9140NL			
IC905	8-759-234-20	IC TC7S08F-TE85L			
IC907	8-759-326-78	IC PST9140NL			
		< JUMPER RESISTOR >			
JW900	1-218-941-81	RES-CHIP	100	5%	1/16W
JW903	1-218-990-11	SHORT CHIP	0		
		< COIL >			
L301	1-414-754-11	INDUCTOR	10uH		
L600	1-414-754-11	INDUCTOR	10uH		
L602	1-414-754-11	INDUCTOR	10uH		
		< TRANSISTOR >			
Q201	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q202	8-729-049-31	TRANSISTOR	2SB710A-RTX		
Q301	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
Q302	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
Q900	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q901	8-729-230-63	TRANSISTOR	2SD1819A-QRS-TX		
Q902	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q903	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
Q906	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
Q907	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
Q908	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q909	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q910	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q911	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q912	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
Q913	8-729-026-49	TRANSISTOR	2SA1037AK-T146-QR		
Q914	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
		< RESISTOR >			
R001	1-218-990-11	SHORT CHIP	0		
R002	1-218-990-11	SHORT CHIP	0		
R003	1-218-990-11	SHORT CHIP	0		
R004	1-218-990-11	SHORT CHIP	0		
R005	1-218-990-11	SHORT CHIP	0		
R006	1-218-990-11	SHORT CHIP	0		
R007	1-218-990-11	SHORT CHIP	0		
R013	1-218-990-11	SHORT CHIP	0		
R014	1-218-990-11	SHORT CHIP	0		
R015	1-218-990-11	SHORT CHIP	0		
R016	1-218-990-11	SHORT CHIP	0		
R017	1-218-990-11	SHORT CHIP	0		
R018	1-218-990-11	SHORT CHIP	0		
R019	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R020	1-218-990-11	SHORT CHIP	0		
R021	1-218-990-11	SHORT CHIP	0		
R023	1-218-990-11	SHORT CHIP	0		
R025	1-218-990-11	SHORT CHIP	0		
R026	1-218-990-11	SHORT CHIP	0		
R027	1-218-990-11	SHORT CHIP	0		
R028	1-218-990-11	SHORT CHIP	0		
R029	1-218-990-11	SHORT CHIP	0		
R030	1-218-990-11	SHORT CHIP	0		
R031	1-218-990-11	SHORT CHIP	0		

Ref. No.	Part No.	Description			Remarks
R032	1-218-990-11	SHORT CHIP	0		
R033	1-218-990-11	SHORT CHIP	0		
R034	1-218-990-11	SHORT CHIP	0		
R035	1-218-990-11	SHORT CHIP	0		
R036	1-218-990-11	SHORT CHIP	0		
R037	1-218-990-11	SHORT CHIP	0		
R038	1-218-990-11	SHORT CHIP	0		
R039	1-218-990-11	SHORT CHIP	0		
R040	1-218-990-11	SHORT CHIP	0		
R041	1-218-990-11	SHORT CHIP	0		
R042	1-218-990-11	SHORT CHIP	0		
R043	1-218-990-11	SHORT CHIP	0		
R044	1-218-990-11	SHORT CHIP	0		
R045	1-218-990-11	SHORT CHIP	0		
R046	1-218-990-11	SHORT CHIP	0		
R047	1-218-990-11	SHORT CHIP	0		
R048	1-218-990-11	SHORT CHIP	0		
R049	1-218-990-11	SHORT CHIP	0		
R050	1-218-990-11	SHORT CHIP	0		
R052	1-218-990-11	SHORT CHIP	0		
R053	1-218-990-11	SHORT CHIP	0		
R054	1-218-990-11	SHORT CHIP	0		
R055	1-218-990-11	SHORT CHIP	0		
R056	1-218-990-11	SHORT CHIP	0		
R057	1-218-990-11	SHORT CHIP	0		
R058	1-218-990-11	SHORT CHIP	0		
R059	1-218-990-11	SHORT CHIP	0		
R060	1-218-990-11	SHORT CHIP	0		
R061	1-218-990-11	SHORT CHIP	0		
R062	1-218-990-11	SHORT CHIP	0		
R063	1-218-990-11	SHORT CHIP	0		
R065	1-218-990-11	SHORT CHIP	0		
R070	1-218-990-11	SHORT CHIP	0		
R072	1-218-965-11	RES-CHIP	10K	5%	1/16W
R073	1-218-965-11	RES-CHIP	10K	5%	1/16W
R075	1-218-990-11	SHORT CHIP	0		
R077	1-218-965-11	RES-CHIP	10K	5%	1/16W
R087	1-218-990-11	SHORT CHIP	0		
R088	1-218-990-11	SHORT CHIP	0		
R089	1-218-990-11	SHORT CHIP	0		
R090	1-218-990-11	SHORT CHIP	0		
R091	1-218-990-11	SHORT CHIP	0		
R202	1-218-990-11	SHORT CHIP	0		
R203	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R206	1-218-990-11	SHORT CHIP	0		
R207	1-218-285-11	METAL CHIP	75	5%	1/10W
R208	1-218-285-11	METAL CHIP	75	5%	1/10W
R209	1-218-285-11	METAL CHIP	75	5%	1/10W
R210	1-218-285-11	METAL CHIP	75	5%	1/10W
R211	1-218-990-11	SHORT CHIP	0		
R212	1-218-933-11	RES-CHIP	22	5%	1/16W
R213	1-218-990-11	SHORT CHIP	0		
R214	1-218-990-11	SHORT CHIP	0		
R215	1-218-935-11	RES-CHIP	33	5%	1/16W
R216	1-218-935-11	RES-CHIP	33	5%	1/16W
R217	1-218-935-11	RES-CHIP	33	5%	1/16W
R218	1-218-935-11	RES-CHIP	33	5%	1/16W
R219	1-218-935-11	RES-CHIP	33	5%	1/16W

DVD FL HP

Ref. No.	Part No.	Description			Remarks
R971	1-218-965-11	RES-CHIP	10K	5%	1/16W
R977	1-218-969-11	RES-CHIP	22K	5%	1/16W
R978	1-218-953-11	RES-CHIP	1K	5%	1/16W
R979	1-218-973-11	RES-CHIP	47K	5%	1/16W
R980	1-218-973-11	RES-CHIP	47K	5%	1/16W
R981	1-218-953-11	RES-CHIP	1K	5%	1/16W (EA)
R981	1-218-955-11	RES-CHIP	1.5K	5%	1/16W (AUS)
R981	1-218-961-11	RES-CHIP	4.7K	5%	1/16W (RU,E32,MX)
R981	1-218-965-11	RES-CHIP	4.7K	5%	1/16W (SP,HK,TW,KR)
R983	1-218-973-11	RES-CHIP	47K	5%	1/16W
R984	1-218-973-11	RES-CHIP	47K	5%	1/16W
R985	1-218-985-11	RES-CHIP	470K	5%	1/16W
R986	1-218-973-11	RES-CHIP	47K	5%	1/16W
R987	1-218-973-11	RES-CHIP	47K	5%	1/16W
R988	1-218-990-11	SHORT CHIP	0		
R989	1-218-990-11	SHORT CHIP	0		
R990	1-218-967-11	RES-CHIP	15K	5%	1/16W
R991	1-218-965-11	RES-CHIP	10K	5%	1/16W
R992	1-218-965-11	RES-CHIP	10K	5%	1/16W
R993	1-218-953-11	RES-CHIP	1K	5%	1/16W
R998	1-218-965-11	RES-CHIP	10K	5%	1/16W
R999	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
		< VIBRATOR >			
X301	1-781-945-21	VIBRATOR, CERAMIC 20MHz			
X302	1-795-630-11	VIBRATOR, CRYSTAL 27MHz			
X600	1-781-465-21	VIBRATOR, CRYSTAL 12.288MHz			
X601	1-795-363-21	VIBRATOR, CERAMIC 13.5MHz			
X901	1-781-945-21	VIBRATOR, CERAMIC 20MHz			
	A-4748-363-A	FL BOARD, COMPLETE			
	4-248-538-02	HOLDER (FL)			
		< CAPACITOR >			
C808	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C812	1-117-370-11	CERAMIC CHIP	10uF		10V
C813	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C814	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C815	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C816	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C817	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C818	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C819	1-162-974-11	CERAMIC CHIP	0.01uF		50V
		< CONNECTOR >			
CN816	1-779-550-21	CONNECTOR,FFC(LIF(NON-ZIF))13P			
		< FLUORESCENT INDICATOR TUBE >			
FL801	1-518-924-11	INDICATOR TUBE, FLUORESCENT			

Ref. No.	Part No.	Description			Remarks
		< IC >			
IC801	8-759-827-70	IC NJL64H400A-1 (■)			
IC802	6-700-112-01	IC MSM9202-05GS-KDR1			
		< RESISTOR >			
R803	1-216-821-11	METAL CHIP	1K	5%	1/16W
R805	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R837	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R839	1-216-833-11	METAL CHIP	10K	5%	1/16W
R840	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R844	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R873	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
		< SWITCH >			
S821	1-786-220-11	SWITCH, KEY BOARD (+(SOUND FIELD))			
S822	1-786-220-11	SWITCH, KEY BOARD (-(SOUND FIELD))			
S823	1-786-220-11	SWITCH, KEY BOARD (DISPLAY)			
S824	1-786-220-11	SWITCH, KEY BOARD (BAND)			
S825	1-786-220-11	SWITCH, KEY BOARD (FUNCTION)			
	A-4747-935-A	HP BOARD, COMPLETE (SC8:MX)			
	A-4748-360-A	HP BOARD, COMPLETE (SC5:EXCEPT TW/SC6/SC8:EXCEPT MX,TW)			
	A-4749-850-A	HP BOARD, COMPLETE (SC5:TW)			
	A-4750-123-A	HP BOARD, COMPLETE (SC8:TW)			
		< CAPACITOR >			
C902	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C903	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C904	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C991	1-165-176-11	CERAMIC CHIP	0.047uF	10.00%	16V
C992	1-165-176-11	CERAMIC CHIP	0.047uF	10.00%	16V
		< CONNECTOR >			
* CN900	1-506-987-11	PIN, CONNECTOR (PC BOARD) 5P			
		< FERRITE BEAD >			
FB803	1-469-144-21	FERRITE	0uH		
FB805	1-469-144-21	FERRITE	0uH		
		< JACK >			
J900	1-566-891-21	JACK (PHONES)			
		< COIL >			
L900	1-410-393-11	INDUCTOR CHIP	100uH		
L901	1-410-393-11	INDUCTOR CHIP	100uH		
L902	1-469-144-21	FERRITE	0uH		
L903	1-469-144-21	FERRITE	0uH		
		< TRANSISTOR >			
Q900	8-729-920-31	TRANSISTOR	DTC343TK-T146		
Q901	8-729-920-31	TRANSISTOR	DTC343TK-T146		

HP I/O

Ref. No.	Part No.	Description			Remarks
		< RESISTOR >			
R900	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R901	1-216-807-11	METAL CHIP	68	5%	1/16W
R902	1-216-807-11	METAL CHIP	68	5%	1/16W
R903	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R991	1-216-864-11	METAL CHIP	0	5%	1/16W
R992	1-216-864-11	METAL CHIP	0	5%	1/16W
	A-4748-355-A	I/O BOARD, COMPLETE (SC5:AEP,UK,RU/SC6:AEP,UK,RU/SC8:RU)			
	A-4749-237-A	I/O BOARD, COMPLETE (SC8:E32,MX)			
	A-4749-589-A	I/O BOARD, COMPLETE (SC8:AEP,UK)			
	A-4749-712-A	I/O BOARD, COMPLETE (SC5:E32,HK,SP/SC6:EA,SP/SC8:HK,SP)			
	A-4749-752-A	I/O BOARD, COMPLETE (SC5:KR,EA/SC6:KR,AUS/SC8:KR,AUS,EA)			
	A-4749-857-A	I/O BOARD, COMPLETE (SC5:TW/SC8:TW)			
		< CAPACITOR >			
C201	1-162-959-11	CERAMIC CHIP	330PF	5%	50V (AEP,UK,RU)
C202	1-216-864-11	METAL CHIP	0	5%	1/16W
C203	1-164-156-11	CERAMIC CHIP	0.1uF		25V (AEP,UK,RU)
C204	1-164-739-11	CERAMIC CHIP	560PF	5.00%	50V (AEP,UK,RU)
C205	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (AEP,UK,RU)
C206	1-164-380-11	CERAMIC CHIP	51PF	5.00%	50V (AEP,UK,RU)
C207	1-124-259-11	ELECT	4.7uF	20.00%	16V (AEP,UK,RU)
C208	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V (AEP,UK,RU)
C209	1-124-589-11	ELECT	47uF	20%	16V (AEP,UK,RU)
C210	1-128-551-11	ELECT	22uF	20.00%	25V
C211	1-128-551-11	ELECT	22uF	20.00%	25V
C213	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V (AEP,UK,RU)
C213	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (EXCEPT AEP,UK,RU)
C214	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V (AEP,UK,RU)
C214	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (EXCEPT AEP,UK,RU)
C215	1-115-156-11	CERAMIC CHIP	1uF		10V
C216	1-115-156-11	CERAMIC CHIP	1uF		10V
C217	1-126-934-11	ELECT	220uF	20.00%	16V
C218	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C220	1-128-551-11	ELECT	22uF	20.00%	25V
C221	1-128-551-11	ELECT	22uF	20.00%	25V
C222	1-128-551-11	ELECT	22uF	20.00%	25V
C223	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C224	1-128-551-11	ELECT	22uF	20.00%	25V

Ref. No.	Part No.	Description			Remarks
C227	1-128-551-11	ELECT	22uF	20.00%	25V
C228	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C230	1-126-964-11	ELECT	10uF	20.00%	50V
C232	1-126-964-11	ELECT	10uF	20.00%	50V
C233	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C234	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C235	1-128-551-11	ELECT	22uF	20.00%	25V
C236	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C237	1-128-551-11	ELECT	22uF	20.00%	25V
C238	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C239	1-128-551-11	ELECT	22uF	20.00%	25V
C240	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C241	1-128-551-11	ELECT	22uF	20.00%	25V
C242	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C243	1-126-964-11	ELECT	10uF	20.00%	50V
C245	1-124-261-00	ELECT	10uF	20%	50V
C248	1-124-234-00	ELECT	22uF	20%	16V
C249	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C251	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C258	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C259	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C260	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C261	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (EXCEPT AEP,UK,RU)
C263	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C265	1-124-261-00	ELECT	10uF	20%	50V
C267	1-124-584-00	ELECT	100uF	20%	10V
C269	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C272	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C274	1-124-261-00	ELECT	10uF	20%	50V
C275	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C276	1-126-964-11	ELECT	10uF	20.00%	50V
C277	1-128-551-11	ELECT	22uF	20.00%	25V
C278	1-124-261-00	ELECT	10uF	20%	50V
C279	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C280	1-126-960-11	ELECT	1uF	20.00%	50V
C281	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C282	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C283	1-126-960-11	ELECT	1uF	20.00%	50V
C284	1-126-933-11	ELECT	100uF	20.00%	16V
C285	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C286	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C287	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C288	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C289	1-126-964-11	ELECT	10uF	20.00%	50V
C290	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C291	1-126-964-11	ELECT	10uF	20.00%	50V
C292	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C294	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C295	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C297	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C299	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C301	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C325	1-128-551-11	ELECT	22uF	20.00%	25V (AEP,UK,RU)
C326	1-128-551-11	ELECT	22uF	20.00%	25V (AEP,UK,RU)
C330	1-162-927-11	CERAMIC CHIP	100PF	5%	50V

I/O

Ref. No.	Part No.	Description			Remarks
C340	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	(AEP,UK,RU)
C342	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	(AEP,UK,RU)
C472	1-126-933-11	ELECT	100uF	20.00% 16V	
C608	1-162-969-11	CERAMIC CHIP	0.0068uF	10% 25V	(EXCEPT AEP,UK,RU)
C608	1-164-245-11	CERAMIC CHIP	0.015uF	10.00% 25V	(AEP,UK,RU)
C609	1-162-969-11	CERAMIC CHIP	0.0068uF	10% 25V	(EXCEPT AEP,UK,RU)
C609	1-164-245-11	CERAMIC CHIP	0.015uF	10.00% 25V	(AEP,UK,RU)
		< CONNECTOR >			
CN201	1-816-955-11	CONNECTOR, FFC/FPC 11P			
CN202	1-779-566-21	CONNECTOR,FFC(LIF(NON-ZIF))29P			
CN203	1-779-552-21	CONNECTOR,FFC(LIF(NON-ZIF))15P			
• CN205	1-506-992-11	PIN, CONNECTOR (PC BOARD) 10P			(AEP,UK,RU)
		< DIODE >			
D103	8-719-988-61	DIODE 1SS355TE-17 (AEP,UK,RU)			
D201	8-719-069-54	DIODE UDZ-TE-17-5.1B (AEP,UK,RU)			
D202	8-719-404-50	DIODE MA111-TX			
D203	8-719-404-50	DIODE MA111-TX			
D206	8-719-404-50	DIODE MA111-TX			
		< IC >			
IC201	8-759-557-36	IC BU1924F-E2 (AEP,UK,RU)			
IC202	8-759-385-76	IC MC14052 8DR2			
IC204	6-600-013-01	IC TORX179L (OPTICAL DIGITAL IN)			
IC206	6-702-334-01	IC MM1510XNRE			
IC207	8-759-696-10	IC NJM2235V(TE2)			
IC208	6-702-335-01	IC MM1568AJBE			
IC209	8-759-284-49	IC NJM2285V-TE2			
		< JACK >			
J202	1-694-920-11	TERMINAL BOARD (5 TERMINAL+1P) (MONITOR OUT) (EXCEPT AEP,UK,RU)			
J205	1-816-605-11	JACK, PIN 6P (VIDEO 1)			
J206	1-764-592-11	JACK 3P (VIDEO 2) (AEP,UK,RU)			
J206	1-816-604-11	JACK, PIN 6P (VIDEO 2) (EXCEPT AEP,UK,RU)			
		< COIL >			
L202	1-469-525-91	INDUCTOR	10uH		
L205	1-469-525-91	INDUCTOR	10uH		
L206	1-469-525-91	INDUCTOR	10uH		
L207	1-469-525-91	INDUCTOR	10uH		
L209	1-469-525-91	INDUCTOR	10uH		
L210	1-216-864-11	METAL CHIP	0	5% 1/16W	
L211	1-216-864-11	METAL CHIP	0	5% 1/16W	
L212	1-216-864-11	METAL CHIP	0	5% 1/16W	
L213	1-216-864-11	METAL CHIP	0	5% 1/16W	
L214	1-216-864-11	METAL CHIP	0	5% 1/16W	
		< TRANSISTOR >			
Q137	8-729-900-53	TRANSISTOR	DTC114EKA-T146		(AEP,UK,RU)
Q138	8-729-027-23	TRANSISTOR	DTA114EKA-T146		(AEP,UK,RU)
Q139	8-729-900-53	TRANSISTOR	DTC114EKA-T146		(AEP,UK,RU)
Q140	8-729-027-23	TRANSISTOR	DTA114EKA-T146		(AEP,UK,RU)
Q141	8-729-120-28	TRANSISTOR	2SC2412K-T-146-QR		(AEP,UK,RU)
Q142	8-729-900-53	TRANSISTOR	DTC114EKA-T146		(AEP,UK,RU)
Q201	8-729-120-28	TRANSISTOR	2SC2412K-T-146-QR		(AEP,UK,RU)
Q205	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q206	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q207	8-729-920-31	TRANSISTOR	DTC343TK-T-146		
Q208	8-729-920-31	TRANSISTOR	DTC343TK-T-146		
Q210	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q214	1-801-806-11	TRANSISTOR	DTC144EKA-T146		
Q220	8-729-120-28	TRANSISTOR	2SC2412K-T-146-QR		
Q221	8-729-120-28	TRANSISTOR	2SC2412K-T-146-QR		
Q222	8-729-026-49	TRANSISTOR	2SA1037AK-T146-QR		
Q223	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
		< RESISTOR >			
R178	1-216-825-11	METAL CHIP	2.2K	5% 1/16W	(AEP,UK,RU)
R181	1-216-825-11	METAL CHIP	2.2K	5% 1/16W	(AEP,UK,RU)
R182	1-216-815-11	METAL CHIP	330	5% 1/16W	(AEP,UK,RU)
R183	1-216-815-11	METAL CHIP	330	5% 1/16W	(AEP,UK,RU)
R184	1-216-815-11	METAL CHIP	330	5% 1/16W	(AEP,UK,RU)
R185	1-216-815-11	METAL CHIP	330	5% 1/16W	(AEP,UK,RU)
R186	1-216-821-11	METAL CHIP	1K	5% 1/16W	(AEP,UK,RU)
R187	1-216-825-11	METAL CHIP	2.2K	5% 1/16W	(AEP,UK,RU)
R188	1-216-837-11	METAL CHIP	22K	5% 1/16W	(AEP,UK,RU)
R190	1-216-849-11	METAL CHIP	220K	5% 1/16W	(AEP,UK,RU)
R191	1-216-841-11	METAL CHIP	47K	5% 1/16W	(AEP,UK,RU)
R201	1-216-829-11	METAL CHIP	4.7K	5% 1/16W	(AEP,UK,RU)
R202	1-216-821-11	METAL CHIP	1K	5% 1/16W	(AEP,UK,RU)
R203	1-216-843-11	METAL CHIP	68K	5% 1/16W	(AEP,UK,RU)
R204	1-216-841-11	METAL CHIP	47K	5% 1/16W	(AEP,UK,RU)
R205	1-216-845-11	METAL CHIP	100K	5% 1/16W	(AEP,UK,RU)
R206	1-216-853-11	METAL CHIP	470K	5% 1/16W	(AEP,UK,RU)
R207	1-216-815-11	METAL CHIP	330	5% 1/16W	(AEP,UK,RU)
R208	1-216-813-11	METAL CHIP	220	5% 1/16W	
R209	1-216-813-11	METAL CHIP	220	5% 1/16W	

I/O LF

Ref. No.	Part No.	Description			Remarks
R210	1-216-813-11	METAL CHIP	220	5% 1/16W	
R211	1-216-813-11	METAL CHIP	220	5% 1/16W	
R212	1-216-813-11	METAL CHIP	220	5% 1/16W	
R213	1-216-841-11	METAL CHIP	47K	5% 1/16W	
R214	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	
R215	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	
R216	1-216-829-11	METAL CHIP	4.7K	5% 1/16W	
R217	1-216-839-11	METAL CHIP	33K	5% 1/16W	
R218	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R219	1-216-809-11	METAL CHIP	100	5% 1/16W	
R220	1-216-839-11	METAL CHIP	33K	5% 1/16W	(AEP,UK,RU)
R220	1-216-845-11	METAL CHIP	100K	5% 1/16W	(EXCEPT AEP,UK,RU)
R221	1-216-839-11	METAL CHIP	33K	5% 1/16W	(AEP,UK,RU)
R221	1-216-845-11	METAL CHIP	100K	5% 1/16W	(EXCEPT AEP,UK,RU)
R222	1-216-839-11	METAL CHIP	33K	5% 1/16W	
R223	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R224	1-216-809-11	METAL CHIP	100	5% 1/16W	
R225	1-216-839-11	METAL CHIP	33K	5% 1/16W	
R226	1-216-839-11	METAL CHIP	33K	5% 1/16W	
R227	1-216-821-11	METAL CHIP	1K	5% 1/16W	
R228	1-216-821-11	METAL CHIP	1K	5% 1/16W	
R229	1-216-845-11	METAL CHIP	100K	5% 1/16W	
R230	1-216-845-11	METAL CHIP	100K	5% 1/16W	
R231	1-218-285-11	METAL CHIP	75	5% 1/10W	
R232	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	
R233	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R235	1-216-841-11	METAL CHIP	47K	5% 1/16W	
R236	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R237	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	
R238	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R241	1-216-841-11	METAL CHIP	47K	5% 1/16W	
R242	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R243	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	
R244	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R245	1-216-864-11	METAL CHIP	0	5% 1/16W	
R246	1-216-841-11	METAL CHIP	47K	5% 1/16W	
R247	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R249	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	
R250	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R251	1-218-285-11	METAL CHIP	75	5% 1/10W	
R252	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R253	1-216-841-11	METAL CHIP	47K	5% 1/16W	
R254	1-218-285-11	METAL CHIP	75	5% 1/10W	
R255	1-216-809-11	METAL CHIP	100	5% 1/16W	
R256	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R259	1-218-285-11	METAL CHIP	75	5% 1/10W	
R265	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R266	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R267	1-218-285-11	METAL CHIP	75	5% 1/10W	
R268	1-218-285-11	METAL CHIP	75	5% 1/10W	
R269	1-218-285-11	METAL CHIP	75	5% 1/10W	
R270	1-218-285-11	METAL CHIP	75	5% 1/10W	
R271	1-216-864-11	METAL CHIP	0	5% 1/16W	
R273	1-218-285-11	METAL CHIP	75	5% 1/10W	
R278	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R286	1-216-833-11	METAL CHIP	10K	5% 1/16W	
R290	1-216-853-11	METAL CHIP	470K	5% 1/16W	
R291	1-216-853-11	METAL CHIP	470K	5% 1/16W	
R292	1-216-821-11	METAL CHIP	1K	5% 1/16W	
R293	1-216-821-11	METAL CHIP	1K	5% 1/16W	
R294	1-216-814-11	METAL CHIP	270	5% 1/16W	(AEP,UK,RU)
R294	1-216-815-11	METAL CHIP	330	5% 1/16W	(EXCEPT AEP,UK,RU)
R295	1-216-814-11	METAL CHIP	270	5% 1/16W	(AEP,UK,RU)
R295	1-216-815-11	METAL CHIP	330	5% 1/16W	(EXCEPT AEP,UK,RU)
R296	1-216-833-11	METAL CHIP	10K	5% 1/16W	(AEP,UK,RU)
R297	1-216-833-11	METAL CHIP	10K	5% 1/16W	(EXCEPT AEP,UK,RU)
R344	1-216-833-11	METAL CHIP	10K	5% 1/16W	(AEP,UK,RU)
R346	1-216-841-11	METAL CHIP	47K	5% 1/16W	(AEP,UK,RU)
R347	1-216-833-11	METAL CHIP	10K	5% 1/16W	(AEP,UK,RU)
R349	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	(AEP,UK,RU)
R350	1-218-867-11	METAL CHIP	6.8K	5% 1/10W	(AEP,UK,RU)
R352	1-216-833-11	METAL CHIP	10K	5% 1/16W	(AEP,UK,RU)
R353	1-216-841-11	METAL CHIP	47K	5% 1/16W	(AEP,UK,RU)
R360	1-216-833-11	METAL CHIP	10K	5% 1/16W	(AEP,UK,RU)
		< SWITCH >			
S801	1-771-692-11	SWITCH, SLIDE (SCAN SELECT)			(EXCEPT AEP,UK,RU)
		< VIBRATOR >			
X201	1-579-900-21	VIBRATOR, CRYSTAL 4.332MHz (AEP,UK,RU)			
	A-4747-662-A	LF BOARD, COMPLETE (SC5:AEP,UK,RU,SP,EA,HK,KR/SC6:RU,SP,EA,KR,AUS/SC8:RU,SP,EA,HK,KR,AUS)			
	A-4749-311-A	LF BOARD, COMPLETE (SC8:MX)			
	A-4749-715-A	LF BOARD, COMPLETE (SC5:E32/SC8:E32)			
	A-4749-846-A	LF BOARD, COMPLETE (SC5:TW/SC8:TW)			
		< CAPACITOR >			
⚠C903	1-104-705-11	MYLAR	0.1uF	20.00% 250V	
		< CONNECTOR >			
CN900	1-564-321-00	PIN, CONNECTOR(3.96mm PITCH)2P			
• CN901	1-564-321-21	PIN, CONNECTOR(3.96mm PITCH)2P			

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

LF POWER

Ref. No.	Part No.	Description			Remarks
		< LINE FILTER >			
⚠LF901	1-456-081-11	COIL, LINE FILTER (EXCEPT E32,MX,TW)			
⚠LF901	1-456-082-11	COIL, LINE FILTER (E32,MX,TW)			
		< RESISTOR >			
⚠R930	1-219-237-11	SOLID	3.3M	20%	1/2W (EXCEPT MX,TW)
		**********			
	A-4748-367-A	POWER BOARD, COMPLETE (SC5:AEP,UK,RU,SP,EA,HK,KR/SC6:RU,SP,EA,KR,AUS/SC8:RU,SP,EA,HK,KR,AUS)			
		**********			
	A-4749-310-A	POWER BOARD, COMPLETE (SC8:MX)			
		**********			
	A-4749-714-A	POWER BOARD, COMPLETE (SC5:E32/SC8:E32)			
		**********			
	A-4749-845-A	POWER BOARD, COMPLETE (SC5:TW/SC8:TW)			
		**********			
	7-685-646-79	SCREW+BVTP 3X8 TYPE2 N-S			
		< CAPACITOR >			
⚠C901	1-126-963-11	ELECT	4.7uF	20.00%	50V
⚠C904	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
⚠C905	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C906	1-126-967-11	ELECT	47uF	20.00%	50V
⚠C907	1-104-705-11	MYLAR	0.1uF	20.00%	250V
⚠C912	1-100-446-11	ELECT	220uF	20%	450V (EXCEPT E32,MX,TW)
⚠C912	1-100-192-11	ELECT	1000uF	20%	200V (MX,TW)
⚠C912	1-165-911-21	ELECT	390uF	20%	450V (E32)
⚠C913	1-117-452-11	FILM	3300PF	5.00%	630V (EXCEPT MX,TW)
⚠C913	1-136-203-11	FILM	10000PF	5.00%	630V (MX,TW)
⚠C914	1-126-947-11	ELECT	47uF	20.00%	35V
C915	1-164-156-11	CERAMIC CHIP	0.1uF		25V
⚠C916	1-104-332-11	CERAMIC	470PF	10.00%	2KV (EXCEPT MX,TW)
⚠C916	1-117-824-11	FILM	2200PF	3.00%	1.5KV (MX,TW)
C917	1-113-907-51	CERAMIC	0.0022uF	99%	250V (MX,TW)
C917	1-117-699-11	CERAMIC	0.001uF	99%	250V (EXCEPT MX,TW)
C918	1-165-319-11	CERAMIC CHIP	0.1uF		50V
⚠C919	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (EXCEPT MX,TW)
⚠C919	1-164-315-11	CERAMIC CHIP	470PF	2.00%	50V (MX,TW)
C920	1-117-454-11	FILM	4700PF	5.00%	630V (EXCEPT MX,TW)
C920	1-137-699-11	FILM	2700PF	5%	630V (MX,TW)
C921	1-107-898-11	ELECT	2200uF	20.00%	35V
C922	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C923	1-107-898-11	ELECT	2200uF	20.00%	35V
C924	1-107-898-11	ELECT	2200uF	20.00%	35V
C925	1-126-960-11	ELECT	1µF	20.00%	50V
C926	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C927	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C928	1-126-952-11	ELECT	1000uF	20.00%	35V
C929	1-104-665-11	ELECT	100uF	20.00%	10V
C930	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C931	1-165-723-21	ELECT	1000uF	20%	10V
C932	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C933	1-165-723-21	ELECT	1000uF	20%	10V
C934	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C935	1-128-950-21	ELECT	1000uF	20%	16V
C936	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C937	1-165-176-11	CERAMIC CHIP	0.047uF	10.00%	16V
⚠C938	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
⚠C939	1-113-907-51	CERAMIC	0.0022uF	99%	250V (E32,MX,TW)
⚠C939	1-117-699-11	CERAMIC	0.001uF	99%	250V (EXCEPT E32,MX,TW)
C941	1-126-947-11	ELECT	47uF	20.00%	16V
		< CONNECTOR >			
* CN902	1-564-321-21	PIN, CONNECTOR (3.96mm PITCH) 2P			
* CN903	1-506-996-11	PIN, CONNECTOR (PC BOARD) 14P			
CN904	1-565-731-11	PLUG, CONNECTOR (2.5mm) 5P			
		< DIODE >			
⚠D902	8-719-022-92	DIODE	RBV-604 (MX,TW)		
⚠D902	8-719-312-05	DIODE	RBV-606 (EXCEPT MX,TW)		
D904	8-719-109-97	DIODE	MTZJ-T-77-6.8B		
⚠D905	8-719-991-33	DIODE	1SS133T-77		
⚠D906	8-719-200-91	DIODE	11EQS10-TA1		
⚠D907	8-719-991-33	DIODE	1SS133T-77		
⚠D908	6-500-241-01	DIODE	SARS03		
D911	8-719-313-14	DIODE	FML-22S		
D912	8-719-109-93	DIODE	MTZJ-T-77-6.2B		
D913	8-719-404-50	DIODE	MA111-TX		
D914	8-719-312-08	DIODE	FMB-G16L		
D915	8-719-200-82	DIODE	11ES2-NTA1B		
D916	8-719-312-08	DIODE	FMB-G16L		
D917	8-719-200-82	DIODE	11ES2-NTA1B		
⚠D919	8-719-084-21	DIODE	10E6N-TA1B2		
⚠D920	8-719-084-21	DIODE	10E6N-TA1B2		
D921	8-719-975-85	DIODE	21DQ04N-TA2		
D922	8-719-083-60	DIODE	UDZSTE-174.7B		
⚠D931	8-719-110-53	DIODE	MTZJ-T-77-20B		
⚠D932	8-719-924-13	DIODE	MTZJ-T-77-22B		
⚠D933	8-719-200-91	DIODE	11EQS10-TA1		
D990	8-719-404-50	DIODE	MA111-TX		
		< GROUND TERMINAL BOARD >			
EB902	1-537-770-21	TERMINAL BOARD, GROUND			

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

POWER

Ref. No.	Part No.	Description			Remarks
		< FUSE HOLDER >			
FH901	1-533-313-11	FUSE HOLDER			
FH902	1-533-313-11	FUSE HOLDER			
		< IC >			
⚠IC901	6-703-098-01	IC	STR-F6267D (EXCEPT MX,TW)		
⚠IC901	6-702-338-01	IC	STR-F6238S (MX,TW)		
IC902	6-700-388-01	IC	SE-B2		
IC903	8-759-474-09	IC	SI-8050S-LF1101		
IC904	8-759-332-29	IC	M51945BL		
IC905	8-759-450-47	IC	BA05T		
IC906	6-700-813-01	IC	SI-8033JF		
IC908	6-701-021-01	IC	SI-8120JF		
IC909	8-759-510-71	IC	BA10358F-E2		
		< COIL >			
L901	1-424-860-11	INDUCTOR	10uH		
L902	1-456-183-11	INDUCTOR	150uH		
L903	1-456-213-11	INDUCTOR	0.1MH		
L904	1-456-419-11	INDUCTOR	120uH		
L905	1-414-398-11	INDUCTOR	10uH		
L906	1-414-398-11	INDUCTOR	10uH		
L907	1-414-398-11	INDUCTOR	10uH		
L908	1-414-398-11	INDUCTOR	10uH		
L909	1-414-398-11	INDUCTOR	10uH		
L910	1-414-398-11	INDUCTOR	10uH		
L911	1-414-398-11	INDUCTOR	10uH		
L912	1-414-398-11	INDUCTOR	10uH		
L913	1-414-398-11	INDUCTOR	10uH		
		< LINE FILTER >			
⚠LF902	1-456-081-11	COIL, LINE FILTER (EXCEPT E32,MX,TW)			
⚠LF902	1-456-082-11	COIL, LINE FILTER (E32,MX,TW)			
		< IC >			
⚠PC901	8-749-019-04	IC	TLP421		
⚠PC902	8-749-019-04	IC	TLP421		
		< TRANSISTOR >			
Q901	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
Q902	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
Q903	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
Q904	8-729-901-81	TRANSISTOR	2SC2412K-T-146-R		
⚠Q905	8-729-142-51	TRANSISTOR	2SD1616A-TP-LK		
Q906	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
Q907	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q912	8-729-901-81	TRANSISTOR	2SC2412K-T-146-R		
Q914	8-729-901-81	TRANSISTOR	2SC2412K-T-146-R		
Q990	8-729-030-19	TRANSISTOR	2SB1640(TP)		
Q991	8-729-901-81	TRANSISTOR	2SC2412K-T-146-R		
Q992	8-729-901-81	TRANSISTOR	2SC2412K-T-146-R		
		< RESISTOR >			
⚠R901	1-216-813-11	METAL CHIP	220	5%	1/16W
⚠R902	1-245-392-51	METAL OXIDE	0.15	5%	1W (MX,TW)
⚠R903	1-245-392-51	METAL OXIDE	0.15	5%	1W
⚠R904	1-216-341-11	METAL OXIDE	0.22	5%	1W
⚠R905	1-215-926-00	METAL OXIDE	33K	5%	3W (MX,TW)
⚠R905	1-215-928-11	METAL OXIDE	68K	5%	3W (EXCEPT MX,TW)
R906	1-216-833-11	METAL CHIP	10K	5%	1/16W
⚠R907	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
⚠R908	1-215-928-11	METAL OXIDE	68K	5%	3W (EXCEPT MX,TW)
⚠R909	1-215-902-11	METAL OXIDE	47K	5%	2W (EXCEPT MX,TW)
R910	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
⚠R911	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
⚠R912	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
⚠R913	1-249-385-11	CARBON	2.2	5%	1/6W F
R914	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R915	1-216-812-11	METAL CHIP	180	5%	1/16W
R916	1-249-417-11	CARBON	1K	5%	1/4W F (EXCEPT MX,TW)
R916	1-249-418-11	CARBON	1.2K	5%	1/4W F (MX,TW)
R917	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R918	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R919	1-216-833-11	METAL CHIP	10K	5%	1/16W
R920	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R921	1-216-837-11	METAL CHIP	22K	5%	1/16W
R922	1-218-866-11	METAL CHIP	6.2K	5%	1/10W
R923	1-216-833-11	METAL CHIP	10K	5%	1/16W
R924	1-216-818-11	METAL CHIP	560	5%	1/16W
R925	1-216-812-11	METAL CHIP	180	5%	1/16W
R926	1-216-845-11	METAL CHIP	100K	5%	1/16W
R927	1-216-821-11	METAL CHIP	1K	5%	1/16W
R928	1-216-837-11	METAL CHIP	22K	5%	1/16W
R929	1-216-805-11	METAL CHIP	47	5%	1/16W (EXCEPT MX,TW)
R931	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R933	1-216-837-11	METAL CHIP	22K	5%	1/16W
⚠R934	1-215-904-11	METAL OXIDE	100K	5%	2W (EXCEPT MX,TW)
R935	1-216-845-11	METAL CHIP	100K	5%	1/16W
⚠R936	1-216-847-11	METAL CHIP	150K	5%	1/16W
R937	1-216-821-11	METAL CHIP	1K	5%	1/16W
R938	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R940	1-216-835-11	METAL CHIP	15K	5%	1/16W
R941	1-216-833-11	METAL CHIP	10K	5%	1/16W
R942	1-216-833-11	METAL CHIP	10K	5%	1/16W
R943	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R944	1-215-902-11	METAL OXIDE	47K	5%	2W (MX,TW)
R944	1-215-904-11	METAL OXIDE	100K	5%	2W (EXCEPT MX,TW)
R945	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R946	1-216-812-11	METAL CHIP	180	5%	1/16W
R947	1-216-815-11	METAL CHIP	330	5%	1/16W
R948	1-216-833-11	METAL CHIP	10K	5%	1/16W
R949	1-216-833-11	METAL CHIP	10K	5%	1/16W
R950	1-216-825-11	METAL CHIP	2.2K	5%	1/16W

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

POWER | POWER LED | RF

Ref. No.	Part No.	Description			Remarks
		< TRANSFORMER >			
⚠T901	1-437-865-11	TRANSFORMER, POWER (MX,TW)			
⚠T901	1-437-866-11	TRANSFORMER, POWER (EXCEPT MX,TW)			
		< THERMISTOR >			
⚠TH901	1-803-916-11	THERMISTOR, NTC			
		**********			
	1-689-358-11	POWER LED BOARD			
		**********			
		< DIODE >			
D812	8-719-074-42	DIODE SLR325VR-T31 (I/⏻)			
		< RESISTOR >			
R804	1-216-817-11	METAL CHIP	470	5%	1/16W
		< SWITCH >			
S826	1-786-220-11	SWITCH, KEY BOARD (I/⏻)			
		**********			
	A-4728-690-A	RF BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C001	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C002	1-124-779-00	ELECT CHIP	10uF	20%	16V
C003	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C004	1-124-779-00	ELECT CHIP	10uF	20%	16V
C005	1-128-993-21	ELECT CHIP	22uF	20%	10V
C006	1-128-993-21	ELECT CHIP	22uF	20%	10V
C008	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C009	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C010	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C011	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C012	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C013	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C014	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C015	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C016	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C017	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C018	1-164-172-11	CERAMIC CHIP	0.0056uF	10%	25V
C019	1-164-172-11	CERAMIC CHIP	0.0056uF	10%	25V
C020	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C021	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C022	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C023	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C024	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C025	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C026	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C027	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C029	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C030	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C031	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C032	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C033	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C035	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C036	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C037	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C038	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C039	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C041	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C042	1-164-218-11	CERAMIC CHIP	180PF	0.25PF	50V
C049	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN001	1-815-031-11	CONNECTOR, FFC/FPC (ZIF) 24P			
CN002	1-784-836-21	CONNECTOR, FFC (LIF (NON-ZIF)) 29P			
CN003	1-784-861-21	CONNECTOR, FFC (LIF (NON-ZIF)) 9P			
		< DIODE >			
D001	8-719-988-61	DIODE 1SS355TE-17			
D002	8-719-988-61	DIODE 1SS355TE-17			
		< IC >			
IC001	8-752-417-53	IC CXD1881AR			
		< COIL >			
L001	1-412-031-11	INDUCTOR CHIP	47uH		
L002	1-412-031-11	INDUCTOR CHIP	47uH		
		< TRANSISTOR >			
Q001	8-729-903-46	TRANSISTOR	2SB1132-T100-QR		
Q002	8-729-903-46	TRANSISTOR	2SB1132-T100-QR		
		< RESISTOR >			
R001	1-218-668-11	METAL CHIP	100	0.5%	1/16W
R003	1-216-803-11	METAL CHIP	33	5%	1/10W
R004	1-216-803-11	METAL CHIP	33	5%	1/10W
R005	1-216-841-11	METAL CHIP	47K	5%	1/10W
R006	1-216-817-11	METAL CHIP	470	5%	1/10W
R007	1-216-803-11	METAL CHIP	33	5%	1/10W
R008	1-216-803-11	METAL CHIP	33	5%	1/10W
R009	1-216-841-11	METAL CHIP	47K	5%	1/10W
R010	1-216-817-11	METAL CHIP	470	5%	1/10W
R011	1-216-864-11	METAL CHIP	0	5%	1/10W
R012	1-216-864-11	METAL CHIP	0	5%	1/10W
R013	1-216-864-11	METAL CHIP	0	5%	1/10W
R014	1-216-864-11	METAL CHIP	0	5%	1/10W
R015	1-216-864-11	METAL CHIP	0	5%	1/10W
R016	1-216-864-11	METAL CHIP	0	5%	1/10W
R017	1-216-864-11	METAL CHIP	0	5%	1/10W
R018	1-216-864-11	METAL CHIP	0	5%	1/10W
R019	1-216-864-11	METAL CHIP	0	5%	1/10W
R020	1-216-864-11	METAL CHIP	0	5%	1/10W
R021	1-216-864-11	METAL CHIP	0	5%	1/10W

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

RF | SCART

Ref. No.	Part No.	Description			Remarks
R022	1-216-813-11	METAL CHIP	220	5%	1/10W
R023	1-216-820-11	METAL CHIP	820	5%	1/10W
R024	1-216-864-11	METAL CHIP	0	5%	1/10W
R025	1-216-809-11	METAL CHIP	100	5%	1/10W
R026	1-218-718-11	METAL CHIP	12K	0.5%	1/16W
R027	1-216-864-11	METAL CHIP	0	5%	1/10W
R028	1-216-864-11	METAL CHIP	0	5%	1/10W
R029	1-216-864-11	METAL CHIP	0	5%	1/10W
R032	1-216-809-11	METAL CHIP	100	5%	1/10W
R033	1-216-864-11	METAL CHIP	0	5%	1/10W
R034	1-219-570-11	RES-CHIP	10M	5%	1/10W
R035	1-216-864-11	METAL CHIP	0	5%	1/10W
R041	1-216-821-11	METAL CHIP	1K	5%	1/10W
		**********			
	1-689-360-11	SCART BOARD (AEP,UK,RU)			
		**********			
		< CAPACITOR >			
C130	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP,UK,RU)
C131	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP,UK,RU)
		< FERRITE BEAD >			
FB101	1-469-324-21	FERRITE	0uH (AEP,UK,RU)		
FB102	1-469-324-21	FERRITE	0uH (AEP,UK,RU)		
FB103	1-469-324-21	FERRITE	0uH (AEP,UK,RU)		
FB104	1-469-324-21	FERRITE	0uH (AEP,UK,RU)		
		< JACK >			
J101	1-815-911-11	CONNECTOR, SQUARE TYPE 21P (EURO AV) (AEP,UK,RU)			
		**********			

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	
		**********	
67	1-827-619-11	FLEXIBLE FLAT CABLE (13 CORE)	
101	1-468-790-11	POWER SWITCHING (including Ref.No.201)	(SC6:AEP,UK/SC8:AEP,UK)
152	1-500-657-11	CORE, FERRIET	
⚠154	1-696-169-51	CORD, POWER (EXCEPT AUS,KR,MX,TW)	
⚠154	1-696-848-51	CORD, POWER (AUS)	
⚠154	1-769-079-22	CORD, POWER (KR)	
⚠154	1-775-789-91	CORD, POWER (MX,TW)	
156	1-763-861-12	FAN, DC	
157	1-469-854-11	CORE, FERRITE	
159	1-827-625-11	FLEXIBLE FLAT CABLE (11 CORE)	
160	1-827-620-11	FLEXIBLE FLAT CABLE (15 CORE)	
161	1-827-623-11	FLEXIBLE FLAT CABLE (15 CORE)	
162	1-827-624-11	FLEXIBLE FLAT CABLE (11 CORE)	
163	1-827-622-11	FLEXIBLE FLAT CABLE (15 CORE)	
164	1-827-621-11	FLEXIBLE FLAT CABLE (29 CORE)	
201	1-468-790-11	POWER SWITCHING (including Ref.No.101)	(SC6:AEP,UK/SC8:AEP,UK)
205	1-827-626-11	FLEXIBLE FLAT CABLE (29 CORE)	
602	1-685-250-11	PWB, FLEXIBLE	
⚠605	1-477-263-11	OPTICAL PICK-UP (TDP022W)	
⚠P901	1-532-465-31	FUSE (T3.15AL/250V)	(SC5:TW/SC6:AEP,UK/SC8:AEP,UK,MX,TW)
⚠F901	1-533-453-12	FUSE, GLASS TUBE (DIA. 5) (T5AL/125V)	(SC5:TW/SC8:MX,TW)
⚠F902	1-532-465-31	FUSE (T3.15AL/250V)	(SC6:AEP,UK/SC8:AEP,UK)
FL801	1-518-924-11	INDICATOR TUBE, FLUORESCENT	
M701	X-4955-496-1	MOTOR (PULLEY) ASSY (LOADING)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

MEMO

HCD-SC5/SC6/SC8

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2003.09	New

DAV-SC5/SC6/SC8

SERVICE MANUAL

Ver 1.0 2003.09

AEP Model
UK Model
E Model
DAV-SC5/SC6/SC8

Australian model
DAV-SC6/SC8

- DAV-SC5/SC6/SC8 are composed of following models. As service manuals are issued for each component model, please refer to them.

COMPONENT MODEL NAME

		DAV-SC5	DAV-SC6	DAV-SC8
SACD/DVD RECEIVER		HCD-SC5	HCD-SC6	HCD-SC8
PACKAGE SPEAKER		SS-WT5	SS-SC6	SA-SC8
	FRONT SPEAKER	SS-TS5	SS-TS6 (EXCEPT AEP, UK) SS-TS8 (AEP, UK)	SS-TS8
	SURROUND SPEAKER	SS-TS5	SS-TS7 (EXCEPT AEP, UK) SS-TS5 (AEP, UK)	SS-TS8
	CENTER SPEAKER	SS-CT5	SS-CT6 (EXCEPT AEP, UK) SS-CT8 (AEP, UK)	SS-CT8
	SUB WOOFER	SS-WS5	SS-WS6	SA-WS8

- Abbreviation
  AUS : Australian model.
  E32 : 110-240V AC area in E model.
  EA : Saudi Arabia model.
  MX : Mexican model.
  KR : Korea model.
  RU : Russian model.
  SP : Singapore model.
  TW : Taiwan model.

PARTS LIST

Part No.	Description	Remark
	ACCESSORIES **********	
1-477-370-13	COMMANDER, STANDARD (RM-SS880)	(SC5:RU/SC8:MX)
1-478-142-11	COMMANDER, STANDARD (RM-SP800)	(SC5:EXCEPT RU/SC6/SC8:EXCEPT MX)
⚠1-569-008-12	ADAPTOR, CONVERSION 2P (E32)	
1-754-059-12	ANTENNA, LOOP (AM)(AEP, UK)	
1-754-060-13	ANTENNA (FM)	
1-754-149-11	LOOP ANT (AM)(EXCEPT AEP, UK)	
1-765-388-13	CORD, CONNECTION	(PIN-PIN)(SUB WOOFER CORD)(SC8)
1-769-108-11	CORD, CONNECTION (VIDEO CORD)	
⚠1-770-783-21	CONNECTOR, CONVERSION (UK, RU)	
1-827-243-11	CORD (WITH CONNECTOR)(SC5/SC6)	
1-827-244-11	CORD (WITH CONNECTOR)(SC8)	
4-248-406-11	MANUAL, INSTRUCTION (ENGLISH)(SC5:AEP, UK)	
4-248-406-21	MANUAL, INSTRUCTION	(FRENCH, GERMAN, SPANISH)(SC5:AEP)
4-248-406-31	MANUAL, INSTRUCTION	(DUTCH, SWEDISH, ITALIAN, POLISH)(SC5:AEP)
4-248-406-41	MANUAL, INSTRUCTION	(DANISH, FINNISH, PORTUGUESE)(SC5:AEP)
4-248-406-51	MANUAL, INSTRUCTION (GREEK)(SC5:AEP)	
4-248-408-11	MANUAL, INSTRUCTION	(ENGLISH)(SC5:E32, EA, HK, SP, TW, KR)
4-248-408-21	MANUAL, INSTRUCTION (FRENCH)(SC5:E32, EA)	
4-248-408-31	MANUAL, INSTRUCTION (SPANISH)(SC5:E32)	
4-248-408-41	MANUAL, INSTRUCTION (ARABIC)(SC5:EA)	
4-248-408-51	MANUAL, INSTRUCTION	(TRADITIONAL CHINESE)(SC5:E32, HK, SP, TW)
4-248-413-11	MANUAL, INSTRUCTION (ENGLISH)(SC6:AUS, SP)	
4-248-413-21	MANUAL, INSTRUCTION	(TRADITIONAL CHINESE)(SC6:SP)
4-248-413-31	MANUAL, INSTRUCTION (KOREAN)(SC6:KR)	
4-248-413-41	MANUAL, INSTRUCTION (ENGLISH, RUSSIAN)(SC6:RU)	
4-248-415-11	MANUAL, INSTRUCTION (ENGLISH)(SC6:AEP, UK)	
4-248-415-21	MANUAL, INSTRUCTION	(FRENCH, GERMAN, SPANISH)(SC6:AEP)
4-248-415-31	MANUAL, INSTRUCTION	(DUTCH, SWEDISH, ITALIAN, POLISH)(SC6:AEP)
4-248-415-41	MANUAL, INSTRUCTION	(DANISH, FINNISH, PORTUGUESE)(SC6:AEP)
4-248-415-51	MANUAL, INSTRUCTION (GREEK)(SC6:AEP)	
4-248-417-11	MANUAL, INSTRUCTION	(ENGLISH)(SC8:TW, AUS, E32, EA, SP)
4-248-417-21	MANUAL, INSTRUCTION (FRENCH)(SC8:E32, EA)	
4-248-417-31	MANUAL, INSTRUCTION (SPANISH)(SC8:E32)	
4-248-417-41	MANUAL, INSTRUCTION (ARABIC)(SC8:EA)	
4-248-417-51	MANUAL, INSTRUCTION	(TRADITIONAL CHINESE)(SC8:E32, SP, TW)
4-248-417-61	MANUAL, INSTRUCTION (KOREAN)(SC8:KR)	
4-248-417-71	MANUAL, INSTRUCTION (ENGLISH, RUSSIAN)(SC8:RU)	
4-248-418-11	MANUAL, INSTRUCTION (ENGLISH)(SC8:AEP, UK)	
4-248-418-21	MANUAL, INSTRUCTION	(FRENCH, GERMAN, SPANISH)(SC8:AEP)
4-248-418-31	MANUAL, INSTRUCTION	(DUTCH, ITALIAN, SWEDISH, POLISH)(SC8:AEP)
4-248-418-41	MANUAL, INSTRUCTION	(DANISH, FINNISH, PORTUGUESE)(SC8:AEP)
4-248-418-51	MANUAL, INSTRUCTION (GREEK)(SC8:AEP)	
3-084-601-01	COVER,BATTERY (FOR RM-SP800/SS880)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

COMPACT AV SYSTEM

9-961-136-01
2003I16-1
© 2003.09
Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation

SONY®